



## CIRCO KNURLED COLLECTION CABINET PULL

- 4" 366704
- 6" 366706
- 8" 366708
- 12" 366712

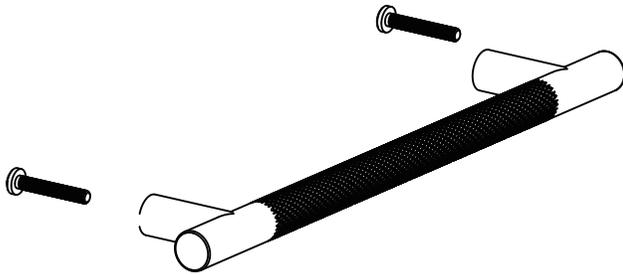

### Tools required for installation



Level



Drill



Pencil



Screwdriver



Hammer

**Step 1**  
Measure the Center to Center distance of pull with tape.

**Step 2**  
Mark the holes position with pencil, make sure the holes are level.

**Step 3**  
Drill holes on the board.

**Step 4**  
Fix the screws onto pull and tighten it.