



## FLORENCE COLLECTION CURVED SHOWER ROD

5'/60" KSRC-5BR-322

6'/72" KSRC-6BR-322

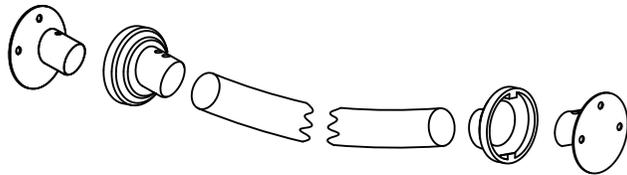

### Tools required for installation



Level



Drill




Pencil



Screwdriver




Hammer

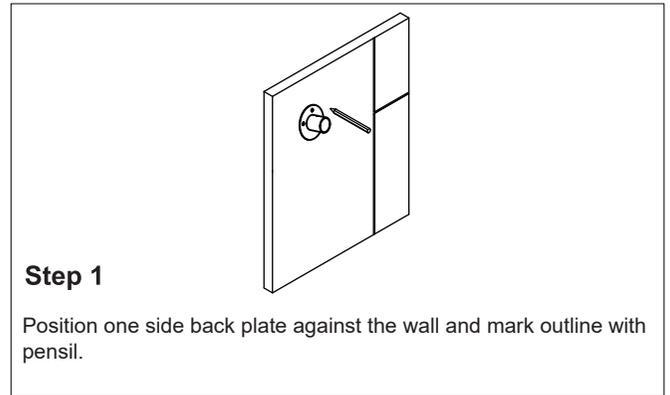


### Step 1

Position one side back plate against the wall and mark outline with pencil.

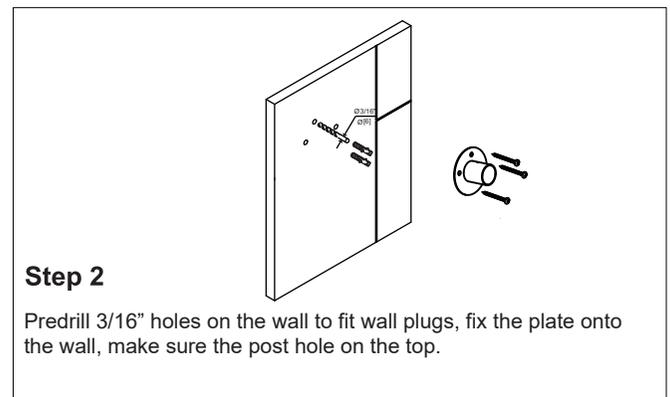


### Step 2

Pre-drill 3/16" holes on the wall to fit wall plugs, fix the plate onto the wall, make sure the post hole on the top.

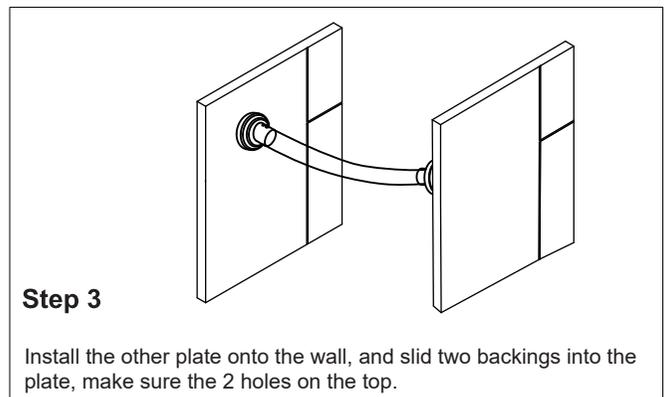

### Step 3

Install the other plate onto the wall, and slid two backings into the plate, make sure the 2 holes on the top.

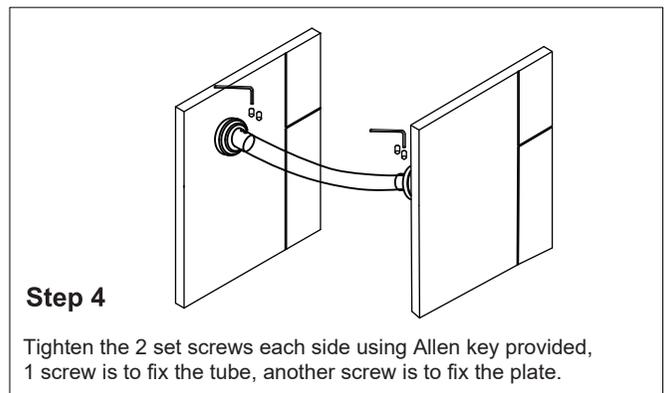

### Step 4

Tighten the 2 set screws each side using Allen key provided, 1 screw is to fix the tube, another screw is to fix the plate.