


### INSTALLATION INSTRUCTIONS

---

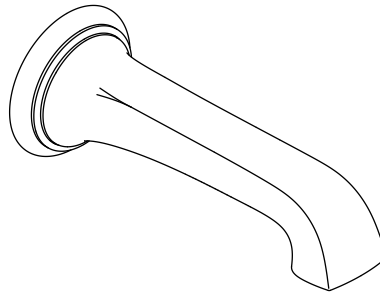


**P24624-00**

## INSTALLATION INSTRUCTIONS

### THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to KALLISTA quality products. Please take a moment to review this manual before you install your KALLISTA product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

### TOOLS

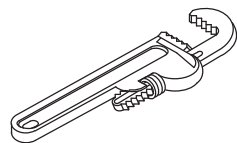


Pipe Wrench



Thread Sealant



Strap Wrench

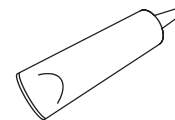


Silicone Sealant

### IMPORTANT INFORMATION

- Please read all instructions before you begin.
- Observe all local plumbing and building codes.
- Shut off the main water supply.
- The finished wall or bath/shower unit must be installed prior to installing this trim.
- KALLISTA reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

### 1. INSTALL THE SPOUT

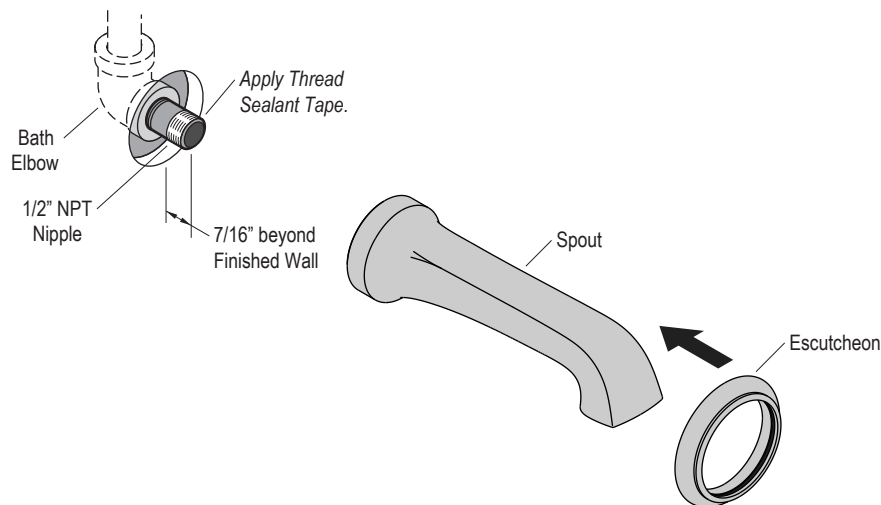

- Remove the temporary nipple from the bath elbow, if installed.
- Apply thread sealant and install a 1/2" NPT nipple so it extends 7/16" beyond the finished wall.
- Apply thread sealant to the nipple and thread the spout onto the nipple.
- Carefully tighten the spout with a clean strap wrench, finishing with the spout pointing down.

**INSTALLATION INSTRUCTIONS****INSTALL THE SPOUT (CONT'D)**

- Turn on the main water supply, open the valve(s) that supply the spout, and check for leaks. Repair as required.
- Ensure that the O-ring is installed in the groove in the escutcheon. Slide the escutcheon over the spout and press it against the wall.
- If desired, apply a bead of clear sealant around the perimeter of the escutcheon.