
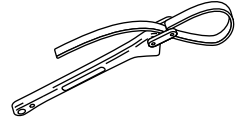


KALLISTA®

Installation Guide




Record your model number below for future reference:


Important Information

Caution: Risk of product damage.
To avoid plugging the showerhead spray outlets, use thread sealant tape on the shower arm threads. Do not use thread sealant compound


1 Remove the temporary nipple from the shower ell.

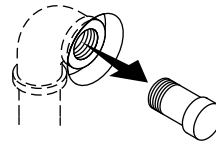


2 Slide the escutcheon onto the end of the shower arm that will be closest to the wall/ceiling.

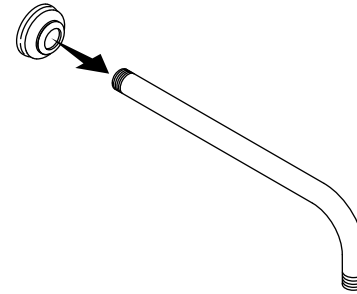


3 Apply thread sealant tape to the shower arm threads closest to the wall/ceiling.

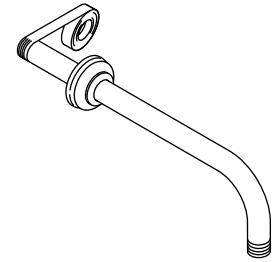


4 Thread the showerarm into the shower ell, and carefully tighten with a clean strap wrench.

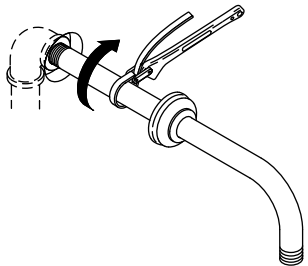


5 With the showerhead off, turn on the water to flush out the system.

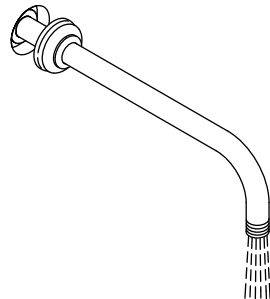

6 Install the showerhead according to the showerhead manufacturer's instructions.

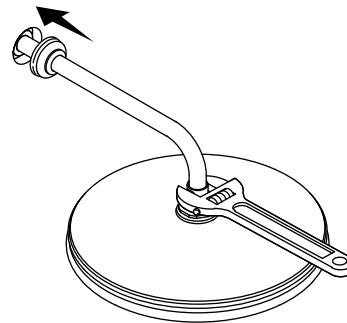

7 Check connections for leaks.

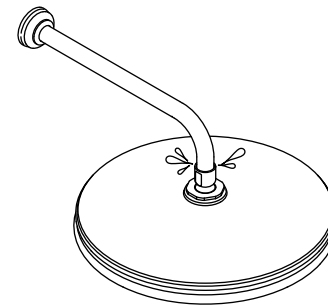

Questions? Problems? For additional assistance, please contact
KALLISTA's Customer Service Department at 1-888-4-KALLISTA
(1-888-452-5547) or kallista.com.