



# KALLISTA®


## Installation Guide

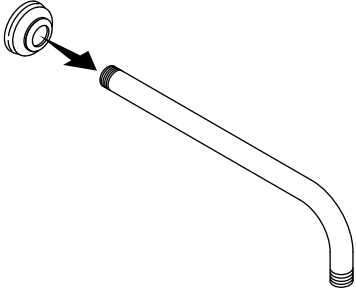
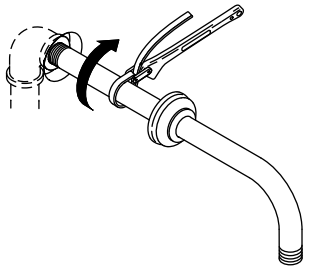
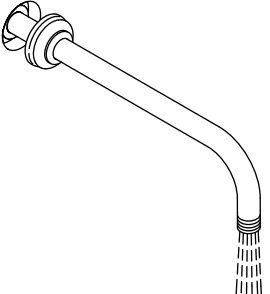
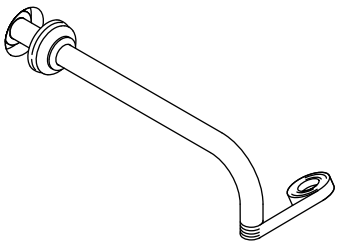
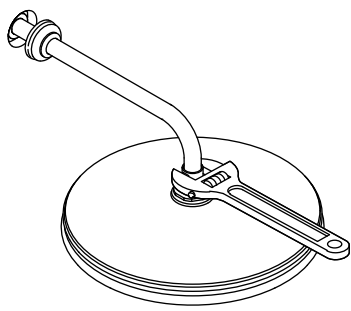
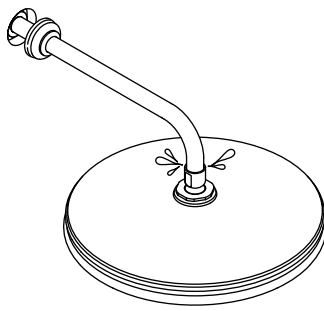
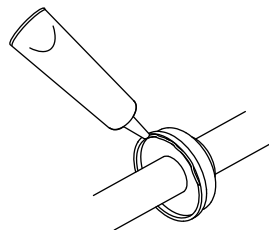
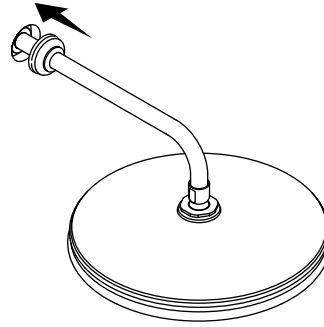
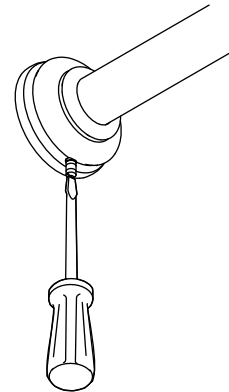
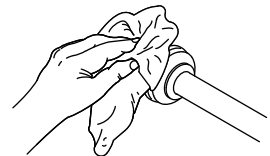


Sealant Tape



Silicone Sealant



<p><b>Record your model number below for future reference:</b></p>	<p><b>Important Information</b>  <b>Caution: Risk of product damage.</b> To avoid plugging the showerhead spray outlets, use thread sealant tape on the shower arm threads. Do not use thread sealant compound</p>	<p><b>1</b> Slide the escutcheon onto the end of the shower arm that will be closest to the wall/ceiling.</p> 	<p><b>2</b> Install the shower arm onto the shower ell according to the manufacturer's instructions.</p> 	<p><b>3</b> With the showerhead off, turn on the water to flush out the system.</p> 	<p><b>4</b> Apply thread sealant tape to the threads of the exposed end of the shower arm.</p> 
<p><b>5</b> Thread the showerhead onto the showerarm. Use a clean adjustable wrench to tighten the showerhead onto the showerarm.</p> 	<p><b>6</b> Check for proper operation, and check all connections for leaks.</p> 	<p><b>7</b> If desired, apply a bead of clear silicone sealant to the back perimeter of the escutcheon.</p> 	<p><b>8</b> Being careful not to scratch the showerarm finish, slide the escutcheon up the showerarm until it is flush with the finished wall/ceiling.</p> 	<p><b>9</b> Using a small bladed screwdriver, tighten the setscrew to secure the escutcheon to the shower arm.</p> 	<p><b>10</b> Remove any excess sealant.</p> 

Questions? Problems? For additional assistance, please contact KALLISTA's Customer Service Department at 1-888-4-KALLISTA (1-888-452-5547) or [kallista.com](http://kallista.com).