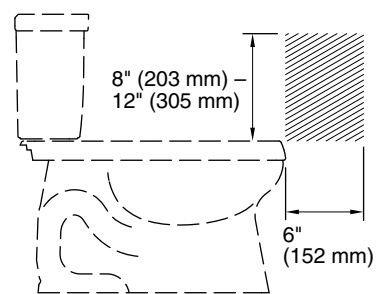
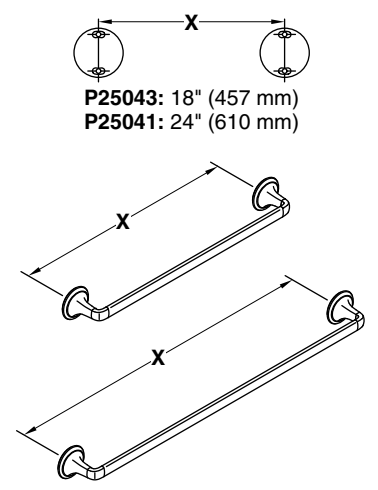
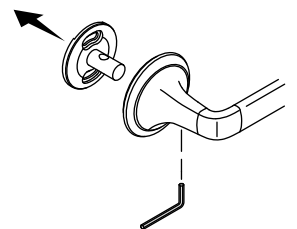
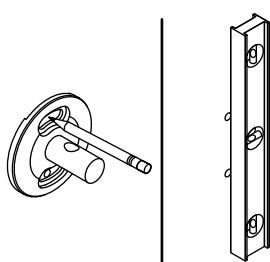
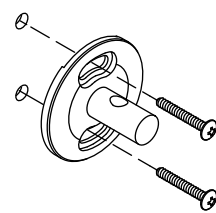
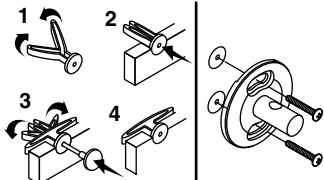
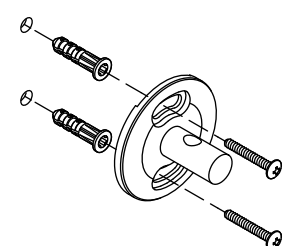
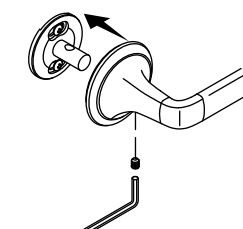


<p>Record your model number below for future reference:</p>	<p>⚠ CAUTION: Risk of personal injury. Do not install where the product might be used as a grab or support bar.</p>	<p>Important Information These products should be located and mounted to a wall stud. While it is possible to mount them to any surface, a stud mounted product will yield the best results.</p>	<p>Recommended Tissue Holder Location</p> 	<p>1 Two-Post Accessories: Verify "X" against the measurements of your product model.</p>  <p>P25043: 18" (457 mm) P25041: 24" (610 mm)</p>	<p>2 For All Installations: Loosen the setscrew and remove the wall plate from the accessory.</p> 
<p>3 Single-Post Accessories: Position the wall plate and mark the holes. Verify plumb.</p> 	<p>4 Drywall Into Studs: Drill 1/8" holes. Secure the wall plate(s).</p> 	<p>Drywall Between Studs: Drill 5/16" holes. Use the provided pin to install the drywall anchors. Secure the wall plate(s).</p> 	<p>Ceramic Tile: Drill 1/4" holes. Insert ceramic anchors. Secure the wall plate(s).</p> 	<p>5 For All Accessories: Slide the accessory onto the post(s). Tighten the setscrew(s).</p> 	

Questions? Problems? For additional assistance, please contact KALLISTA's Customer Service Department at 1-888-4-KALLISTA (1-888-452-5547) or kallista.com.