

Features


- Combine panels to create a beautiful, functional shower space with easy installation.
- Panel sizes fit standard alcove showers.
- In-field trimmability accommodates custom shower spaces.
- No need to install trim. Factory-installed edge provides a finished look for walls.
- Recommended joint system hides caulk and silicone, leaving fewer places for mold to grow and simplifying cleaning (joints sold separately).
- Coordinates with Choreograph shower accessories and storage (sold separately).

Material

- Serica®, KOHLER's proprietary composite material, offers unparalleled durability, strength, and aesthetic beauty.
- Matte finish complements any decor.
- Choreograph walls made from Serica are repairable. KOHLER's ASR network can assist in repairing surface defects, cracks, etc. Customer service can assist in scheduling a repair. Repair kit part numbers: Patterned panels: 1374534-NY, 1374534-G9, 1374534-96. Solid Panels: 1283194 - *.

Installation

- In-field trimmable.
- Adheres to water-resistant wallboard.
- Recommended corner joints ease installation (sold separately).

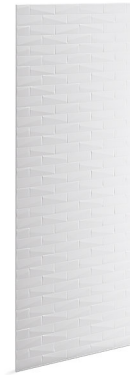

Codes/Standards







ASTM E162
ASTM E662


KOHLER® Limited Warranty – Choreograph™ Walls and Accessories

See website for detailed warranty information.

Available Colors/Finishes

Color tiles intended for reference only.

Color	Code	Description
	0	White
	96	Biscuit
	47	Almond
	NY	Dune
	95	Ice™ Grey
	G9	Sandbar

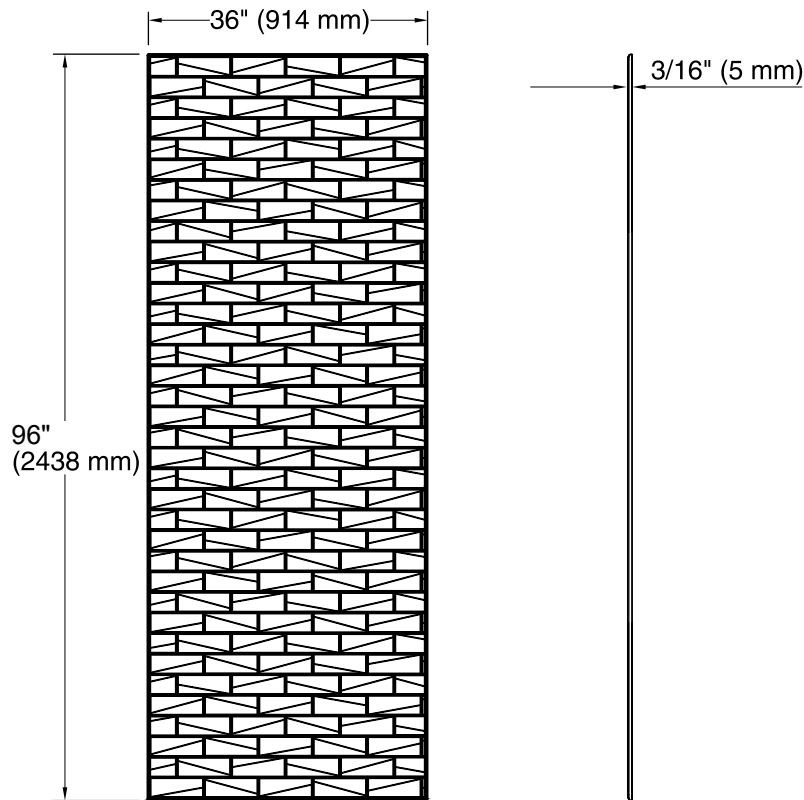

Technical Information

All product dimensions are nominal.

Installation: Individual wall

Material Thickness: 3/16" (5 mm)

Notes

Measure your actual product for rough-in details.

Install this product according to the installation instructions.

Caution: Risk of personal injury. Significant amounts of dust are generated when cutting the wall panels. Breathing protection is required when cutting the panels.

Use non-solvent based construction adhesive. For installation over tile, use 100% silicone sealant.

Wall panels should be room temperature before cutting.

If a ceiling panel will be installed, install the ceiling panel prior to installing the wall panels. Brace the ceiling panel and allow it to cure for 24 hours.

Use color matched silicone sealant when installing the joints.

If installing over existing tile, scuff the tile with 100 grit sandpaper for proper adhesion.

Corner joints (optional) allow for 3/8" adjustment for out-of-plumb conditions or uneven cuts.