



## C020 UB

FARMHOUSE KITCHEN

### DETAILS

Hammered Unlacquered Brass

Installation Type: Undermount

Uses Standard 3.5" Drain

No Overflow

### AVAILABLE FINISHES

UB | Satin Unlacquered Brass

### AVAILABLE DRAINS

D003 | 3.5" Basket Strainer

D007 | Disposal Flange

### INSTALLATION

Drain should be installed first.

**DROP-IN:** Cut opening large enough for the sink to be "dropped in" to countertop.

**UNDERMOUNT:** Cuts in countertop are up to the discretion of the installer. Clips or other installation method must be provided by the fabricator/installer.



Use 100% silicone to adhere sink to countertop. Clean any excess silicone from sink surface.

### CARE

Clean with mild soap. No abrasive chemicals

### WARRANTY

Linkasink warranties our product to be free from manufacturing defect for the life of the product. Warranty does not cover abuse.

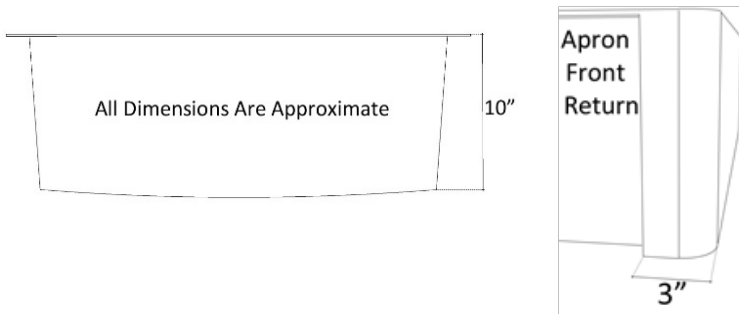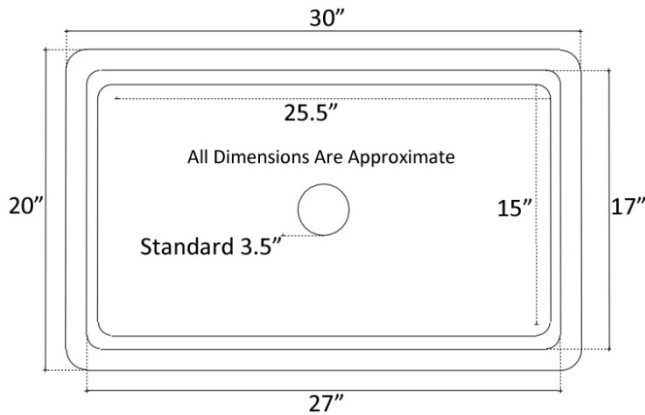

### DIMENSIONS WILL VARY

**DO NOT** use this sheet as a guide for countertop cuts. Due to the handmade nature of each product, templates are not provided.

Contact: 1.866.395.8377    sales@linkasink.com  
Linkasink may make changes to specifications without notice.  
Visit [linkasink.com](http://linkasink.com) for updated specification sheet.  
3/16/2021