


Specification & Installation Guide

Features

- Free standing 48" vanity: 33-1/2" (852mm)H x 18" (458mm)D x 47-5/8" (1210mm)W
- Furniture grade plywood layered with solid wood veneer and protected with several coats of polyurethane (No particle board or MDF used).
- Matching finish inside out
- Two fully adjustable drawers with full-extension soft-close European hardware.
- Top drawer with tempered glass retainer.
- Bottom drawer includes adjustable tempered glass dividers and retainers.
- Handle option: Polished chrome or brushed nickel.
- Feet option: 4 L-feet or 2 S-feet in polished chrome or brushed nickel.

33-1/2" (852mm) L-FEET

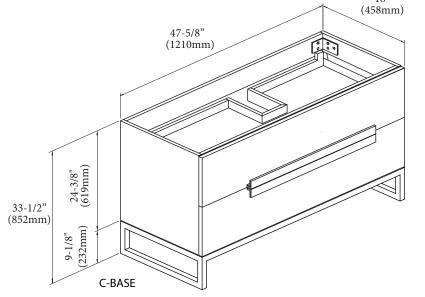

Top/Basin options


- Quartzstone[™] top & white under mount ceramic basin
- Glossy White X-Stone top/basin
- Glossy or Matte White X-Stone flat countertop

Package Dimensions

50" x 21"x 28"

Weight

167 lbs. / 76 kgs

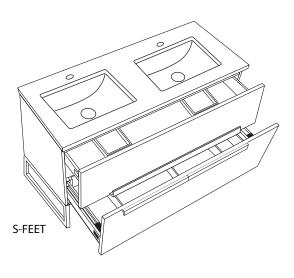




01 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1


All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.



Specification & Installation Guide

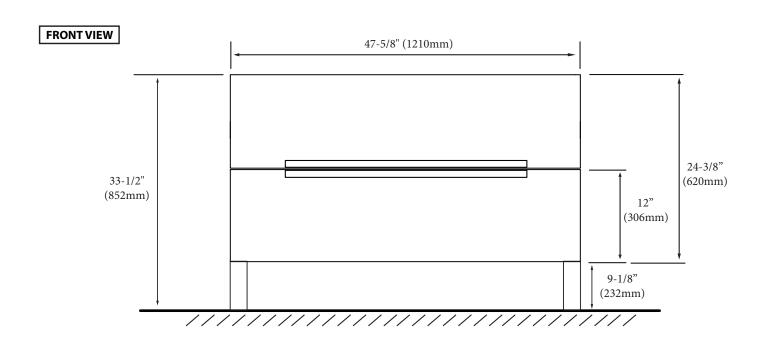

TOP VIEW

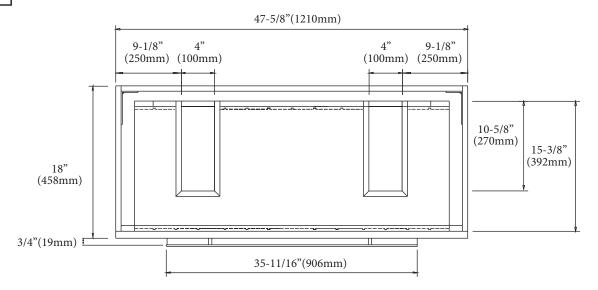



02 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.



Specification & Installation Guide

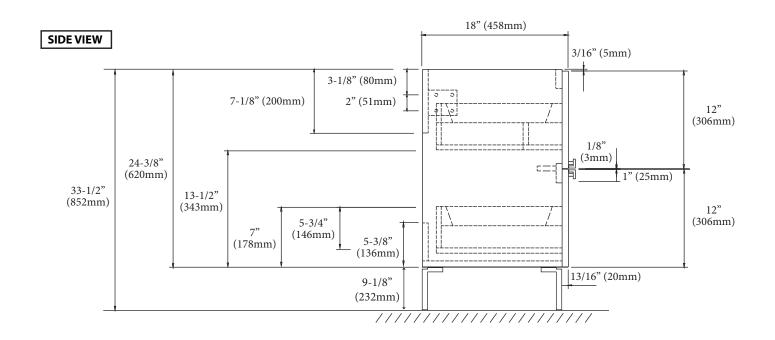

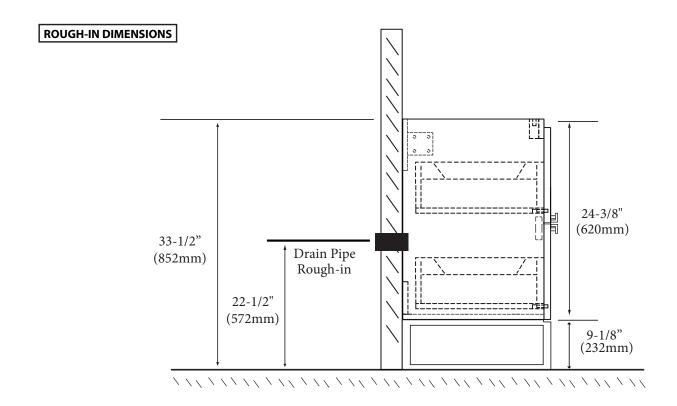

03 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.


All Rights Reserved - 2017



Specification & Installation Guide

INSTALLATION INSTRUCTIONS

- Install legs
 - 1. Place feet in indicated positions.
 - 2. Mark screw locations.
 - 3. Pre-drill holes with 5/64, 3/32 or 7/64 drill bit about 1/2" deep.
 - 4. DO NOT OVER TIGHEN THE SCREWS. DOING SO WILL SPLIT THE WOOD SIDE PANEL.
 - 5. If using a regular battery drill, set clutch to minimum and increase setting as needed.
 - 6. DO NOT USE AN IMPACT DRILL. IT WILL SPLIT THE WOOD SIDE PANEL.

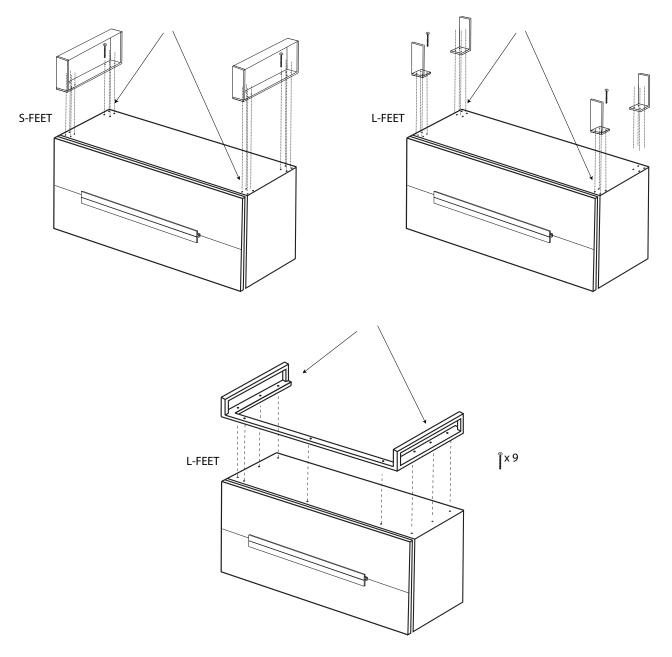

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

04 | Page


Rev. 01/01/2021



Specification & Installation Guide

CABINET PLACEMENT & INSTALLATION - SECURE CABINET TO WALL

- 1) Level cabinet in position
- 2) Secure cabinet with screws in drywall studs
- 3) Install countertop with silicone

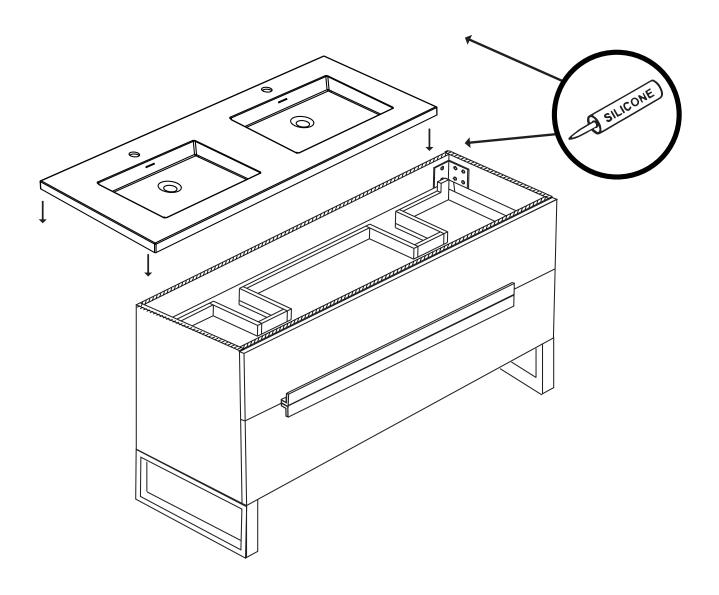

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

Rev. 01/01/2021

05 | Page