



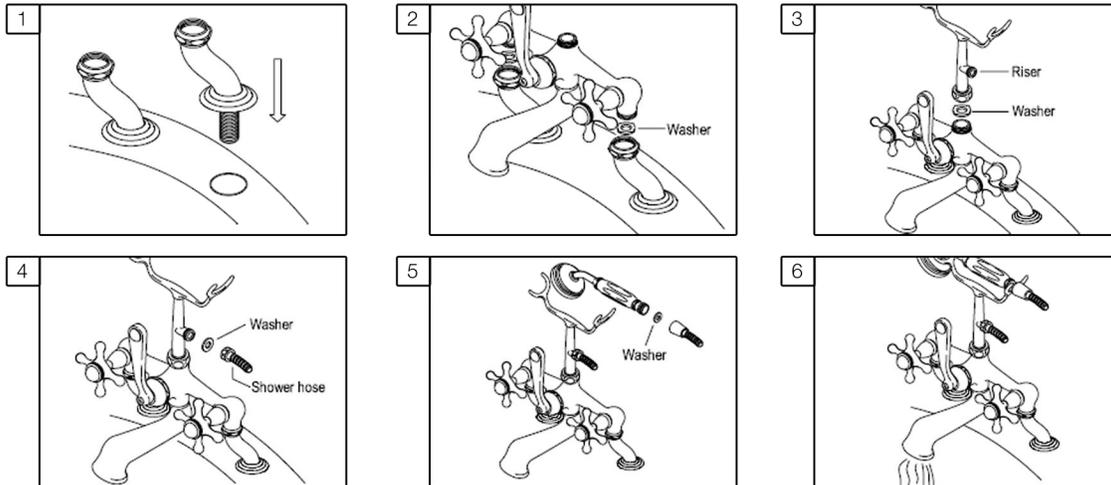


Rim Mount Tub Faucet Installation Instructions

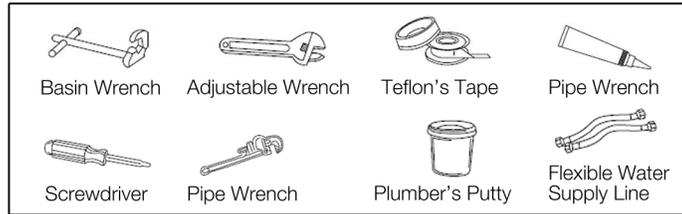


1. Place mounting legs on the tub, then tighten the lock nuts from underneath and connect the water supply lines. Place washers and then tighten the coupling nuts on the mounting legs.
2. Use Teflon tapes on the threads of the mounting legs. Install the faucet body by connecting the end nuts of the water lines on the body to the mounting legs. Tighten the nuts.
3. Install the riser (holders) onto the top connector hole of the faucet body. Tighten the end of the riser.
4. Place a washer between the side hole of the riser and the cone nut of the shower hose and tighten the cone nut.
5. Place a washer between the hand held shower unit and the other end of the shower hose and then tighten the cone nut of the shower hose.
6. Turn on water supply and check for leaks. Allow both hot and cold water to run for one minute.

Assembly Instructions For Handles

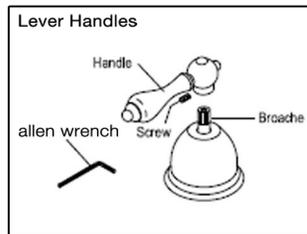

Lever Handles:

1. Put the lever handles on the broaches and tighten using the allen wrench provided.

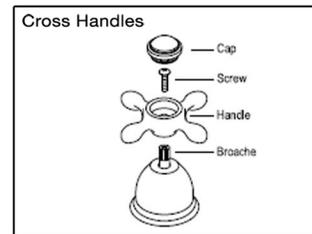

Cross Handles:

1. Remove the insert caps from the cross handles.
2. Put the cross handles on the broaches and then tighten the screws. Insert the caps on the cross handles.