

TUB SPOUT BEC DE BAIGNOIRE SURTIDOR DE BAÑERA




1/2" fine thread / filetage fin 13 mm / rosca fina 13 mm

Waltec® 76588 Non/No O.E.M.


1. Apply thread seal tape to pipe **1**.
⚠ Do not use pipe joint compound.

2. Thread spout **2** on pipe.

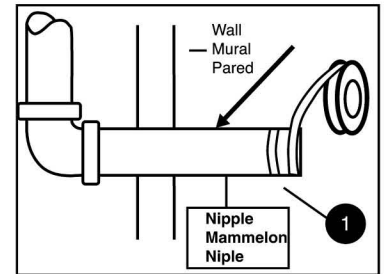

1. Appliquez le ruban d'étanchéité au tuyau **1**.
⚠ N'utilisez pas de ciment pour joints.

2. Enfiler le bec **2** sur le tuyau.

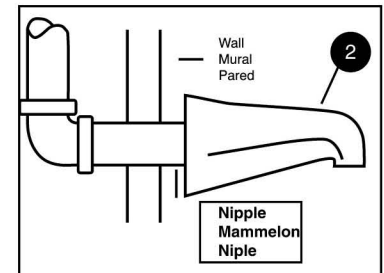

1. Aplique cinta de sellado de roscas al tubo **1**.
⚠ No use compuesto para unir tubos.

2. Enrosque la salida **2** en el tubo.

