


# OVERFLOW PLATE PLAQUE DE TROP-PLEIN PLACA DE REBOSE

1 hole / 1 trou / 1 agujero

1. Align faceplate ❶ with holes.
2. Attach cover with screws ❷.

- 
1. Alligner la plaque ❶ avec les trous.
  2. Attacher le couvercle avec les vis ❷.

- 
1. Alinee la placa ❶ con los agujeros.
  2. Ajuste la tapa con los tornillos ❷.

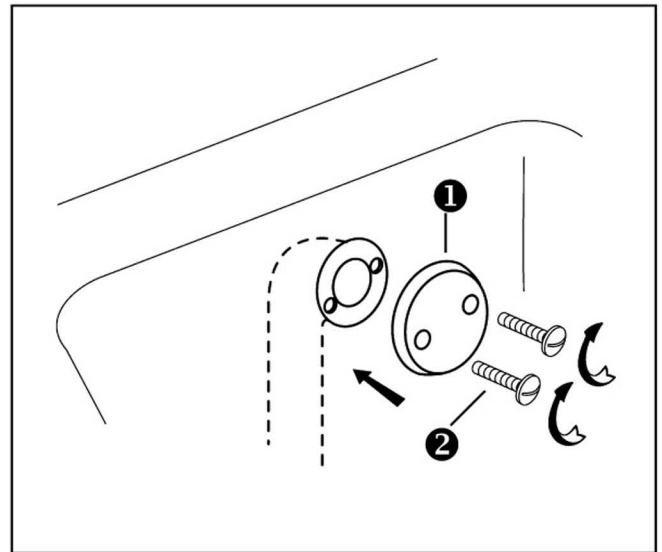

Tools Outils Herramientas



**CONTENTS:** 1 Faceplate, 2 Screws

**CONTENU:** 1 Plaque, 2 Vis

**CONTENIDO:** 1 Placa, 2 Tornillos