



Shown above wiith left-hand drain.

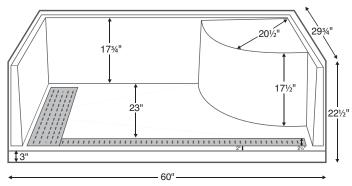

When ordering, please specify left- or right-hand drain.

MTSB-6030BFSeated



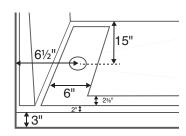

Designed to be recessed into floor, to create a flat transfer surface.

Model #	Package Content	Size	Shape	MSRP
SB6030BFSeated	Natural stainless steel drain and channel cover, PVC drain kit	60" x 29.75" x 22.5"	Rectangle	\$2,900

Options Must be ordered at time of purchase

Color Please specify color on order White (CWH)

Quick Ship (QSPRI) \$430

Biscuit (CBS)

Reduces lead time. Please call for availability.

Radiance® (RAD100) \$1,595 Shower floor heating system. Radiance heating grids are fully integrated within the acrylic shell structure of the shower floor. Requires a 110-volt, 15 amp GFCI and remote installation of control box & keypad.

Pre-Leveled Foam Base (PLFSB) \$220

Drain & Channel Cover Natural stainless steel drain & channel installed on base as standard. Substitute with the following available options:

Powder Coated White Stainless Steel Hidden Drain Cover (DCT60W) Must specify part code on order; comes in lieu of standard cover.

Accessories

Drain Kit Options

Solid Brass Drain Kit with Stainless Steel Cover (SBDKSB) \$195

before discarding.

before discarding.

- All product measurements are ±1/2".

- Specifications and configurations are subject to change without notice.

- Measurements herein supersede all others published prior to publication date below.

Options and accessories may be packaged inside the box. Always check packaging

See the Installation & Operation Manual for more details. MTI's Customer Service: Monday-Friday 8am-6pm EST **800-783-8827** or service@mtibaths.com

CSA # MTSB-6030BFSEATED

IMPORTANT ORDERING & INSTALLATION INFORMATION

- . Zero-barrier single front threshold design with integrated seat designed for ease of transition between bathroom and shower area.
- . 3-sided integral tile flange to facilitate installation. Must specify drain hand on order.
- . 3.5" drain opening pre-drilled.
- Compliant with ASTM C 1028-07 coefficient of friction test.
- Add proper wet-bedding compound to fully support bottom of shower base. Optional factory installed Pre-Leveled Foam Base negates the need to wet bed when installing on a flat, level subfloor. See installation instructions.

