


INSTALLATION INSTRUCTIONS

WALL MOUNT VANITIES

It is strongly recommended that Native Trails wall mount vanities are installed by a licensed contractor.

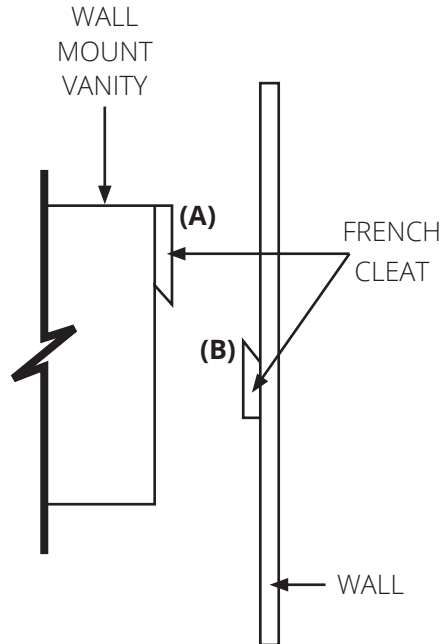

BORDEAUX WALL MOUNT, CHARDONNAY AND CABERNET FLOATING VANITY

1. Determine desired height and location of studs in wall.
2. Attach French Cleat **(B)** to wall using 3.5" screws, making sure slanted edge will fit evenly with French Cleat **(A)**. Make sure it is level and at proper height to support vanity.
3. Hang vanity on French Cleat **(B)** attached to wall.
4. From underneath vanity, install 3.5" wood screws through vanity and into French Cleat **(B)** to secure vanity.
5. Install top, sink, and drain according to installation instructions.

Figure 1. (front view)


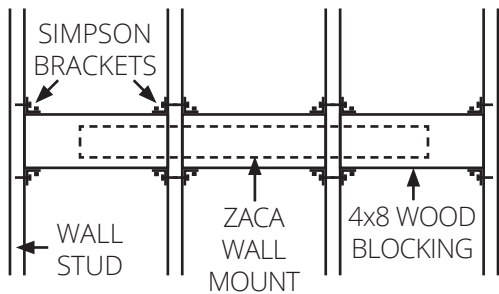


Figure 2. (top view)

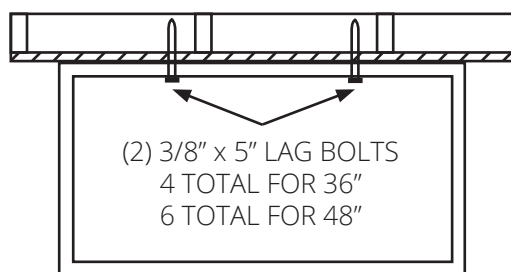

ZACA WALL MOUNT

1. Determine desired height and location.
2. Remove drywall and install blocking support according to **Figure 1**. Install 4x8 wood blocking between each stud to the full length of Zaca Wall Mount; 3 blocks for 36" Zaca Wall Mount, 4 blocks for 48". Attach blocking to studs with Simpson A34 brackets (not supplied) on top and bottom of each block as shown in **Figure 1**. Front face of blocking should be flush with front face of stud.
3. Replace drywall, marking location of installed blocking. Patch drywall as needed.
4. Using Zaca Wall Mount as a template, mark mounting holes.
5. Using a 1/4" drill bit, pre-drill mounting holes into installed wall blocking for 3/8" lag bolts (not supplied).
6. Attach Zaca Wall Mount to wall according to **Figure 2**.
7. Install NativeStone® Trough sink and drain according to installation instructions.