
# Bathtub hamac - Installation guide


- Read the instructions carefully before starting the installation.
- The bathtub must be installed by a licensed plumber.
- At least two people are required to properly install this product.
- To avoid the risk of injury, do not hold or lift the bathtub by the rim. Ensure proper support under the feet.
- The manufacturer is not responsible for any damage to the bathtub or personal belongings resulting from improper installation. Failure to follow the installation instructions will void your warranty.
- Unpack and inspect the bathtub for any damage. Keep it in its box until you are ready to install it.
- The structure supporting the bathtub must be capable of bearing the weight of the bathtub when filled with water. The structure must comply with local building codes.

### Step 1

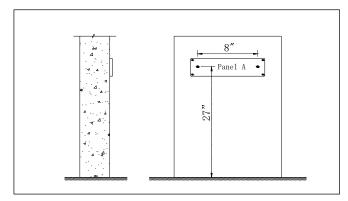


On the rough wall, determine the mounting position of the hanger and the opening position of the nut. The height of nut opening center point is 27" from the ground, the center distance between the two holes is 8", and the hole diameter is 3/4". When installing the hangers on both sides, ensure that the horizontal installation height of the hangers is uniform.

#### Step 2

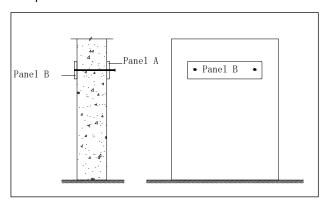


After the installation of the A board is completed, first pass the two extension nuts through the B board, and then insert them into the two large holes, connect the nuts on the side of the A board with a screw, and tighten them (as shown in the side view). In order to ensure safe suspension. The wall should be a solid load-bearing wall, and the thickness is recommended not to be greater than the length of the extension nut into the wall.

#### Step 3

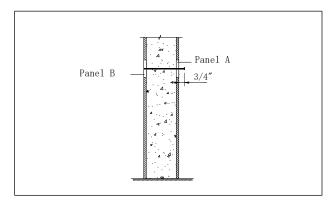

After installing the floating bathtub fixings, tiles can be affixed to the wall. The total thickness of the wall after tiling is within the range of 8"-8 1/2". The screw rod should be exposed by 3/4" on the side wall of the bathtub for easy adjustment of the length.

## Step 4

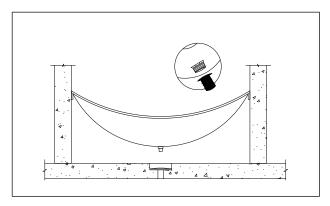

Before hanging the bathtub, screw on the black drain accessories, and then hang the bathtub on the screws on both sides, and the installation is complete.