

INSTALLATION INSTRUCTIONS


DRAIN ASSEMBLY

MODEL No's: I22 (Brass) I23 (Poly)



Recommended installation by a Professional Plumbing Contractor

Fits 3 1/2" diameter drain hole.

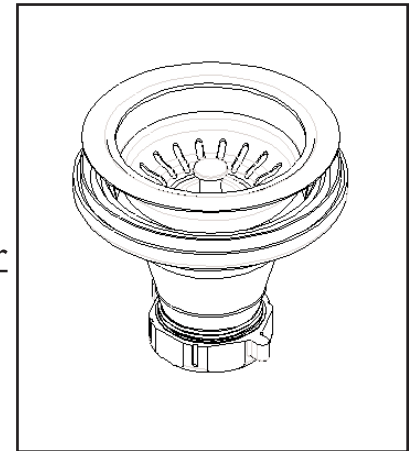

- Disconnect and remove existing flange / strainer assembly from drain pipe.

- Dis-assemble BODY ASSEMBLY (2) by removing BOLT (3).

- Place DRAIN BODY(4) and FOAM GASKET (5), (brass version only, non petroleum plumbers putty may be used in place of foam gasket), in sink hole.

- From underside of sink hole, place RUBBER GASKET (6) and DRAIN HOUSING (7). Secure to DRAIN BODY (4) with BOLT (3).

- Attach DRAIN HOUSING (7) to existing tail-piece drain pipes with 1 1/2" LOCK NUT(9) and WASHER (8) provided.

- Place BASKET ASSEMBLY (1), (I22-4 or I23-4) into DRAIN BODY (4). To seal, force basket downward. To open, pull basket upward.

- Run water in sink, open / close basket and inspect for leaks. Make adjustments as necessary.

