

Undermount Sinks

- Model # 007
- Weight: approx. 20 lbs
- Overflow: Special Order only
- Can be installed as a drop-in
- Hardware not included


Undermount Installation:

1. Apply a clear epoxy/caulking to the top rim of the undermount and then hold it in place under the countertop.
2. Screw L brackets into countertop from underneath. (position of “L” bracket shown right—not included)
3. Insert & tighten drain underneath by hand only. DO NOT OVERTIGHTEN.

Template included with sink:

Templates are supplied only as a guideline. The physical use of the sink will assure an accurate cut-out.

Inspect the sink prior to installation. No returns accepted after installation, unless product is mechanically defected.

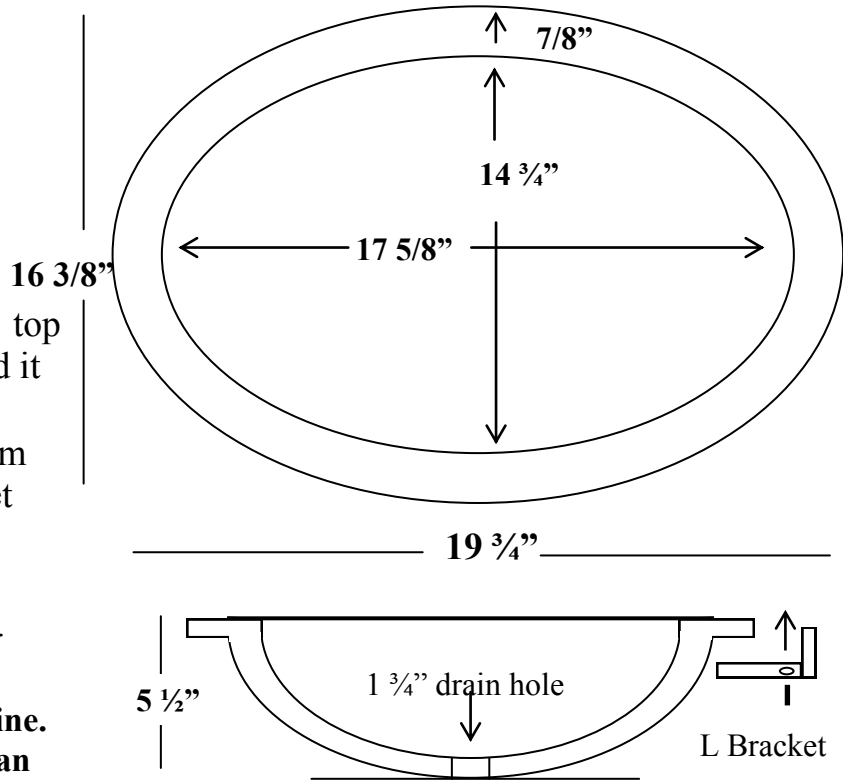

215 North 4th Street, Jeannette, PA 15644 ph:724.523.5567 fax:724.523.0123 www.jsgoceana.com