



JSG *Oceana* vessels have a standard 1 3/4" hole which requires a 1 1/4" drain.

Recommended installation of a JSG *Oceana* vessel:

\*Drill a hole in your countertop slightly larger than the width of your drain (no less than 1 3/8" and no larger than 1 1/2")

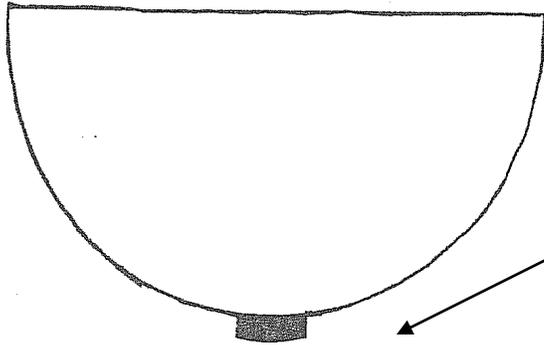

- Place a thin rubber washer or bead of silicone between vessel and countertop as a buffer (shown at left). If a rubber washer is used you may also apply an additional layer of clear caulking or epoxy for added stability.

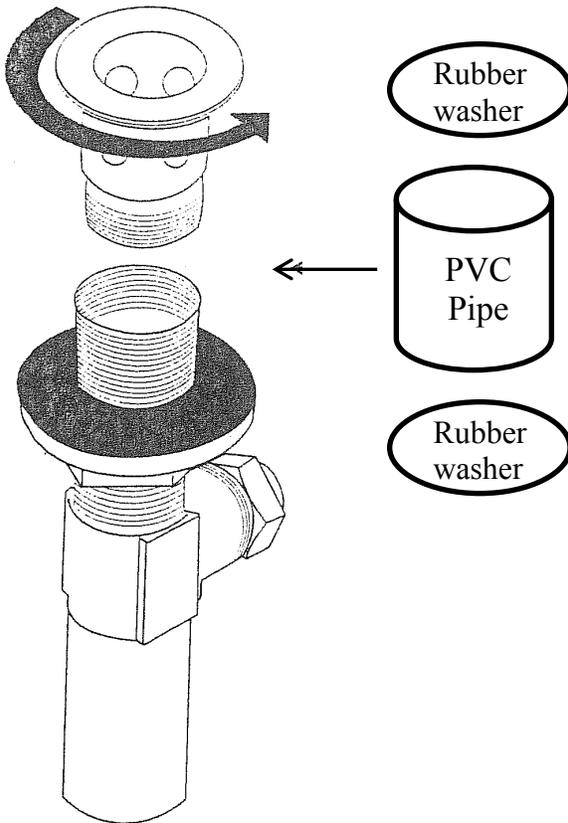

- Apply plumber's putty under rim of drain and place into sink. Drain will go through vessel and hole in countertop.

- Tighten drain underneath by hand only. DO NOT OVERTIGHTEN.

- If drain does not have enough threads to tighten completely up to countertop, purchase a piece of PVC pipe to make up the difference. Use two rubber washers to seal the PVC pipe and prevent leakage. (PVC pipe can also be used if you purchase a drain with an overflow hole.)



215 North Fourth Street, Jeannette, PA 15644  
Ph: 724.523.5567 Fx: 724.523.0123

[www.jsgoceana.com](http://www.jsgoceana.com)