

Congratulations!

You have purchased the finest carousel product available, the **Lazy Daisy® Susan**. For any questions or further information, please contact us at:



LAZY DAISY®
BY **REV·A·SHELF®**

2409 Plantside Dr. • Jeffersontown, KY 40299
(800) 626-1126 • www.rev-a-shelf.com

System 9

Pie-cut

Doors revolving
90-degree corner

Installation instructions for:

Article # LD-45-9168-8 (white) / LD-45-9268-8 (almond)

Base Cabinet
22" x 22"
55 x 55 cm

Tray diameter: 18" (45 cm)

Mounting height: 28 1/4" - 30 1/4"
(72 - 77 cm)

Minimum cabinet dimensions:

USA : 22"

EURO : 55 cm

a = 22"


a = 55 cm

b = 14"

b = 35 cm

c = 8"

c = 20 cm

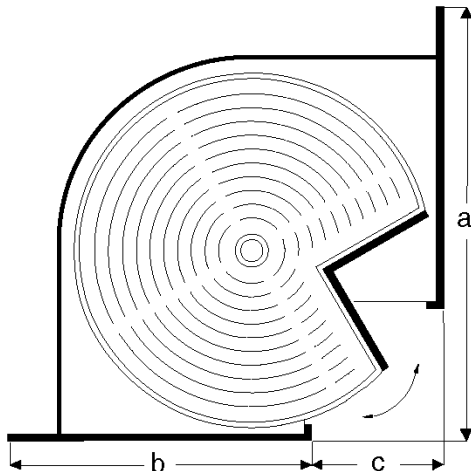


18in PIE-CUT (2) Trays (LD-45-9168-8) (LD-45-9268-8)

System 9

Pie-cut

Doors revolving
90-degree corner

Parts list (14 pcs.)

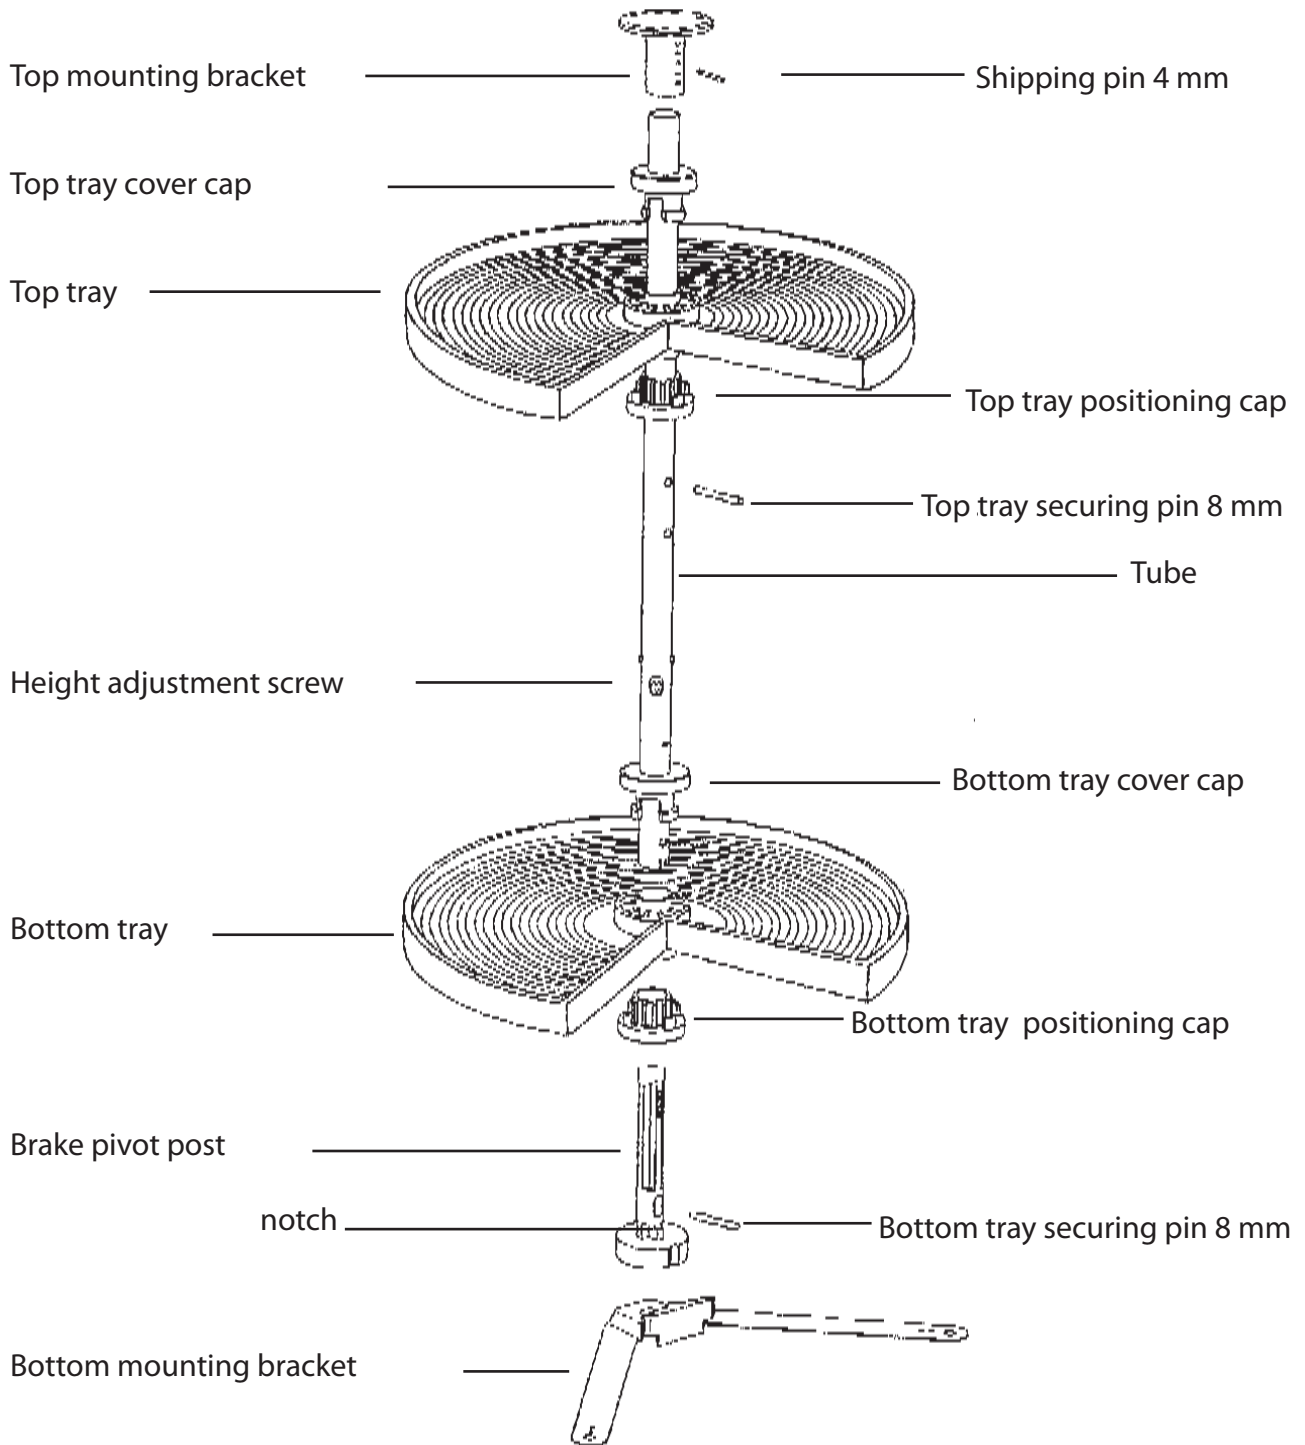

System 9

Pie-cut

Doors revolving
90-degree corner

Mounting Instructions

1. Prepare **Top tray** by inserting **Top tray cover cap** and **Top tray positioning cap** .
2. Prepare **Bottom tray** by inserting **Bottom tray cover cap** and **Bottom tray positioning cap**.
3. Insert **Tube** through **Top tray, Top tray support ring** and **Bottom tray**.
4. Mount **Bottom mounting bracket** into cabinet using template provided.
5. Drill pilot holes for **Top mounting bracket** using template provided.
6. Place complete unit including **Top mounting bracket** into cabinet.
7. Mount **Top mounting bracket** to cabinet top.
8. Select desired top tray hole position and insert **Top tray securing pin** into tube.
9. Mount doors to both the **top and bottom trays**.
10. Adjust **Bottom mounting bracket** if necessary (see page 4).

System 9

Pie-cut

Doors revolving
90-degree corner

Door Adjustment

1. Door alignment

- Open doors so that one side of the bottom mounting bracket can be seen. With a pencil, mark the original position of the bottom mounting bracket. Insert a screw into the large hole on the end of the bracket (When inserting the screw, place it off-center in the direction of desired adjustment). Take out the original fixing screw. Repeat on the other side.
- Loosen the screws over the large holes and carefully rotate the bracket to the left or to the right, depending on which way the doors need to go.
- Tighten the screws and close doors to check alignment.
- Once door alignment is complete, re-insert fixing screws into one of the small holes.