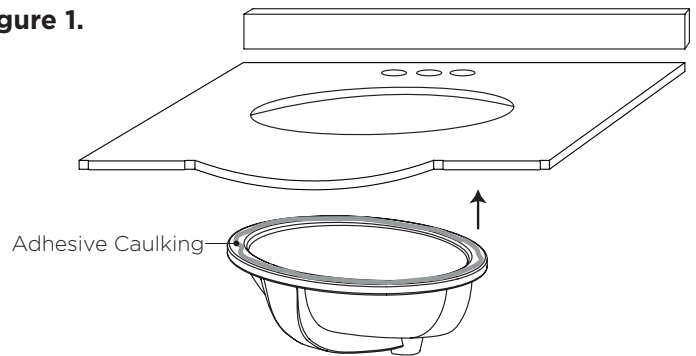


MODEL: 060624 TOP: 308125 308143  
060630 308131 308149  
060648 308137 308161

TRADITIONS COLLECTION

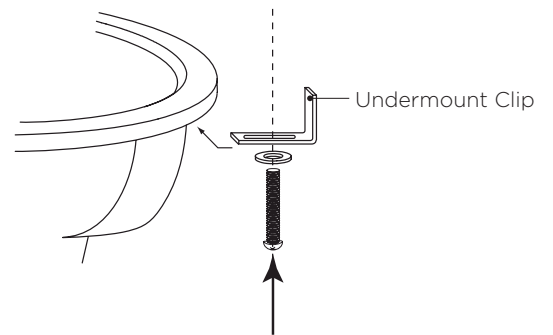
**STEP 1:** Apply adhesive caulking around the top side of rim near the edge. Carefully raise sink in place, align, and press firmly.

See Figure 1.

**Figure 1.**

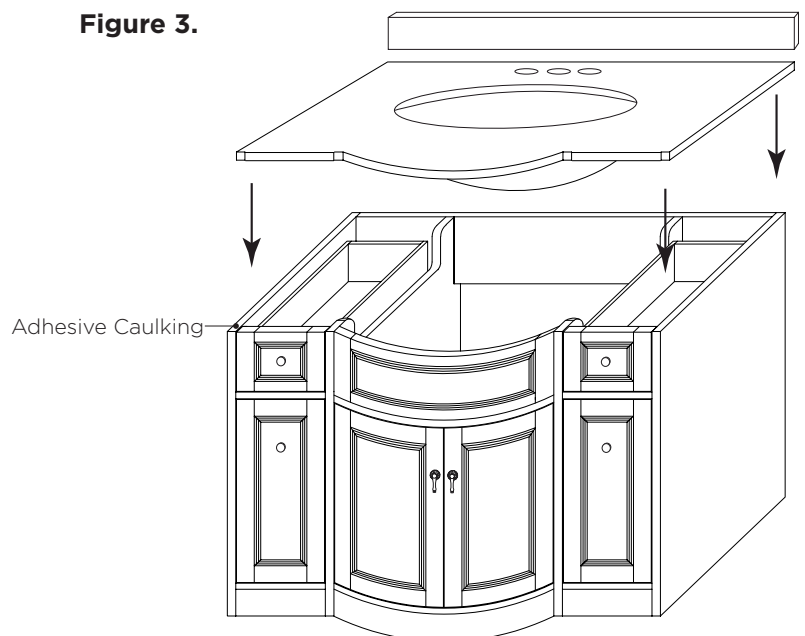
**STEP 2:** Attach 4 undermount-clips to hold lavatory in place.

See Figure 2.

**Figure 2.**

**STEP 3:** Secure top and backsplash to cabinet by using adhesive caulk

See Figure 3.

**Figure 3.****MATERIALS NEEDED:**

PHILIP SCREWDRIVER  
PLUMBERS' PUTTY/ SEALANT