


070748 309049

Vintage Collection

Note: For Under Counter Sinks

Step 1: Apply adhesive caulking around the topside of rim near the edge

See Figure 1.

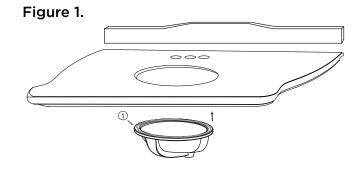


Step 2 : Carefully raise sink in place, align, and press firmly

See Figure 1.

Step 3 : Attach 4 undermount clips to hold lavatory in place.

See Figure 2.



See Figure 3.

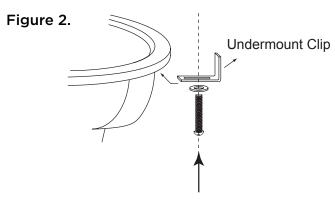


Figure 3.

