

Stone Countertop


Model: 301125 301143 301171
 301131 301149
 301137 301161

Countertop

Step 1 : Apply adhesive caulking around the topside of rim near the edge, Carefully raise sink in place, align, and press firmly

See Figure 1.

Figure 1.

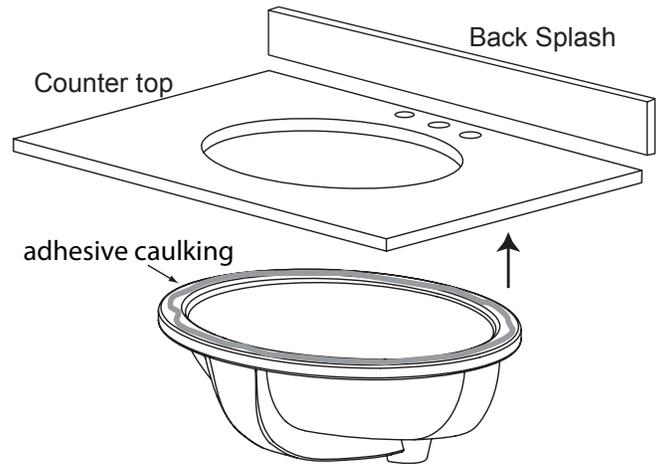

Step 2 : Attach 4 undermount-clips to hold lavatory in place

See Figure 2.


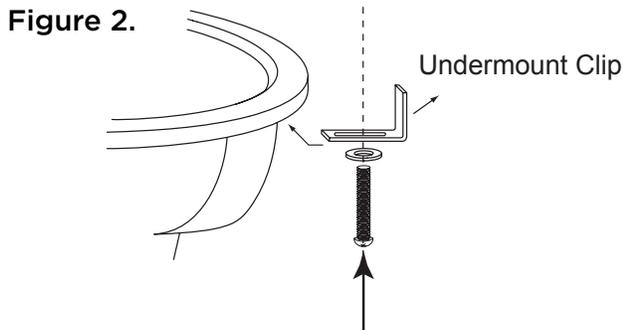


Figure 3.

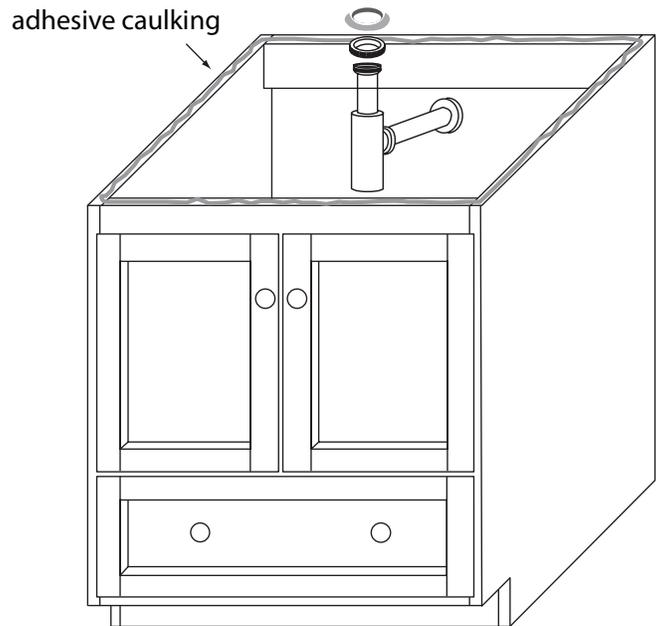

Step 3 : Secure top & back splash to cabinet by using adhesive caulk

See Figure 3.