

<b>Model:</b>	303325	303349	363337	304449	306632	306648	306662
	303331	303361	363343	364449	366632	366648	366662
	303337	363325	363349	306624	306637	306659	
	303343	363331	363361	366624	366637	366659	


Countertop

**Step 1 : DO NOT DISCARD WOODEN INSTALLATION BRACKET!**

- Make sure wooden installation bracket is safely secure
- Install under counter sink by following specific sink installation


See Figure 1.

Figure 1.

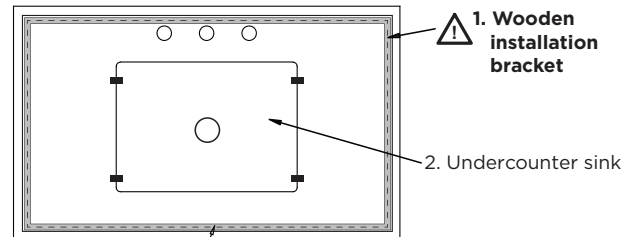

- Step 2 :**
- For best results, clean the mounting surfaces with a dry cleaning cloth
  - To prevent over flow of adhesive, use masking tape to tape off the edges of the cabinet and the counter top

Figure 2.

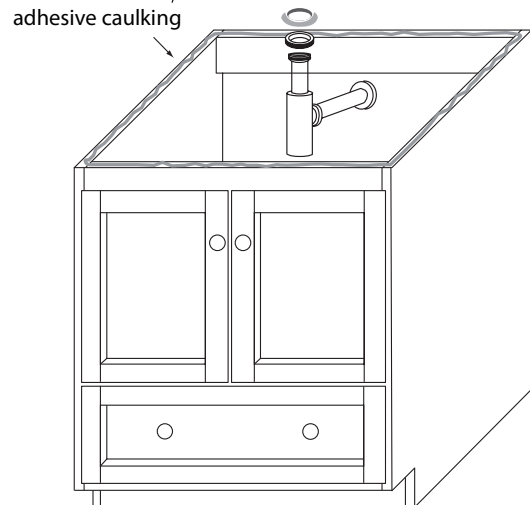

**Step 3 :** Apply adhesive on wood bracket and mounting surfaces of the cabinet

See Figure 2.

**Step 4 :** Carefully place countertop on to the cabinet, align, and press firmly

See Figure 3.

Figure 3.

