

# **INSTALLATION AND CARE GUIDE**

MARCO LED MIRROR

E055113 E055116 E055126





Model: E055113 Designed By: RAMON ESTEVE | SPAIN

E055116 E055126

# **PRE-INSTALLATION**

# **Tools Required**














#### ALL WIRING SHOULD BE DONE BY A QUALIFIED LICENSED ELECTRICIAN.

WARNING: To reduce the risk of electrical shock, shut off power before wiring the cabinet.

**CAUTION:** Requires 120V 20AMP circuit.

**CAUTION:** The LED mirror must be wired to a GFI (ground fault interrupter) circuit breaker when used in bathrooms and all other locations required by the national electric code.

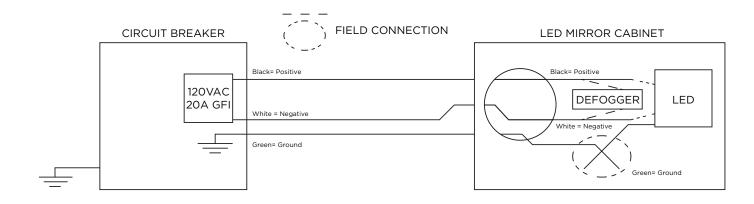

### **Materials Included**

E055113

5 long screws

pair of wall cleats

E055116 & E055126

6 long screws

1 pair of wall cleats

## **Materials Required**

1 2x6 beam cut to size

.

Designed By: RAMON ESTEVE | SPAIN

Model: E055113 E055116

E055126

## **INSTALLATION**


**Step 1:** Determine the ideal location of the wall mirror.

**NOTE:** It is highly recommended to install a 2x6 beam across two studs. This will provide more stability for the products.

See Figure 1.

**Step 2:** Position the wall cleat on the wall and mark the locations for the anchors.


Make sure to use the leveling tool to ensure the pilot holes are level.

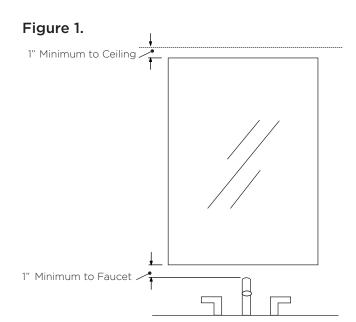

**Step 3:** Drill 1/4" holes and screw in the bolts to the horizontal beam.

Step 4: Secure the anchors into the wall, and then fasten the screws provided into the anchor to secure the wall cleat.

See Figure 2.

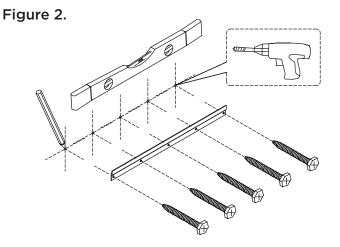

Designed By: RAMON ESTEVE | SPAIN


Model: E055113

E055116 E055126

**Step 5:** Cut an opening in the wall and connect the electrical wires to the housing.

**NOTE**: Run electrical wires to the opening. An electrical box is recommended inside the opening.

See Figure 3.



wires in the opening.

See Figure 4.




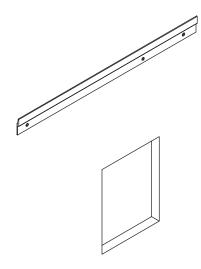


Figure 4.





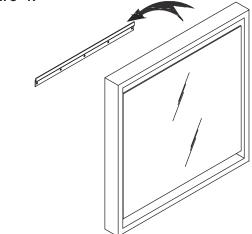

Designed By: RAMON ESTEVE | SPAIN

Model: E055113 E055116 E055126

#### PRODUCT CARE AND MAINTENANCE

The fine furniture finish of your new vanity, mirror or other bathroom accessories are designed to protect against normal home use. With proper care, your product will provide years of use and beauty in your home.

# **General Care Tips**

- Test cleaning product on small, discrete area prior to applying to entire surface.
- Wipe surfaces frequently with dry, soft, non-abrasive and lint-free towel.
- Do not allow liquids and moisture to accumulate on the surface of products.
- For warranty information, please visit our website at www.ronbow.com or contact the Customer Service Department at (510) 713-1188.

#### **Wood Surfaces**

- If a spill occurs, clean and dry the surface immediately as liquid can soak through the surface and cause greater damage.
- Do not place in direct sunlight. Exposure to sunlight may affect the appearance of your vanity, and the finish will eventually crack.
- Keep away from direct sources of extreme temperatures as heat, cold or moisture from humidity. Color changes, or blemishes in the wood can occur if recommended care of is not met. Try to avoid these extremes.
- Most wood surfaces can be cleaned, or dusted, with any commercial wood cleaning product. For general cleaning, use a non-abrasive, or lint-free cloth while dusting along the wood grain to preserve the wood's chacteristics.

#### **Recommended Products**

- Pledge Orange Oil, or similar
- Orange-Glo Wood Cleaner

**DISCLAIMERS:** Wood naturally ages, darkens and changes color over time due to several environmental conditions that may cause materials to vary from their original color and/or to warp, split or crack. These variations are considered to be the nature of the material in relation to their environmental exposure and may be significant over a long period of time. The effectiveness of cleaning Ronbow product is dependant on various factors that include sunlight, smoke, moisture, household cleaners and/or amount of cleaning product used over time. Ronbow cannot guarantee that the above Product Care & Maintenance methods will effectively clean your product.

