


*Please read the instructions completely before beginning the installation.*

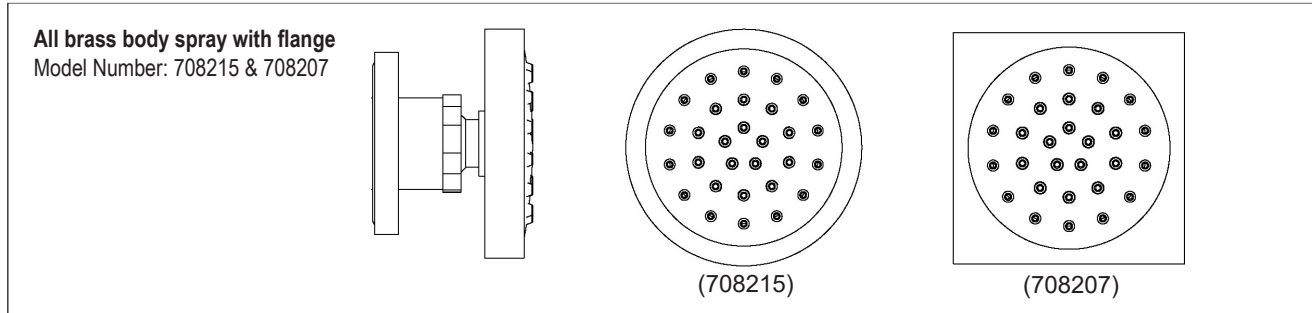

## INSTALLATION INSTRUCTIONS

### Rough Installation

**NOTE:** The 1/2" threaded nipple should be flush with the finished wall.  
Hole size for the body spray should be between 1" and 1-1/2"

Wrap the pipe threading with Teflon tape. Then, thread the body spray onto the pipe until it is secured.

**WARNING:** Do not use excessive force when threading the body spray.

