Strom Plumbing



Ph: (916) 638-2722 / Fax: (916) 638-2725

Installation Information

Item #P1127

Mount Faucet with 7" Centers


Warranted only when installed by a qualified, licensed plumber. Please use Teflon tape on all threaded connections.

Please use Teflon tape on all threaded connections.

- 1. Shut off the water supply to the fixture before installation.
- 2. Rough in ½" IPS male pipe, ½" past the finished wall, with 7" centers. Please note before roughing in: Allow adequate clearance of spout for tub being installed according to your local code requirement.



- 3. Thread on the wall mount couplers. Insert the screen washer into the nut of the coupler.
- 4. Attach the faucet body to the wall mount couplers and tighten nuts to secure.
- 5. Make no adjustments to valves or valve stems. They are tested at the factory for optimum performance.
- 6. Turn on the water and pressure-test connections.
- Faucet Body
- 6" Wall Mount Couplers & screen washers

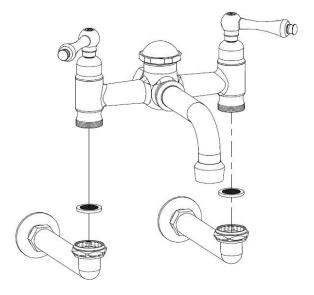

Parts Included: