

## **Accord®**

# 42" shower with AIP grab bars **72250103-V**





### **Features**

- Modular design allows it to be moved around corners and through doorways with ease.
- Durable high-gloss finish.
- Convenient shelves provide generous storage space.
- Geometric back wall design adds visual interest.
- 42" (1067 mm) x 36" (914 mm) x 75-3/4" (1926 mm) complete unit finished dimensions.
- Includes unattached Age-in-Place grab bars in Matte Silver finish

### Material

Compression-molded from our exclusive Vikrell® material.

### Installation

- Four-piece modular design with pivot "snap together" installation.
- Caulkless installation.

### **Recommended Products/Accessories**

1500D-42 Framed Pivot Shower Door

1505D-42 Framed Pivot Shower Door

1530D-42 Framed Pivot Shower Door

1535D-42 Framed Pivot Shower Door

5960-43 Framed Sliding Shower Door

6305-39 Frameless Pivot Shower Door

6505-39 Framed Pivot Shower Door

6506-39 Framed Pivot Shower Door

80001012 12" Grab Bar

80001018 18" Grab Bar

80001024 24" Grab Bar

80011032 32" Grab Bar

80001036 36" Grab Bar

### **Included Components**

Product consists of:

72252100 42" Shower Back Wall

72251100 42" Shower Base

72245103-V Shower End Wall Set with Grab Bars

## Codes/Standards

CSA B45.5/IAPMO Z124 ASTM E162 ASTM E662 Greenguard UL 2818 - Gold HUD, UM Bulletin 73

Warranty – Bathing Fixtures (and)
Kitchen and Utility Sinks Made of Solid
Vikrell® Material
STERLING® Warranty - Grab Bars
See website for detailed warranty information.

### Available Colors/Finishes

Color tiles intended for reference only.

Color	Code	Description


0 White

96 KOHLER Biscuit



### **Accord®**

# 42" shower with AIP grab bars 72250103-V

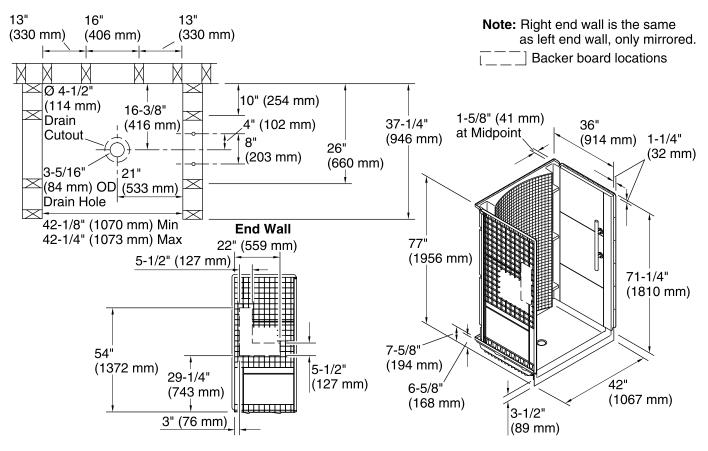

### **Technical Information**

All product dimensions are nominal.

Installation: Three-wall alcove

Drain location: Center

Minimum flat for door: 3-1/4" (83 mm)
Threshold height: 3-1/2" (89 mm)
Maximum door height: 72" (1829 mm)
Maximum door width: 38-5/8" (981 mm)

#### **Notes**

Install this product according to the installation instructions.

Studs should be positioned roughly as shown. Double studding is recommended for pivot shower door installations.

Attach grab bars at the specified backerboard locations only.

Shower base cannot be installed without the wall surround.