


ASSEMBLY INSTRUCTIONS

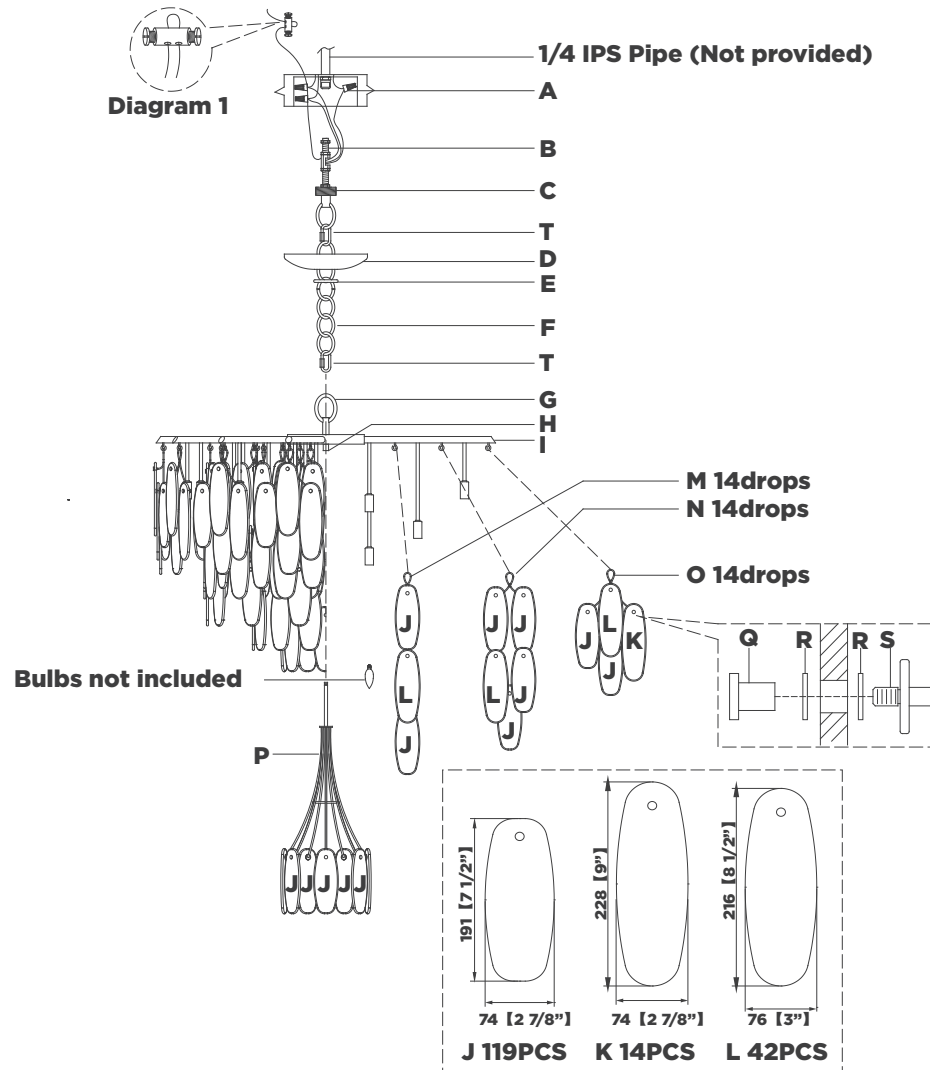

Cora Medium Waterfall Chandelier

Item # CHC5911

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Slip Joint Pliers	Measuring Tape	Chain Pliers
Wire Cutters		

- Carefully remove all parts from the box. Place on a clean, soft surface.
- It is recommended to install a 1/4 IPS threaded pipe, secured to a structural member of the building. Then install threaded nipple (**B**) into receiver and tighten with wrench.
NOTE: Item must be supported independent of the junction box due to hanging weight.
- Remove collar loop (**C**) from chain (**F**) and secure to threaded receiver attached to structural member by tightening locknut.
- Install canopy (**D**) to collar loop (**C**) and secure with collar ring (**E**).
- Determine desired overall length, and amount of chain (**F**) needed. Shorten chain using chain pliers. (Keep extra chain)
- Attach chain (**F**) to collar loop (**C**) and to fixture loop (**G**) using quick links (**T**). Secure quick links (**T**).
- Thread fixture wire, ground wire and safety cable through chain (**F**).

NOTE: When you reach the collar loop (**C**), ensure there is no tension on the wires. Cut excess wires, being sure to leave enough to reach the junction box. Do not cut safety cable.

VISUAL COMFORT & Co.



Item # CHC5911

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- NOTE:** Untwist wires and separate to prepare for connection.
11. Loosen cable lock and install to end of safety cable. Run safety cable through junction box and around structural member of building. Insert cable through cable lock and tighten the ends with a screwdriver to secure (See diagram 1).
 12. Connect fixture ground wire (bare copper) to the supply ground wire (usually green or bare copper) using wire nut **(A)**.
- NOTE:** It is imperative that the fixture is grounded.
13. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut **(A)**.
 14. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut **(A)**.
- CAUTION:** Do not reverse the hot and neutral connections.
15. Make sure all wire connections are tight, then carefully tuck into the junction box.

ASSEMBLY INSTRUCTIONS

Cora Medium Waterfall Chandelier

Item # CHC5911

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

16. Install canopy **(D)** to collar loop **(C)** and secure with collar ring **(E)**.
17. Install light bulbs into the sockets.
18. Attach rubber washers **(R)** to either side of alabaster panels **(J)**, then install to threaded nipple **(S)** on bracket **(P)** and secure with finials **(Q)**.
19. Thread bracket **(P)** to connector **(H)** on bottom of fixture frame **(I)**.
20. Attach rubber washers **(R)** to either side of alabaster panels **(J & L)**, then install to threaded nipple **(S)** on brackets **(M)** and secure with finials **(Q)**.
21. Hang brackets **(M)** to inner hooks on bottom of fixture frame **(I)**.
22. Attach rubber washers **(R)** to either side of alabaster panels **(J & L)**, then install to threaded nipple **(S)** on brackets **(N)** and secure with finials **(Q)**.
23. Hang brackets **(N)** to middle hooks on bottom of fixture frame **(I)**.
24. Attach rubber washers **(R)** to either side of alabaster panels **(J & K & L)**, then install to threaded nipple **(S)** on brackets **(O)** and secure with finials **(Q)**.
25. Hang brackets **(O)** to outer hooks on bottom of fixture frame **(I)**.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

