


ASSEMBLY INSTRUCTIONS

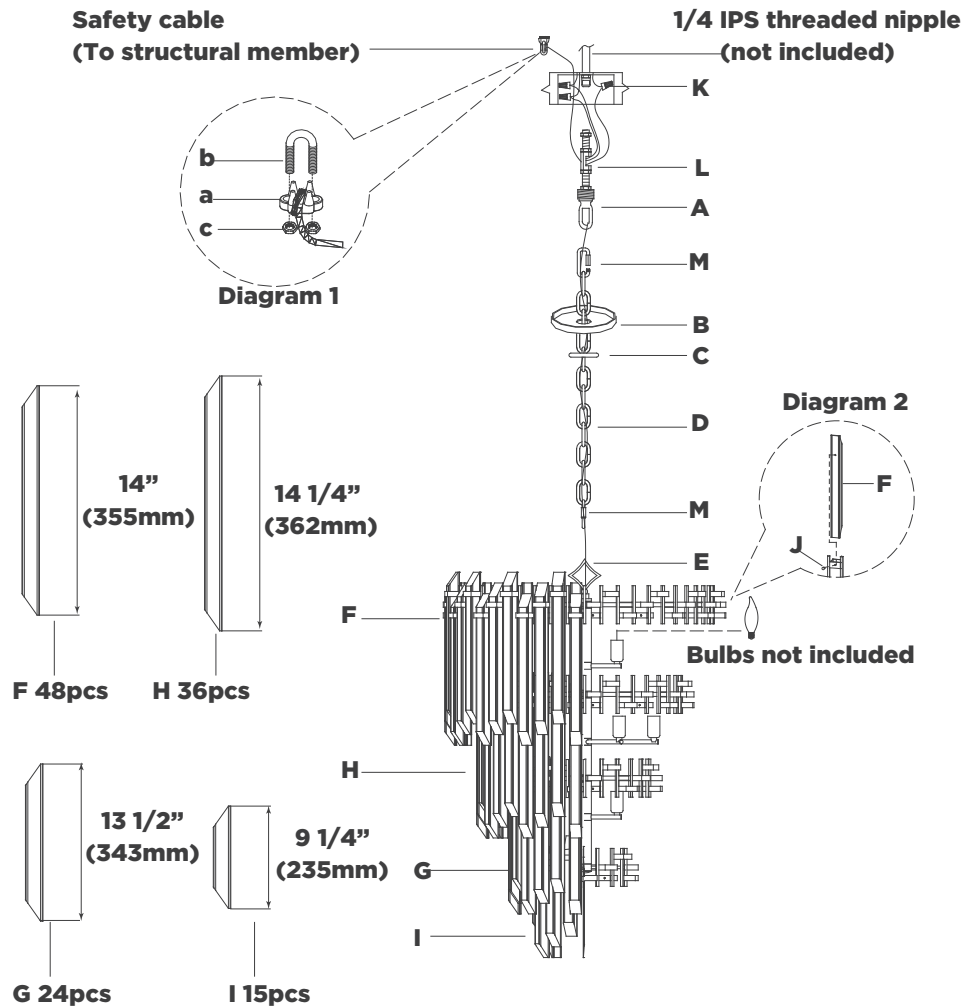

Adele Three-Tier Waterfall Chandelier

Item # SK5423

NOTICE:


This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Slip Joint Pliers	Measuring Tape	Chain Pliers
Wire Cutters		

- Carefully remove all parts from the box. Place on a clean, soft surface.
- It is recommended to install a 1/4 IPS threaded pipe, secured to a structural member of the building. Then install threaded nipple (**L**) into receiver and tighten with wrench.
NOTE: Item must be supported independent of the junction box due to hanging weight.
- Remove lock collar (**A**) from chain (**D**) and secure to threaded receiver attached to structural member by tightening locknut.
- Install canopy (**B**) to collar loop (**A**) and secure with collar ring (**C**).
- Determine desired overall length, and amount of chain (**D**) needed.
NOTE: Welded chain; carefully shorten chain as required with bolt cutters or manual cutting tool (Keep extra chain).
- Attach chain (**D**) to collar loop (**A**) and to fixture loop (**E**) using quick links (**M**). Secure quick links (**M**).

ASSEMBLY INSTRUCTIONS

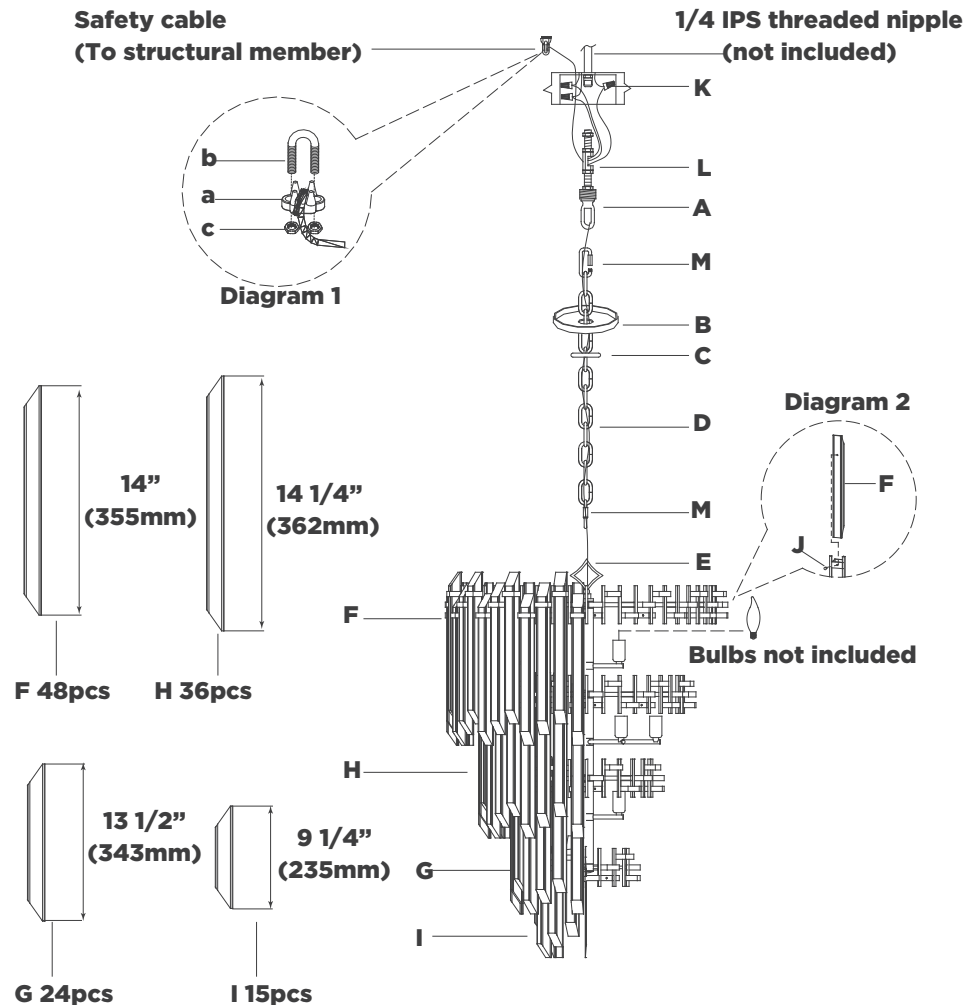

Adele Three-Tier Waterfall Chandelier


Item # SK5423

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- Thread fixture wire, ground wire and safety cable through chain **(D)**.
NOTE: When you reach the collar loop **(A)**, ensure there is no tension on the wires. Cut excess wires, being sure to leave enough to reach the junction box. Do not cut safety cable.
- Separate two sides of molded wire, and strip insulation on each 5/8".
- Loosen collar ring **(C)** and let canopy **(B)** slip down chain **(D)** carefully.
- Twist all fixture wires together, and slip through center hole of collar loop **(A)**.
NOTE: Untwist wires and separate to prepare for connection.
- Run safety cable through junction box and around structural member of building. Wrap the support cable around the saddle **(a)**, and secure with u-bolt **(b)** and hex nuts **(c)** (see diagram 1).
- Connect fixture ground wire (bare copper) to the supply ground wire (usually green or bare copper) using wire nut **(K)**.
NOTE: It is imperative that the fixture is grounded.
- Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut **(K)**.
- Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut **(K)**.
CAUTION: Do not reverse the hot and neutral connections.

ASSEMBLY INSTRUCTIONS

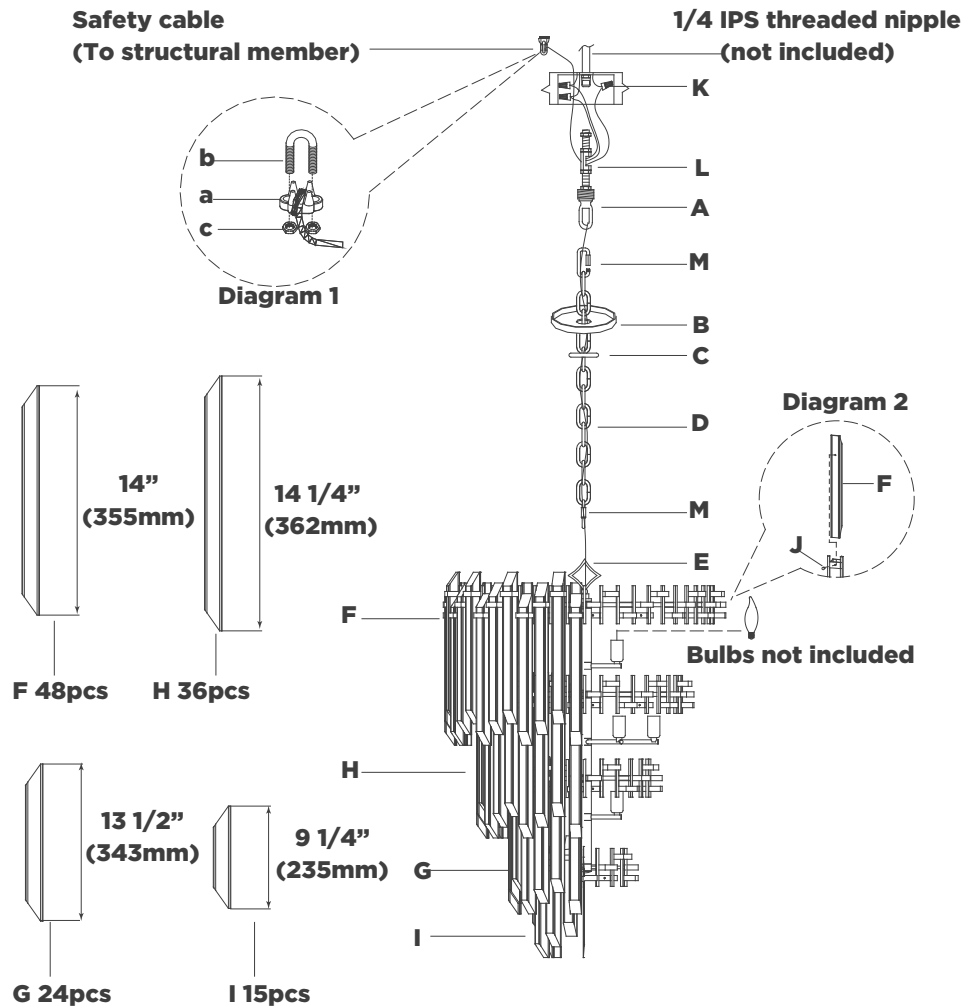

Adele Three-Tier Waterfall Chandelier

Item # SK5423

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- Make sure all wire connections are tight, then carefully tuck into the junction box.
 - Install canopy **(B)** to collar loop **(A)** and secure with collar ring **(C)**.
 - Install light bulbs into the sockets.
 - To install acrylic parts **(I, G, H, F)** completely back out the thumbscrews **(J)** on fixture frame, but do not remove.
 - Carefully slide acrylic part all the way down channel on frame and secure with thumbscrew **(J)** once lined up with small divot on back (see diagram 2).
- NOTE:** Start from bottom layer, installing all parts before moving up to next layer.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.