


ASSEMBLY INSTRUCTIONS

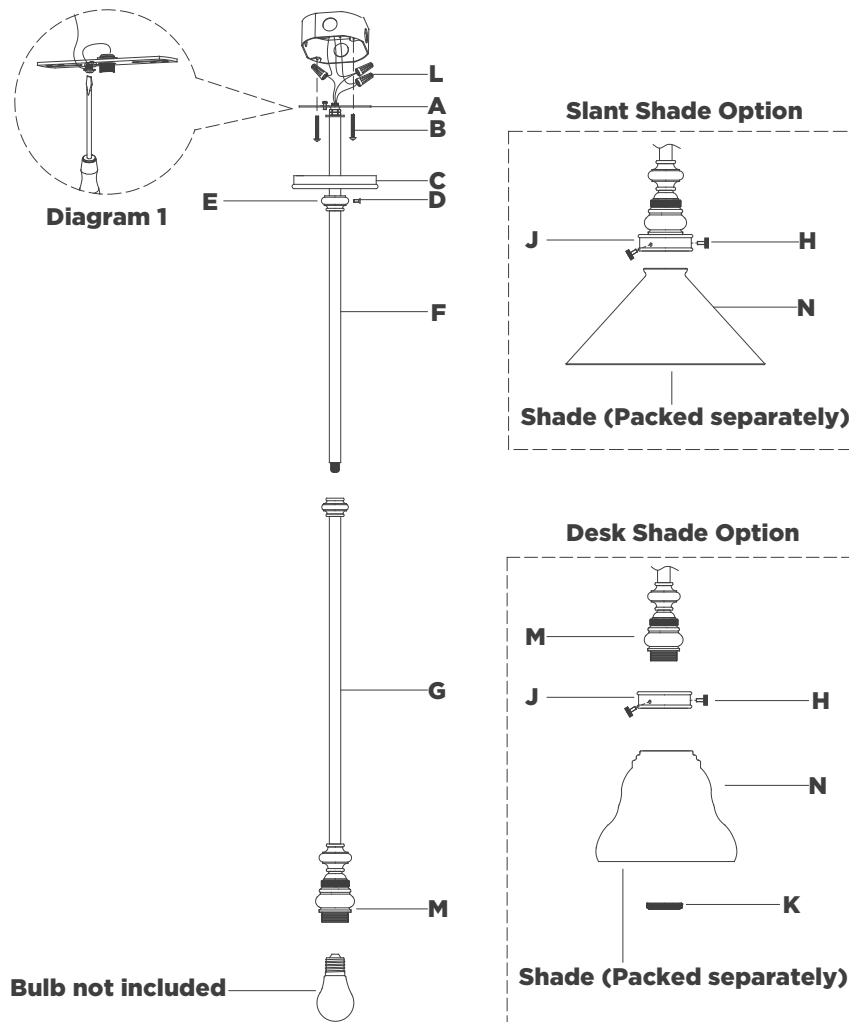

Boston Pendant

Item # SL5125

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver Slotted Screwdriver Wire Strippers
Wire Cutters

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Loosen screw **(D)**, then remove canopy **(C)** from mounting plate **(A)** by removing collar ring **(F)**.
3. Feed electrical wires through collar ring **(E)**, canopy **(C)** and top rod **(F)**.
4. Holding fixture upright, slide collar ring **(E)** and canopy **(C)** down and rest on top of bottom rod **(G)**. Then connect top rod **(F)** to bottom rod **(G)**.

NOTE: Slide components down slowly to avoid damage.

5. Install mounting plate **(A)** to the junction box and secure with mounting screws **(B)**.
6. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
7. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(L)**.
8. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(L)**.

ASSEMBLY INSTRUCTIONS

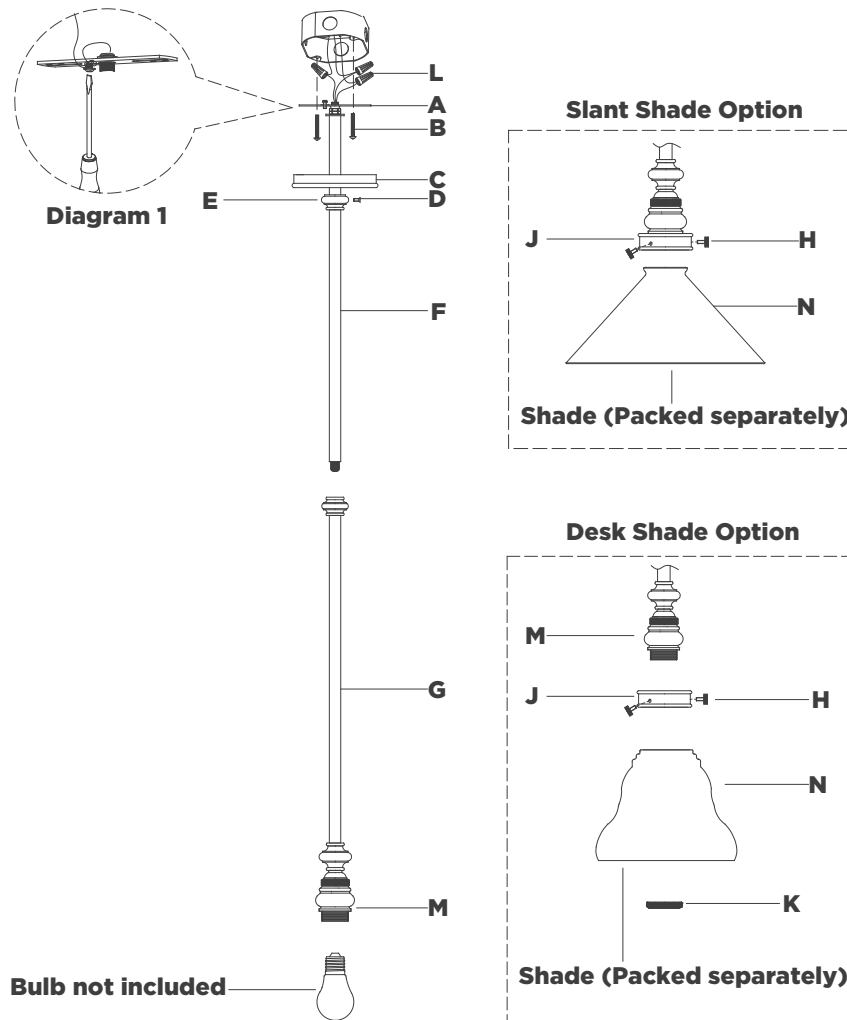

Boston Pendant

Item # SL5125

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

9. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(L)**.
- CAUTION:** Do not reverse the hot and neutral connections.
10. Make sure all wire connections are tight, then carefully tuck into the junction box.
11. Install canopy **(C)** to mounting plate **(A)** and secure with collar ring **(E)**. Tighten screw **(D)**.

WITHOUT SHADE OPTION:

12. Remove thumbscrews **(H)** from shade cover **(J)**.
13. Install light bulb into the socket.

SLANT SHADE OPTION:

12. Remove thumbscrews **(H)** from shade cover **(J)**, then install shade **(N)** to shade cover **(J)** and secure with thumbscrews **(H)**.
- NOTE:** Do not overtighten otherwise glass shade could be damaged.
13. Install light bulb into the socket.

DESK SHADE OPTION:

12. Remove thumbscrews **(H)** from shade cover **(J)**.
13. Install shade **(N)** to socket **(M)** and secure with socket ring **(K)**.
- NOTE:** Do not overtighten otherwise glass shade could be damaged.
14. Install light bulb into the socket.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

