


ASSEMBLY INSTRUCTIONS

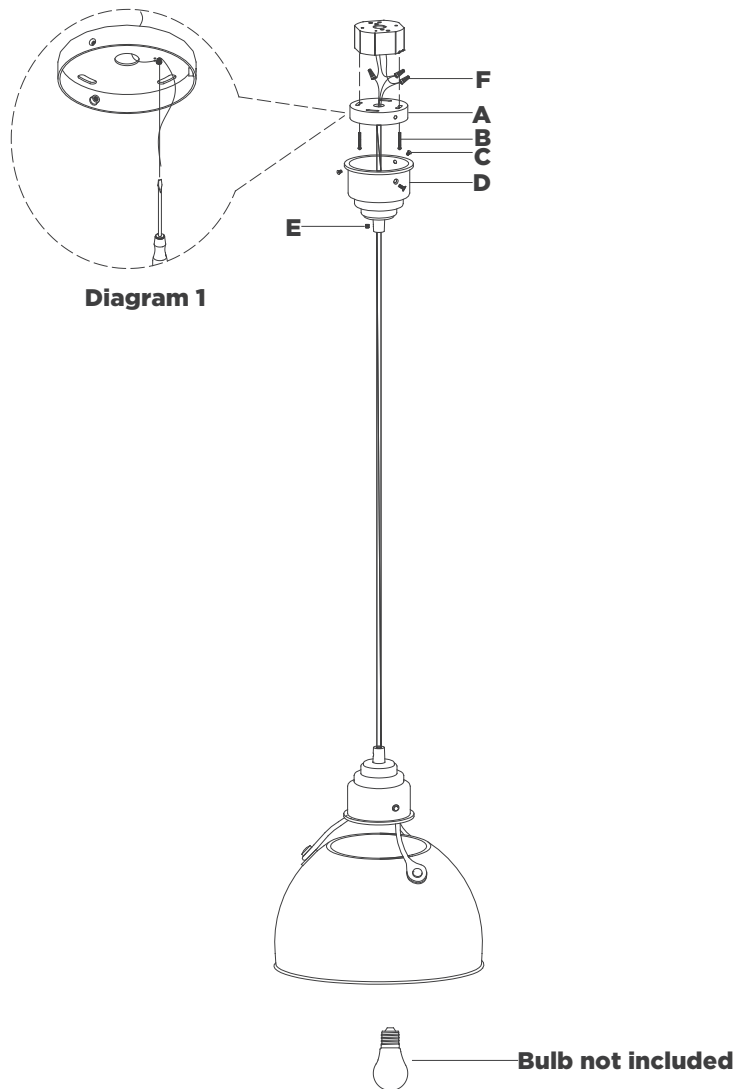

Eugene Small Pendant

Item # TOB5012

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Wire Cutters	Measuring Tape	

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove canopy (D) from mounting plate (A) by removing screws (C).
3. Install mounting plate (A) to the junction box and secure with mounting screws (B).
4. Gently set fixture on a flat, non-abrasive surface to assemble and adjust fixture hanging wires.
5. Loosen set screw (E), then adjust fixture cable to desired height, then tighten set screw (E).


NOTE: Set fixture to desired height before moving to next step.

6. After fixture height is achieved shorten wires by using a pair of cutters, leaving enough wire to reach the junction box.
7. Remove outer housing of wire by making a neat cut all the way around, about 1" from the end. Once cut is made, remove and discard the 1" piece of housing, exposing the electrical wires.

NOTE: Make sure not to cut too deep into housing or electrical wires could become damaged.

8. Separate wires and strip insulation on each 5/8".

ASSEMBLY INSTRUCTIONS

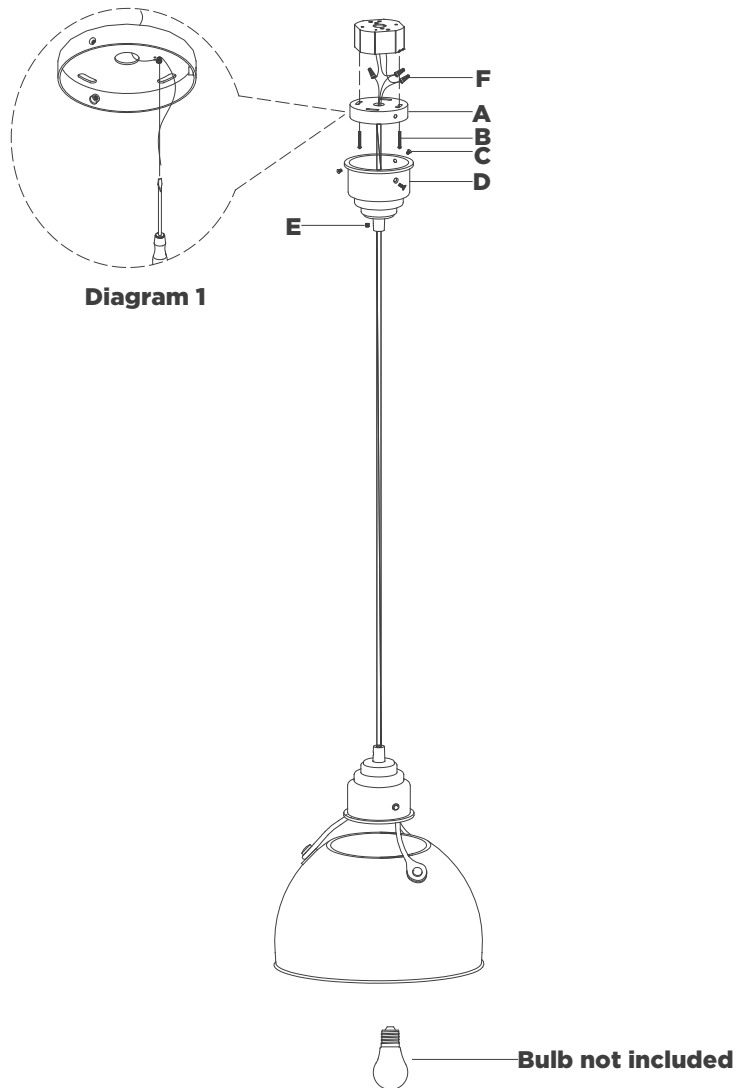

Eugene Small Pendant

Item # TOB5012

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(F)**.

NOTE: It is imperative that the fixture is grounded.

10. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(F)**.


11. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(F)**.

CAUTION: Do not reverse the hot and neutral connections.

12. Make sure all wire connections are tight, then carefully tuck into the junction box.
13. Install canopy **(D)** to mounting plate **(A)** and secure with screws **(C)**.
14. Install light bulb into the socket.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

ASSEMBLY INSTRUCTIONS

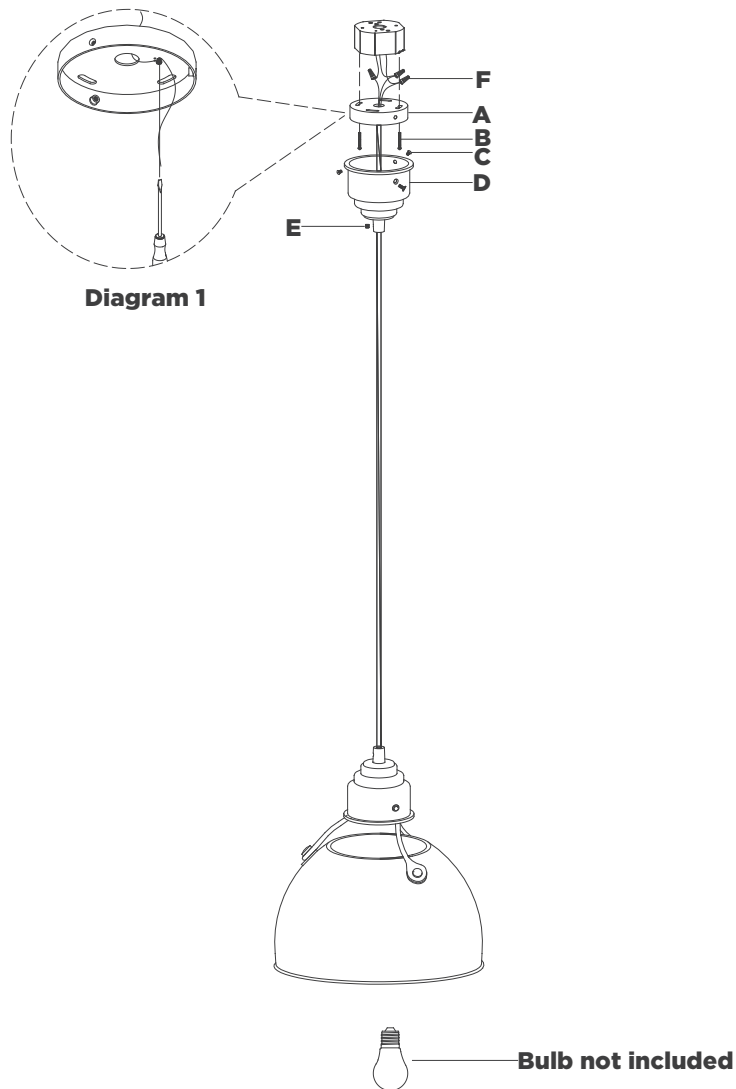

Eugene Small Pendant

Item # TOB5012

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

18. Install canopy **(D)** to mounting plate **(B)** and secure with screws **(E)**.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.