

## ASSEMBLY INSTRUCTIONS

### Henry Industrial Hanging Light


Item # TOB5042

#### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

#### TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver      Slotted Screwdriver      Wire Strippers  
Wire Cutters

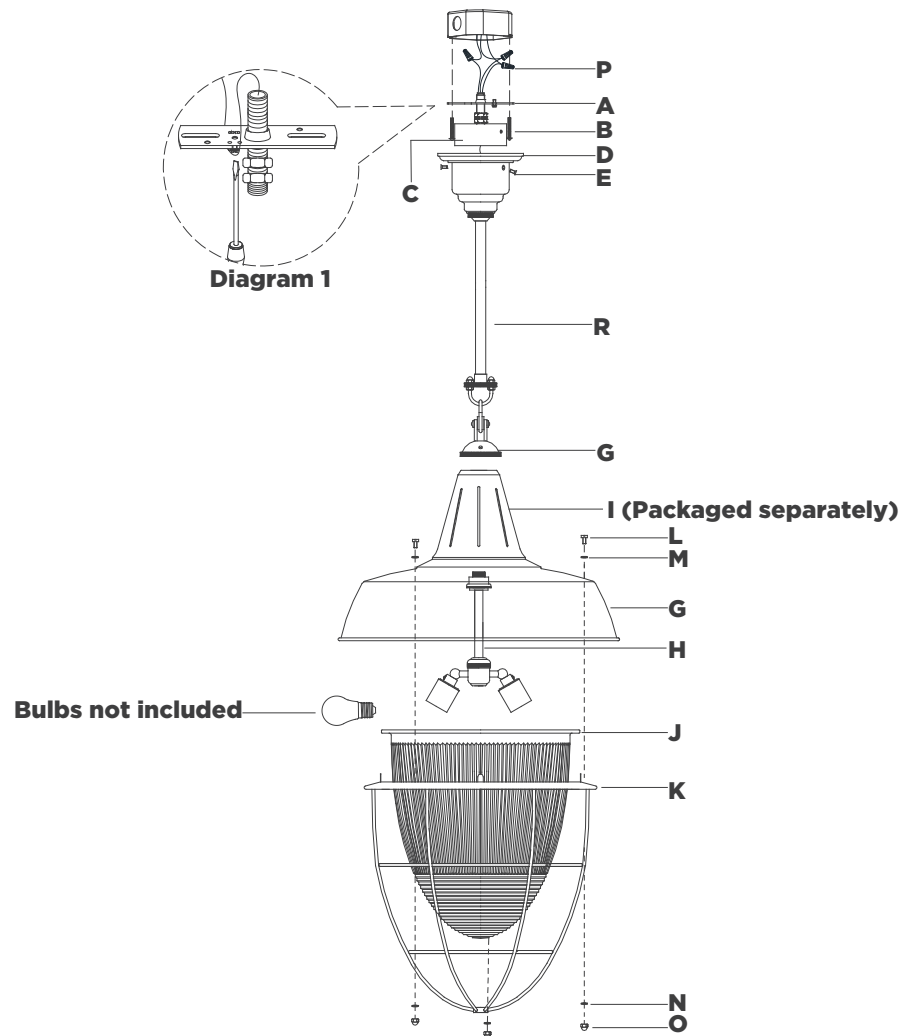

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate (A) from canopy (D) by removing screws (E).
3. Install mounting plate (A) to the junction box and secure with mounting screws (B).
4. Feed electrical wires through shade (I) and rod (R), then install shade (I) to shade cover (G) and secure with cluster (H).
5. Install light bulbs into the sockets.
6. Place shade (J) into shade frame (K), then install shade frame (K) to shade (I) by securing thumbscrew (L) and washer (M & N) to threaded caps (O).
7. Feed fixture wires through center hole of collar loop (C).
8. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (P).

**NOTE:** It is imperative that the fixture is grounded.


## ASSEMBLY INSTRUCTIONS

### Henry Industrial Hanging Light

Item # TOB5042

#### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

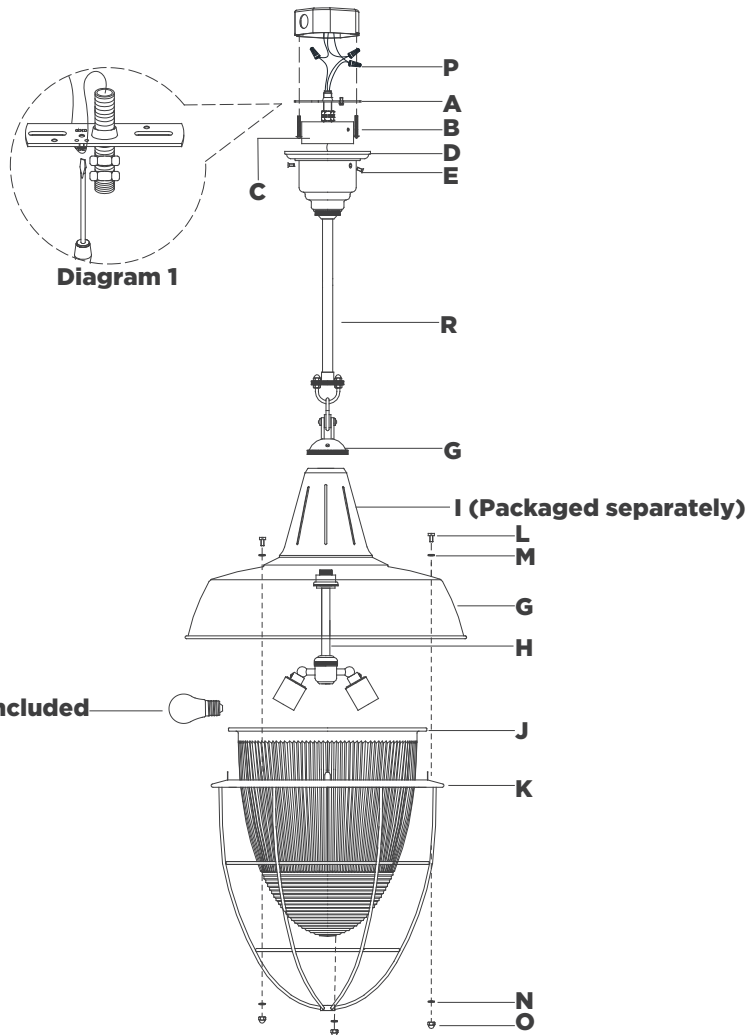

10. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(P)**.
11. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(P)**.

**CAUTION:** Do not reverse the hot and neutral connections.

12. Make sure all wire connections are tight, then carefully tuck into the junction box.
13. Install canopy **(D)** to collar loop **(C)** and secure with screws **(E)**.

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.