


## ASSEMBLY INSTRUCTIONS

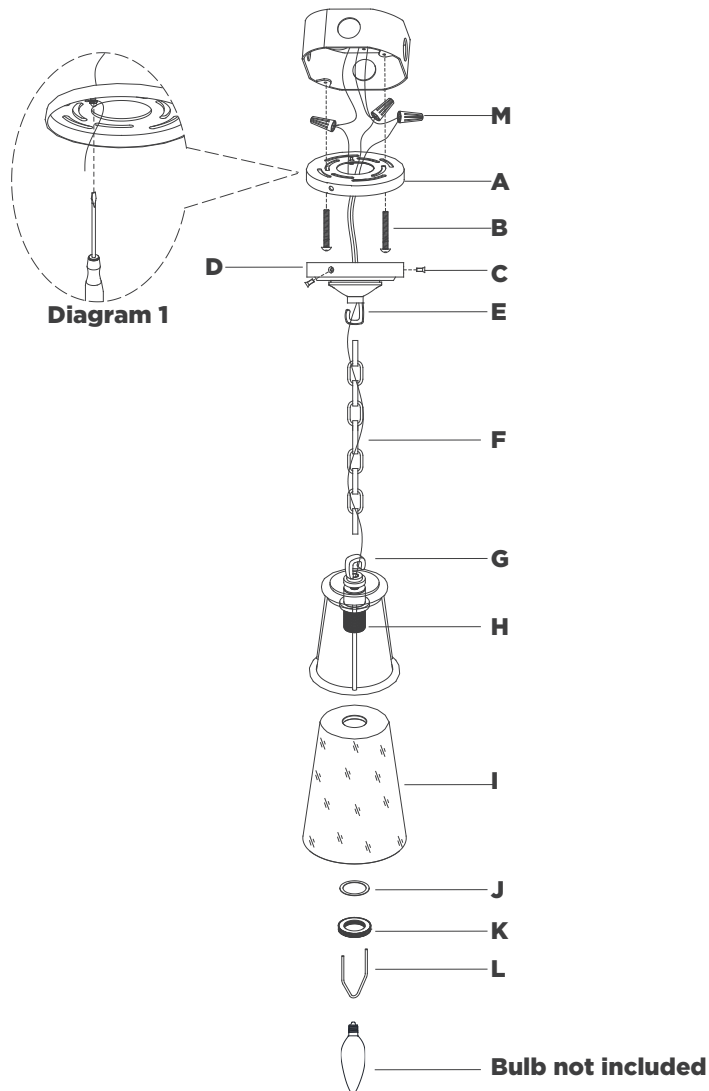

### Robinson Small Pendant

Item # TOB5751

#### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

#### TOOLS REQUIRED (NOT INCLUDED):

|                      |                     |                |
|----------------------|---------------------|----------------|
| Phillips Screwdriver | Slotted Screwdriver | Wire Strippers |
| Slip Joint Pliers    | Measuring Tape      | Chain Pliers   |
| Wire Cutters         |                     |                |

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate **(A)** from canopy **(D)** by removing canopy screws **(C)**.
3. Install mounting plate **(A)** to junction box and secure with mounting screws **(B)**.
4. Determine desired overall length, and amount of chain **(F)** needed. Shorten chain using chain pliers. (Keep extra chain)
5. Remove socket ring **(K)** and rubber washer **(J)** from socket **(H)**, then install glass shade **(I)** to socket **(H)** and secure with rubber washer **(J)** and socket ring **(K)** using provided wrench **(L)**.


**NOTE:** Do not overtighten otherwise glass shade could be damaged.

6. Attach chain **(F)** to canopy hook **(E)** and fixture loop **(G)**.
7. Thread fixture wire and ground wire through chain **(F)** and canopy **(D)**.

**NOTE:** When you reach the canopy **(D)**, ensure there is no tension on the wires. Cut excess wires, being sure to leave enough to reach the junction box.

8. Separate two sides of molded wire, and strip insulation on each 5/8".

## ASSEMBLY INSTRUCTIONS

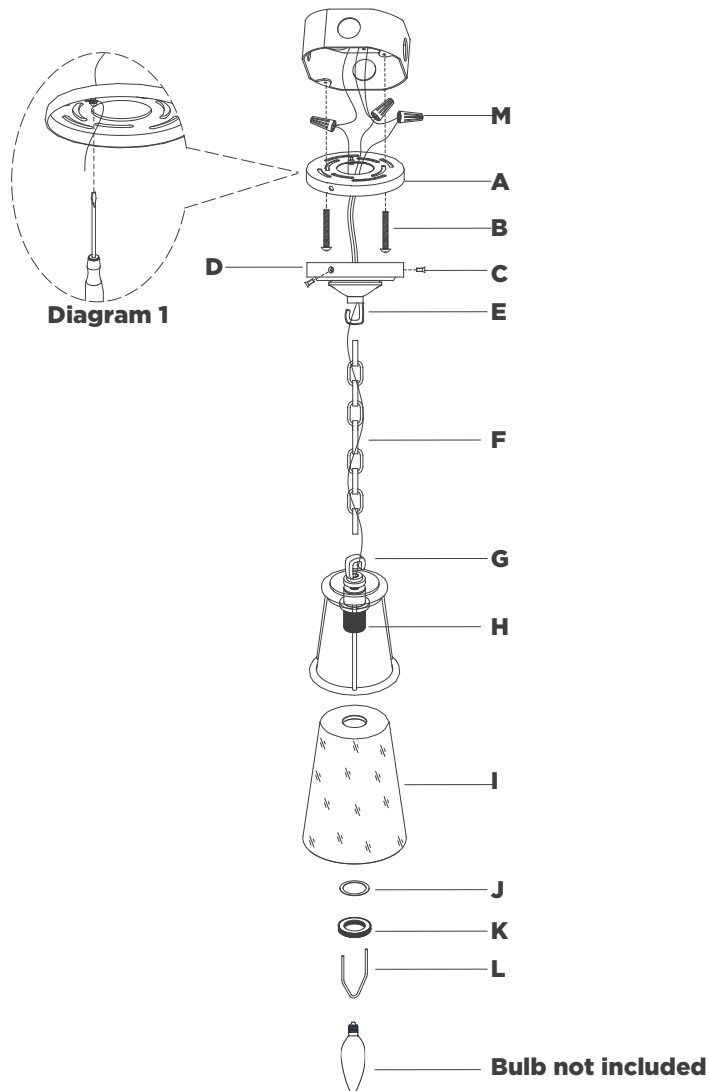

## Robinson Small Pendant

Item # TOB5751

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(M)**.

**NOTE:** It is imperative that the fixture is grounded.

10. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut **(M)**.
11. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut **(M)**.

**CAUTION:** Do not reverse the hot and neutral connections.

12. Make sure all wire connections are tight, then carefully tuck into the junction box.
13. Install canopy **(D)** to mounting plate **(A)** and secure with canopy screws **(C)**.
14. Install light bulb into the socket.

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.