


ASSEMBLY INSTRUCTIONS

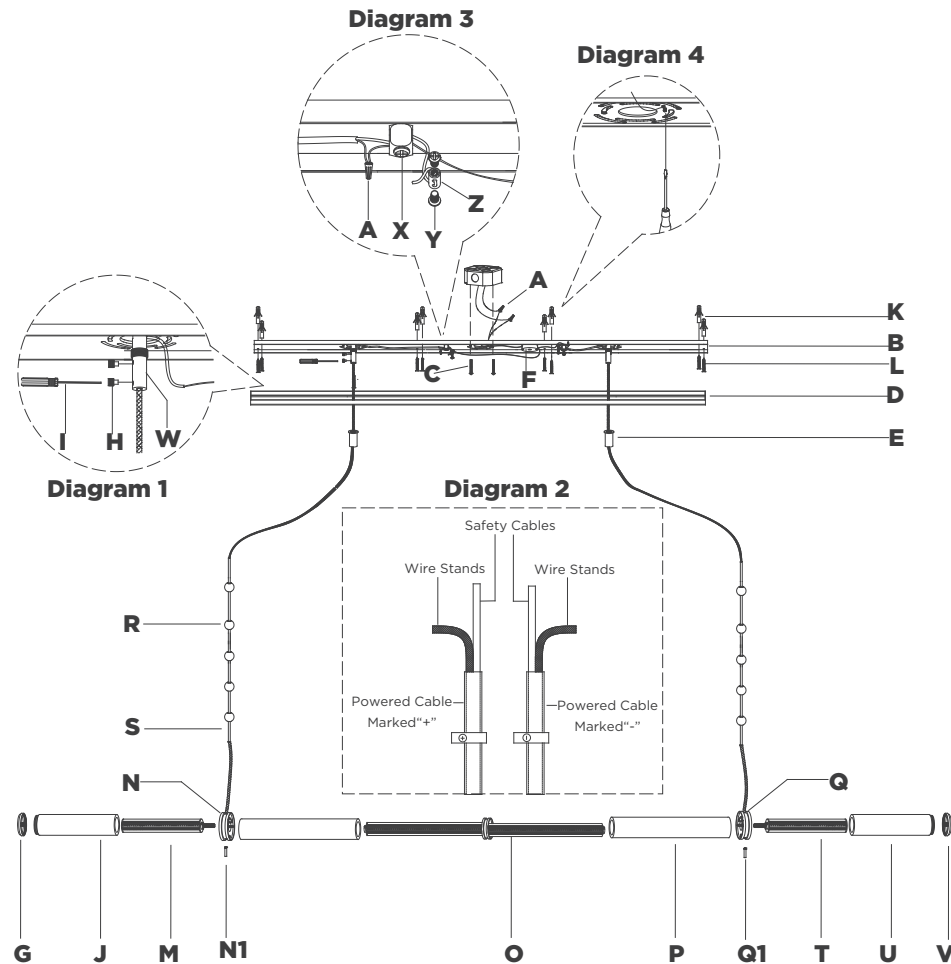

Marcell 56" Linear Chandelier

Item # AMB5030

NOTICE:


This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Wire Cutters	Measuring Tape	Hammer
Pencil	Drill	

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove canopy (D) from mounting plate (B) by removing collar rings (E).
3. Using mounting plate (B) as a guide, line up with the junction box and mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (K) into the holes using a hammer.
5. Install mounting plate (B) to the junction box and secure with mounting screws (C), then secure wood screws (L) to anchors (K).
6. Gently set fixture on a flat, non-abrasive surface to assemble and adjust fixture hanging wires.
7. Carefully slide shades (P) over light source (O).
8. Attach rings (N & Q) to light source (O) and secure with light sources (M & T).
9. Attach shades (J & U) to light sources (M & T) and secure with end caps (G & V) as shown in diagram.

ASSEMBLY INSTRUCTIONS

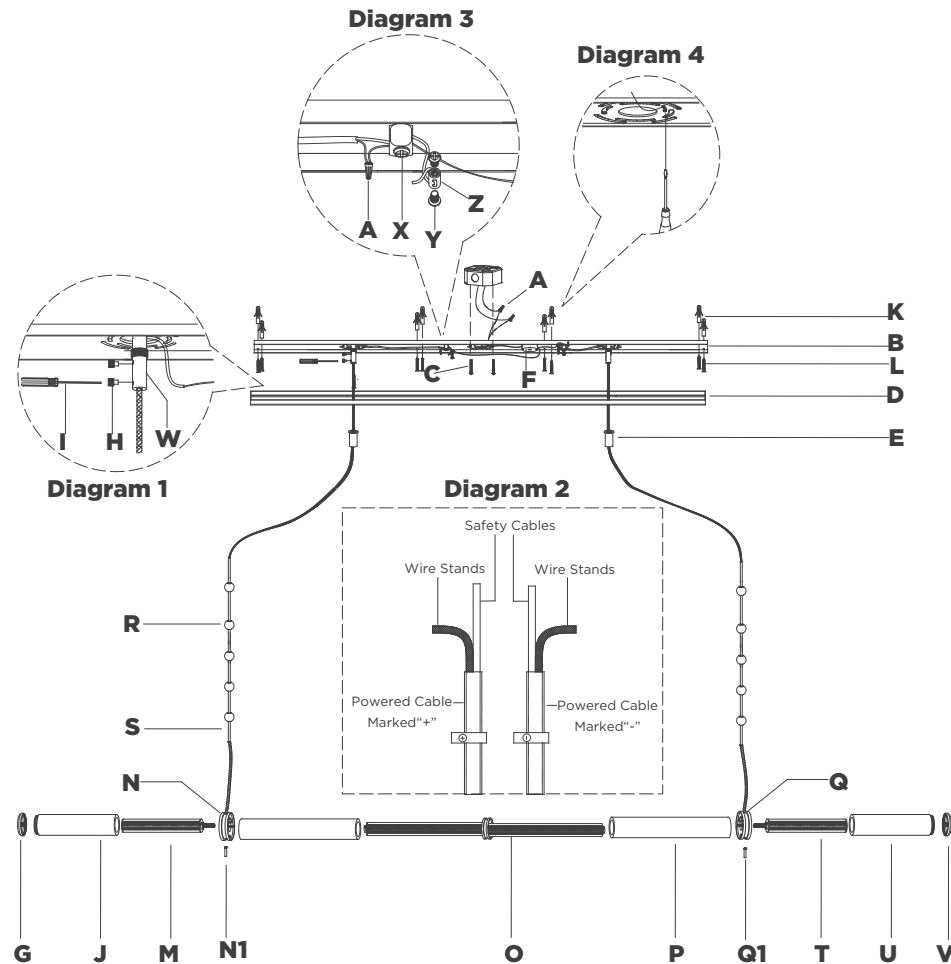

Marcell 56" Linear Chandelier


Item # AMB5030

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

10. Feed fixture wires through tubes (S), collar ring (E) and canopy (D).
11. Twist all fixture wires together, and slip through center hole of collar loop (W) and secure with set screws (H) using provided screwdriver (I) (see diagram 1).
NOTE: Set fixture to desired height before moving to next step.
12. After fixture height is achieved shorten wires by using a pair of cutters, leaving enough wire to connect to driver (F).
13. Remove outer housing of two wires (marked "+" & "-") by making a neat cut all the way around, about 4" from the end. Once cut is made, remove and discard the 4" piece of housing, exposing the electrical wires (see diagram 2).
14. Peel back the wire strands and separate it from the inner steel cable and separate wire strands. Cut excess wire strands, being sure to leave 5/8" for wiring.
15. Insert steel cables to wire strain reliefs (X) on mounting plate (B), then install cable lock to end of support cable. Insert other end of cable through the cable lock (Z) and tighten ends (Y) with a screwdriver to secure (see diagram 3).

ASSEMBLY INSTRUCTIONS

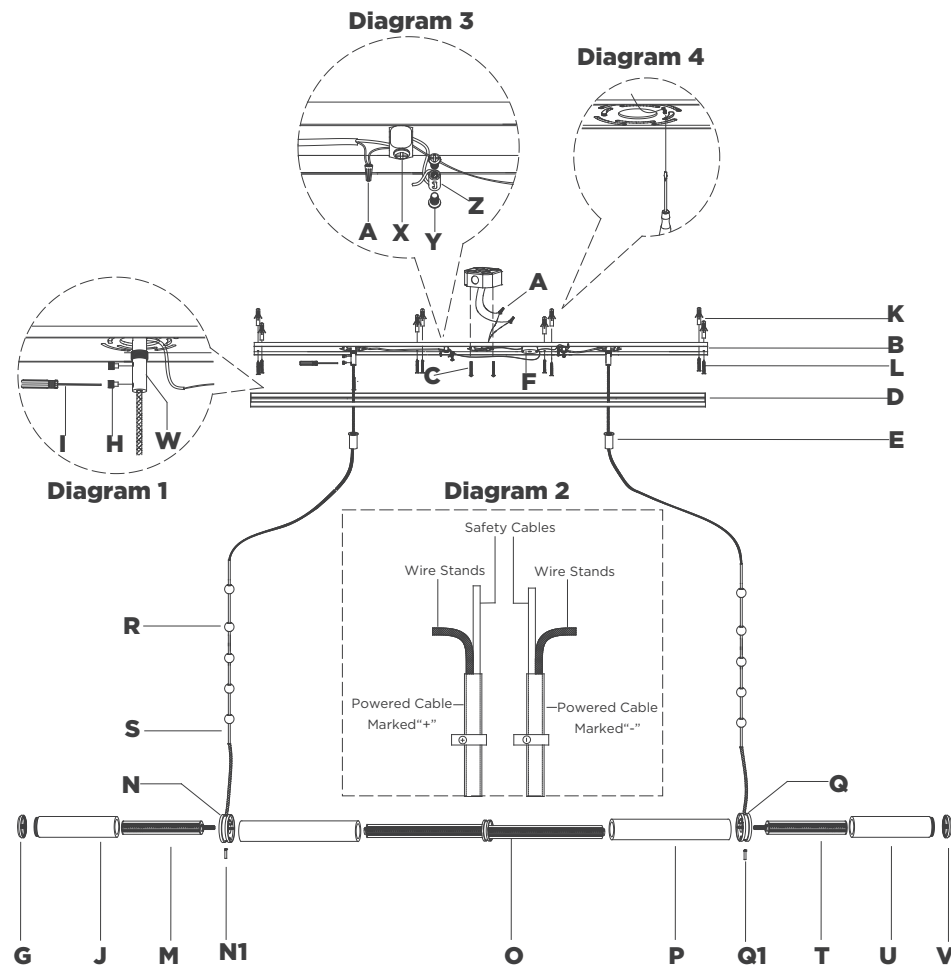

Marcell 56" Linear Chandelier

Item # AMB5030

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

16. Connect fixture neutral wire strands (marked "-") to driver (F) output wire (black) using wire nut (A) and wrap with electrical tape (see diagram 3).
 17. Connect fixture hot wire strands (marked "+") to driver (F) output wire (red) using wire nut (A) and wrap with electrical tape.
- CAUTION:** Do not reverse the hot and neutral connections.
18. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 4). Tighten.
- NOTE:** It is imperative that the fixture is grounded.
19. Connect driver (F) input neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).
 20. Connect driver (F) input hot wire (black) to the supply hot wire (usually black) using wire nut (A).
- CAUTION:** Do not reverse the hot and neutral connections.
21. Make sure all wire connections are tight, then carefully tuck into the junction box.
 22. Install canopy (D) to collar loop (W) and secure with collar rings (E).
 23. Adjust balls (R) to desired position.
 24. Thread rod (NI & Q1) to rings (N & Q).

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.