


ASSEMBLY INSTRUCTIONS

Option 1: Curved 2-Canopy Install_Canopy Mounted Driver

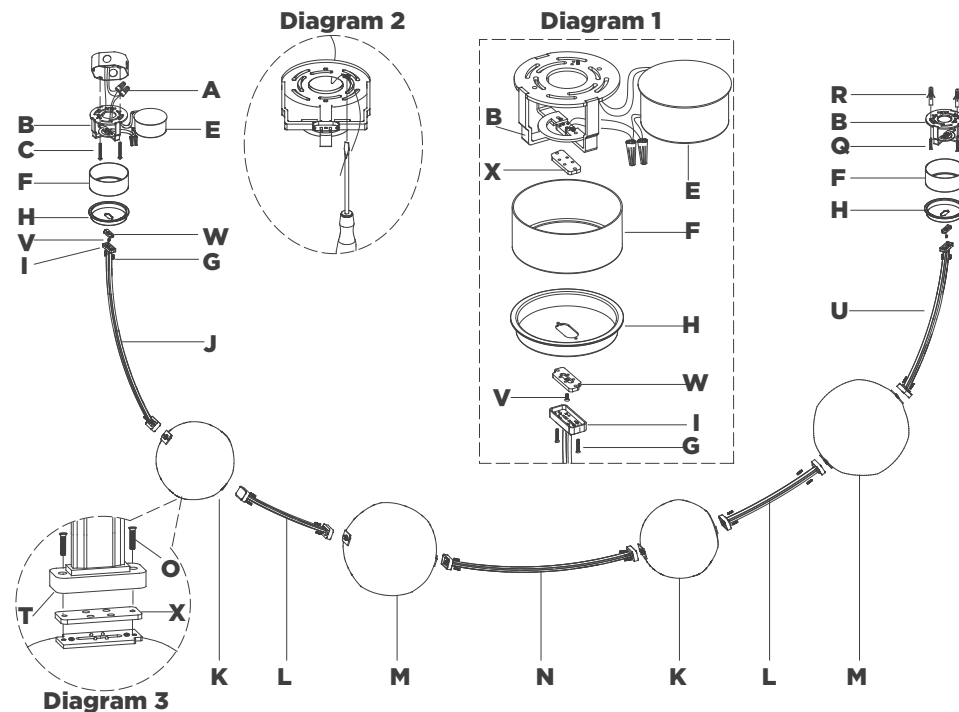

Dune 58" Belted Light

Item # AMB5050

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

PERSONS REQUIRED: Two

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove protective covers **(X)** from mounting plate **(B)** by removing screws **(G)**.
NOTE: Discard protective caps **(X)** after assembly.
3. Remove metal parts **(W)** from mounting plates **(B)** by removing screws **(V)** (see diagram 1).
NOTE: Carefully measure distance between mounting points for mounting plates **(B)** before moving to the next step.
4. Using mounting plate **(B)** as a guide, line up with the junction box and mark anchor positions.
5. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(R)** into the holes using a hammer.
6. Install mounting plate **(B)** to the junction box and secure with mounting screws **(C)**, then install the other mounting plate **(B)** to ceiling by securing wood screws **(Q)** to anchors **(R)**.
7. Connect fixture neutral wire (blue) to driver **(E)** output wire (blue) using wire nut **(A)**.
8. Connect fixture hot wire (red) to driver **(E)** output wire (red) using wire nut **(A)**.

ASSEMBLY INSTRUCTIONS

Option 1: Curved 2-Canopy Install_Canopy Mounted Driver

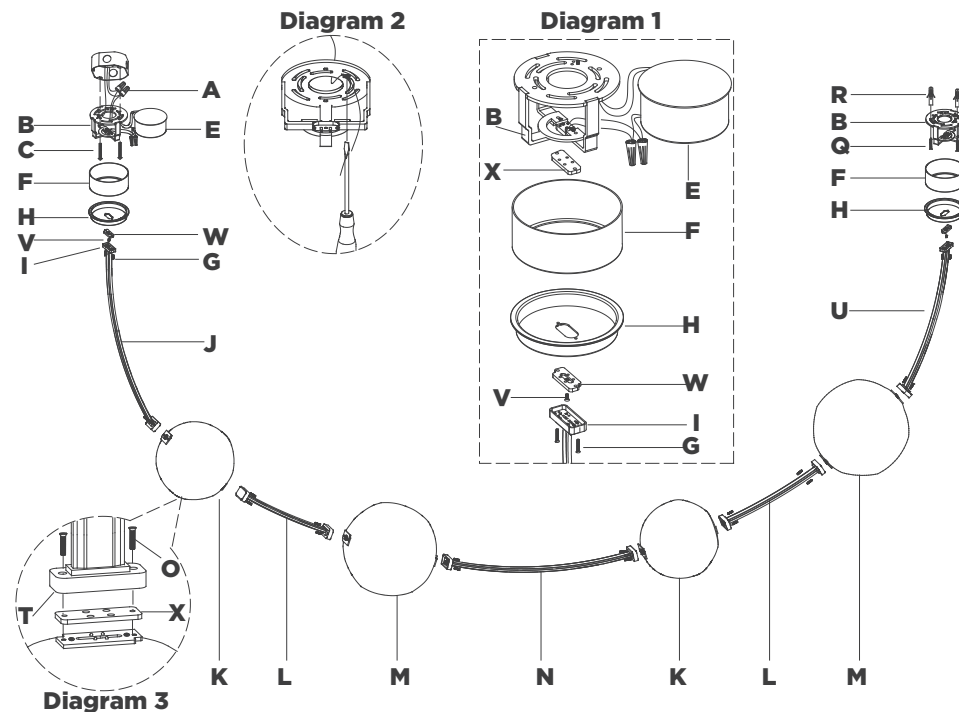

Dune 58" Belted Light

Item # AMB5050

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 2). Tighten.

NOTE: It is imperative that the fixture is grounded.


- Connect driver (E) input neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).
- Connect driver (E) input hot wire (black) to the supply hot wire (usually black) using wire nut (A).

CAUTION: Do not reverse the hot and neutral connections.

- Make sure all wire connections are tight, then carefully tuck into the junction box.
- Insert driver (E) into the middle of mounting plate (B) bracket.
- Install driver housings (F) and canopies (H) to mounting plates (B) and secure with metal parts (W) using screws (V).
- Install tape (J) to mounting plate by securing caps (I) using screws (G).
- Remove protective caps (X) from shades (K & M).
NOTE: Discard protective caps (X) after assembly.
NOTE: It is recommended to have a helper assist in supporting the fixture for steps 16-19.
- Install shade (K) to cap (T) and secure with screws (O) (see diagram 3).
NOTE: All light source must be installed before testing or restoring power.
- Install tape (L) to shade (K) and secure with screws (O).

ASSEMBLY INSTRUCTIONS

Option 1: Curved 2-Canopy Install_Canopy Mounted Driver

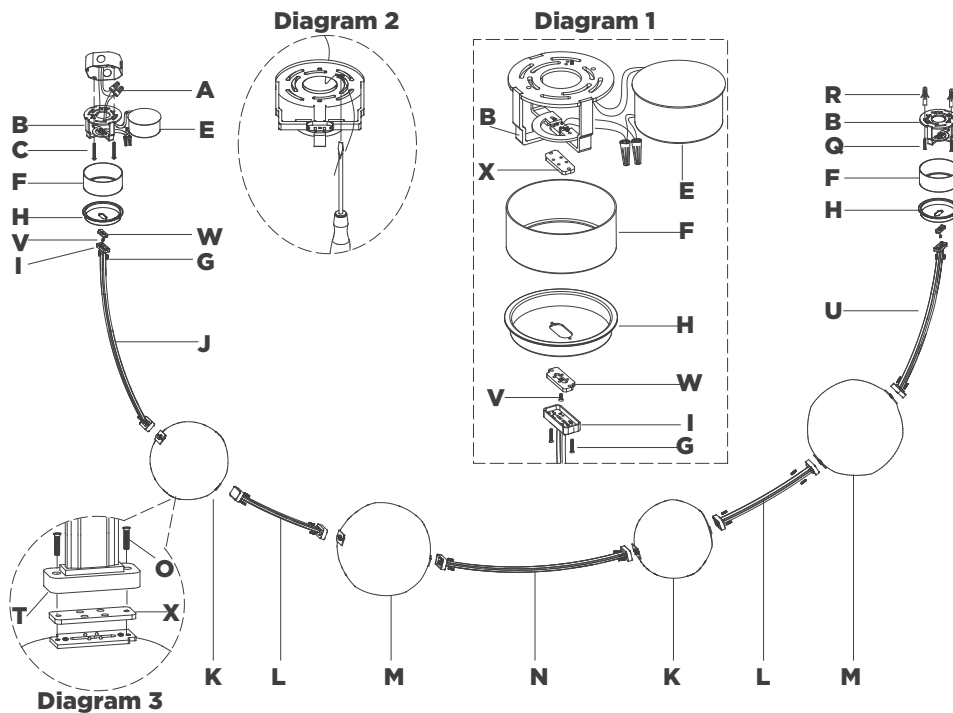

Dune 58" Belted Light

Item # AMB5050

NOTICE:


This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

19. Repeat above steps, install shade **(M & K & M)** and tape **(N & L & U)** as show on diagram.
20. Install tape **(U)** to the other mounting plate **(B)** and secure with screws **(G)**.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

ASSEMBLY INSTRUCTIONS

Option 2: Curved 2-Canopy_Ceiling Mounted Driver

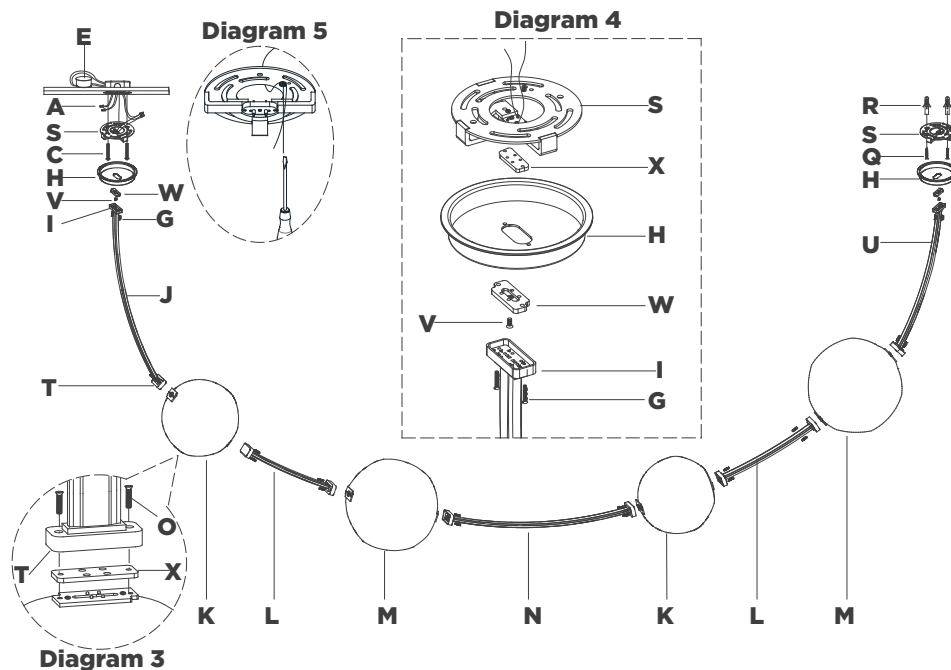

Dune 58" Belted Light

Item # AMB5050

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

PERSONS REQUIRED: Two

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Place driver (E) into ceiling and route all wires through one of the knockouts in the junction box.
3. Remove protective covers (X) from mounting plates (S) by removing screws (G).

NOTE: Discard protective caps (X) after assembly.

4. Remove metal parts (W) from mounting plates (S) by removing screws (V) (see diagram 4).


NOTE: Driver housing (F) and mounting plates (B) will be not be used for ceiling mounted assembly. Keep part and store for future use.

NOTE: Carefully measure distance between mounting points for mounting plates (S) before moving to the next step.

5. Using mounting plate (S) as a guide, line up with the junction box and mark anchor positions.
6. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (R) into the holes using a hammer.
7. Install mounting plate (S) to the junction box and secure with mounting screws (C), then install other mounting plate (S) to ceiling by securing wood screws (Q) to anchors (R).

ASSEMBLY INSTRUCTIONS

Option 2: Curved 2-Canopy_Ceiling Mounted Driver

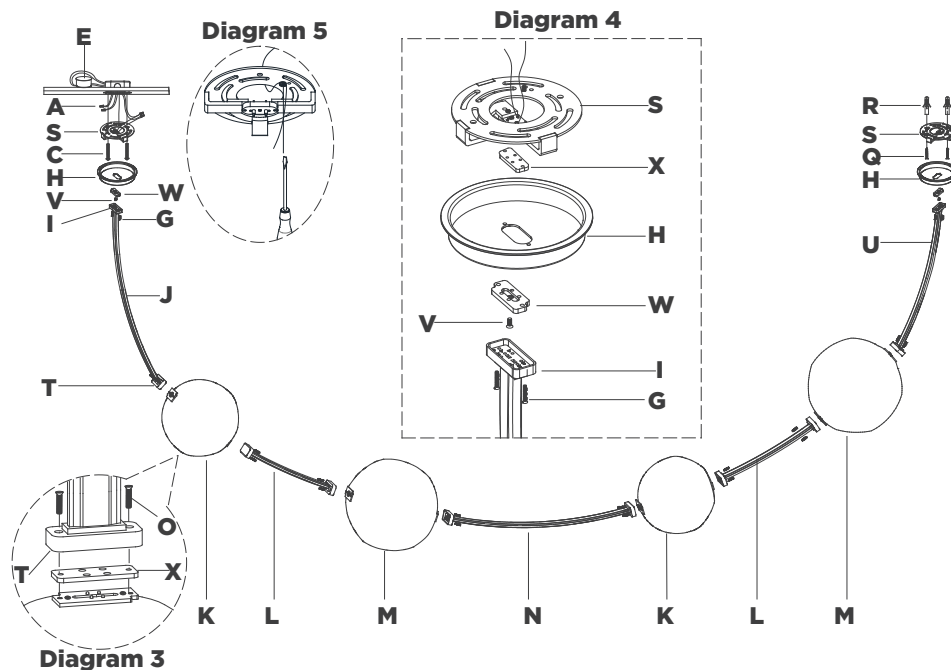

Dune 58" Belted Light

Item # AMB5050


NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

8. Connect fixture neutral wire (blue) to driver **(E)** output wire (blue) using wire nut **(A)**.
 9. Connect fixture hot wire (red) to driver **(E)** output wire (red) using wire nut **(A)**.
 10. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 5). Tighten.
- NOTE:** It is imperative that the fixture is grounded.
11. Connect driver **(E)** input neutral wire (white) to the supply neutral wire (usually white) using wire nut **(A)**.
 12. Connect driver **(E)** input hot wire (black) to the supply hot wire (usually black) using wire nut **(A)**.
- CAUTION:** Do not reverse the hot and neutral connections.
13. Make sure all wire connections are tight, then carefully tuck into the junction box.
 14. Install canopies **(H)** to mounting plates **(S)** and secure with metal parts **(W)** using screws **(V)**.
 15. Install tape **(J)** to mounting plate by securing caps **(I)** using screws **(G)**.
 16. Remove protective caps **(X)** from shades **(K & M)**.
- NOTE:** Discard protective caps **(X)** after assembly.
- NOTE:** It is recommended to have a helper assist in supporting the fixture for steps 16-19.
17. Install shade **(K)** to cap **(T)** and secure with screws **(O)** (see diagram 3).
- NOTE:** All light source must be installed before testing or restoring power.
18. Install tape **(L)** to shade **(K)** and secure with screws **(O)**.

ASSEMBLY INSTRUCTIONS

Option 2: Curved 2-Canopy_Ceiling Mounted Driver

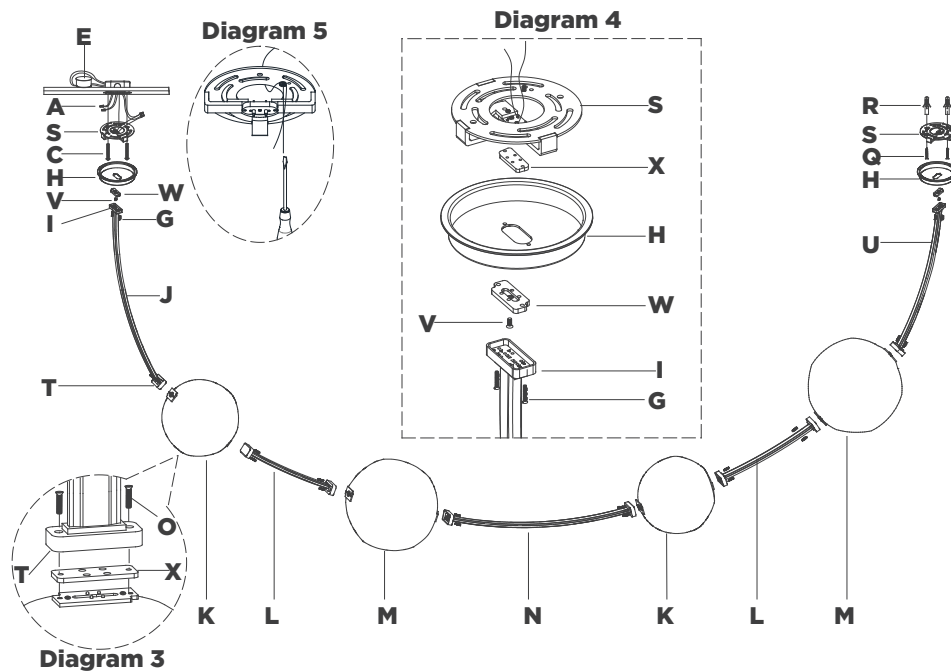

Dune 58" Belted Light

Item # AMB5050

NOTICE:


This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

19. Repeat above steps, install shade **(M & K & M)** and tape **(N & L & U)** as show on diagram.
20. Install tape **(U)** to the other mounting plate **(S)** and secure with screws **(G)**.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

ASSEMBLY INSTRUCTIONS

Option 3: 1-Canopy Vertical Install_Canopy Mounted Driver

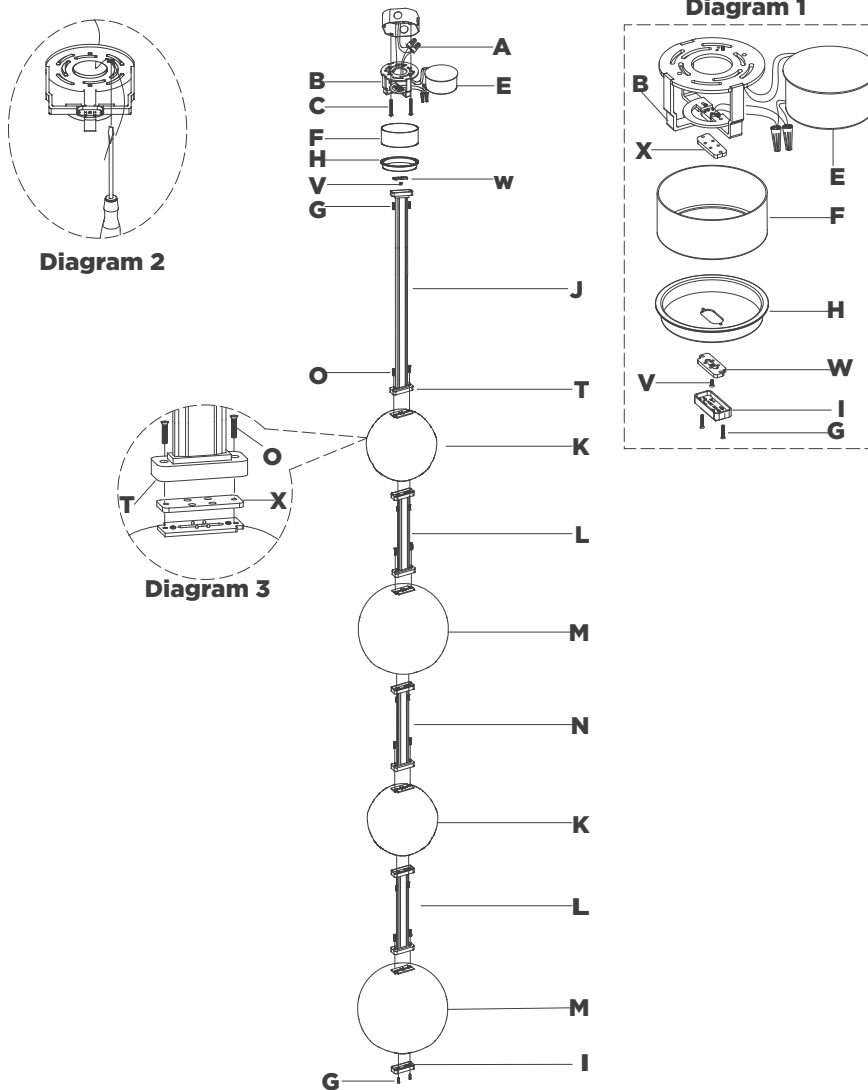

Dune 58" Belted Light

Item # AMB5050

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

PERSONS REQUIRED: Two

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove protective covers (X) from mounting plate (B) by removing screws (G).
NOTE: Discard protective caps (X) after assembly.
3. Remove metal part (W) from mounting plate (B) by removing screw (V) (see diagram 1).
NOTE: Mounting plates (S) and another canopies (H) and mounting plate (B) will not be used for 1-canopy vertical install. Keep part and store for future use.
4. Install mounting plate (B) to the junction box and secure with mounting screws (C).
5. Connect fixture neutral wire (blue) to driver (E) output wire (blue) using wire nut (A).
6. Connect fixture hot wire (red) to driver (E) output wire (red) using wire nut (A).
7. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 2). Tighten.
NOTE: It is imperative that the fixture is grounded.
8. Connect driver (E) input neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).

ASSEMBLY INSTRUCTIONS

Option 3: 1-Canopy Vertical Install_Canopy Mounted Driver

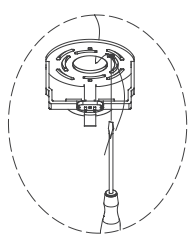


Diagram 2

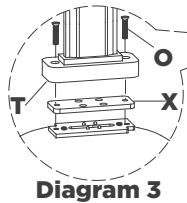


Diagram 3

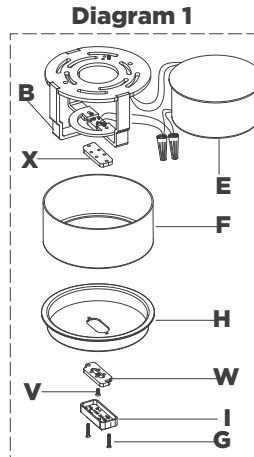
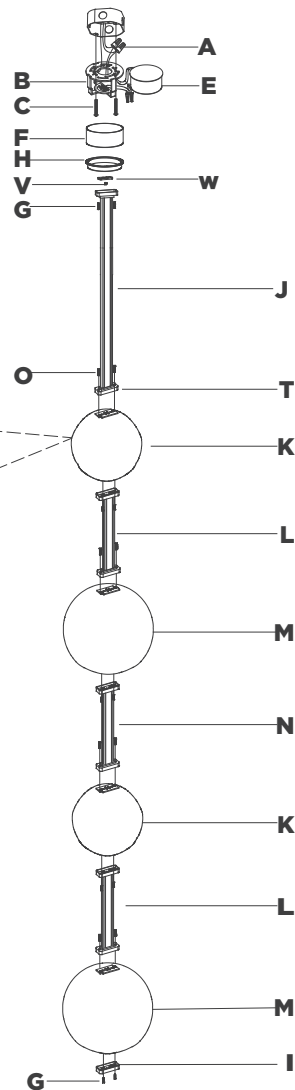


Diagram 1

Dune 58" Belted Light

Item # AMB5050

NOTICE:


This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

9. Connect driver **(E)** input hot wire (black) to the supply hot wire (usually black) using wire nut **(A)**.
CAUTION: Do not reverse the hot and neutral connections.
10. Make sure all wire connections are tight, then carefully tuck into the junction box.
11. Insert driver **(E)** into the middle of mounting plate **(B)** bracket.
12. Install driver housing **(F)** and canopy **(H)** to mounting plate **(B)** and secure with metal part **(W)** using screw **(V)**.
13. Install tape **(J)** to mounting plate **(B)** by securing caps **(I)** using screws **(G)**.
14. Remove protective caps **(X)** from shades **(K & M)**.
NOTE: Discard protective caps **(X)** after assembly.
NOTE: It is recommended to have a helper assist in supporting the fixture for steps 14-17.
15. Install shade **(K)** to cap **(T)** and secure with screws **(O)** (see diagram 3).
NOTE: All light source must be installed before testing or restoring power.
16. Install tape **(L)** to shade **(K)** and secure with screws **(O)**.
17. Repeat above steps, install shade **(M & K & M)** and tape **(N & L)** as show on diagram.
18. Install cap **(I)** to bottom of shade **(M)** and secure with screws **(G)**.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

ASSEMBLY INSTRUCTIONS

Option 4: 1-Canopy Vertical Install_Ceiling Mounted Driver

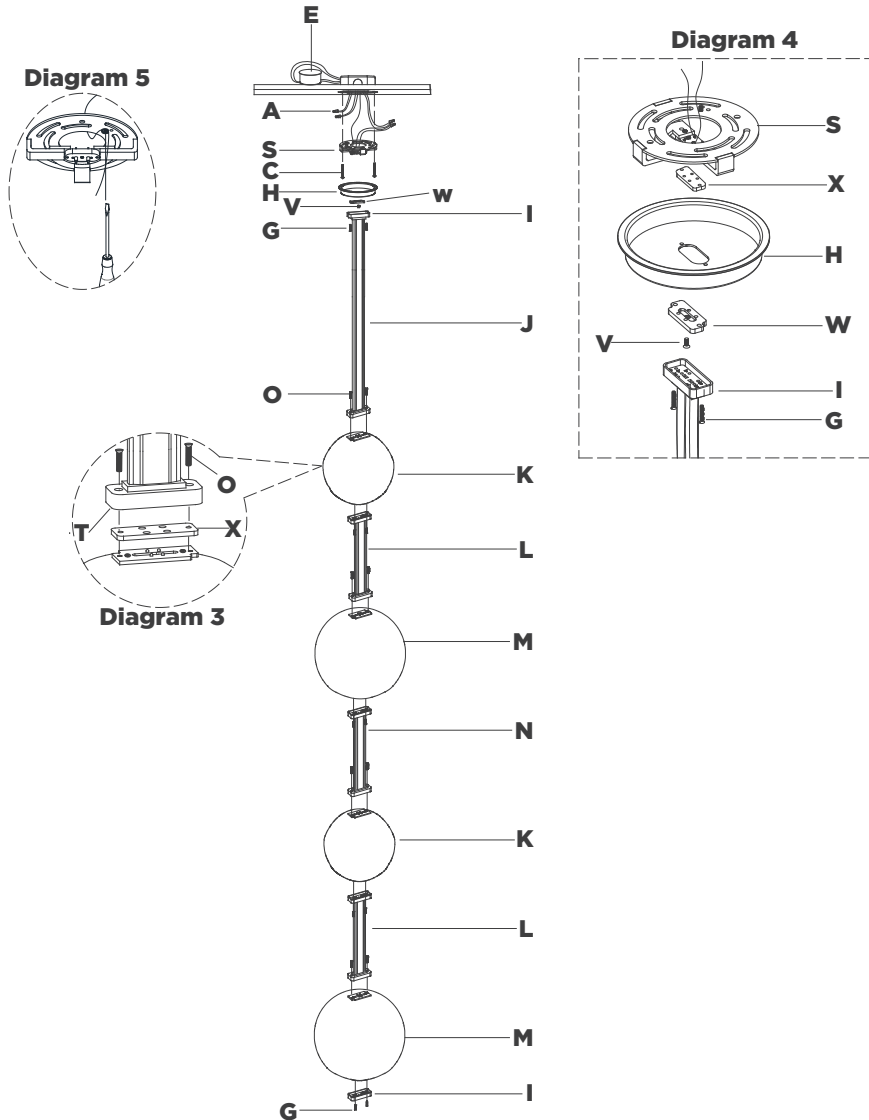

Dune 58" Belted Light

Item # AMB5050

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

PERSONS REQUIRED: Two

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Place driver (E) into ceiling and route all wires through one of the knockouts in the junction box.
3. Remove protective covers (X) from mounting plates (S) by removing screws (G).

NOTE: Discard protective caps (X) after assembly.

4. Remove metal part (W) from mounting plate (S) by removing screw (V) (see diagram 4).


NOTE: Driver housings (F), mounting plates (B) and another canopies (H) and mounting plate (S) will be not be used for 1-canopy vertical ceiling mounted assembly. Keep part and store for future use.

5. Install mounting plate (S) to the junction box and secure with mounting screws (C).
6. Connect fixture neutral wire (blue) to driver (E) output wire (blue) using wire nut (A).
7. Connect fixture hot wire (red) to driver (E) output wire (red) using wire nut (A).
8. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 5). Tighten.

NOTE: It is imperative that the fixture is grounded.

ASSEMBLY INSTRUCTIONS

Option 4: 1-Canopy Vertical Install_Ceiling Mounted Driver

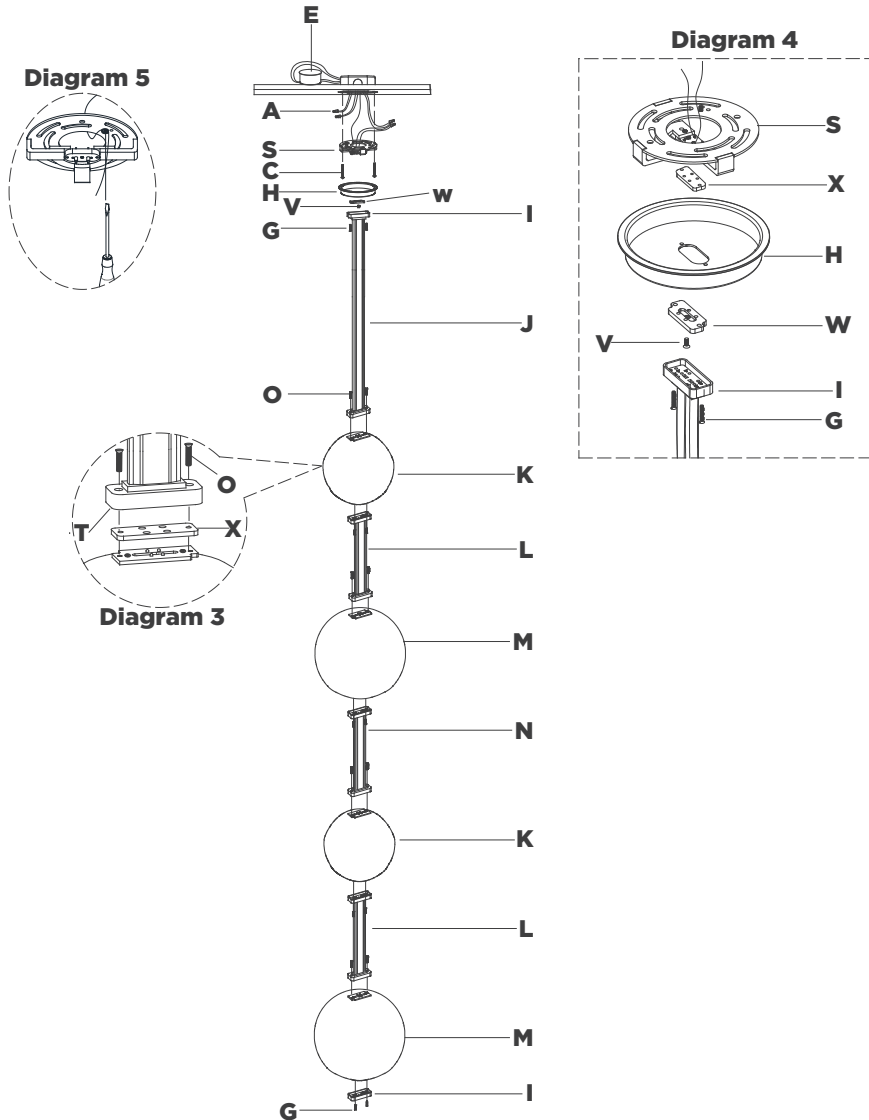

Dune 58" Belted Light

Item # AMB5050

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- Connect driver (E) input hot wire (black) to the supply hot wire (usually black) using wire nut (A).

CAUTION: Do not reverse the hot and neutral connections.

- Make sure all wire connections are tight, then carefully tuck into the junction box.
- Insert driver (E) into the middle of mounting plate (B) bracket.
- Install canopy (H) to mounting plate (S) and secure with metal part (W) using screw (V).
- Install tape (J) to mounting plate (S) by securing caps (I) using screws (G).
- Remove protective caps (X) from shades (K & M).
NOTE: Discard protective caps (X) after assembly.
NOTE: It is recommended to have a helper assist in supporting the fixture for steps 14-17.
- Install shade (K) to cap (T) and secure with screws (O) (see diagram 3).
NOTE: All light source must be installed before testing or restoring power.
- Install tape (L) to shade (K) and secure with screws (O).
- Repeat above steps, install shade (M & K & M) and tape (N & L) as show on diagram.
- Install cap (I) to bottom of shade (M) and secure with screws (G).

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.