


ASSEMBLY INSTRUCTIONS

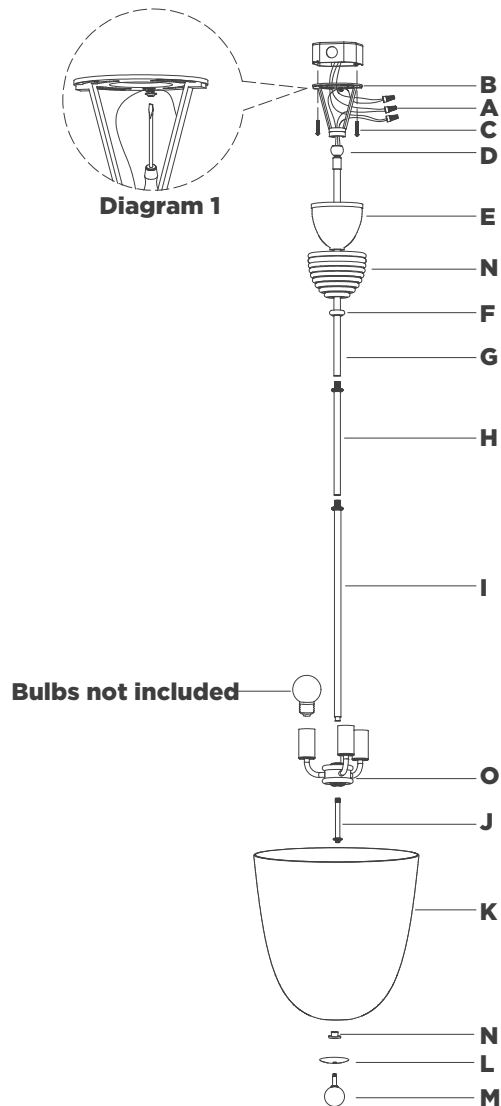

Brisa 13" Uplight Pendant

Item # ARN5230

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver Slotted Screwdriver Wire Strippers
Wire Cutters

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove canopy (E) and glass cover (N) from mounting plate (B) by removing collar ring (F).
3. Install mounting plate (B) to the junction box and secure with mounting screws (C).
4. Feed electrical wires through bottom rod (I) and connect to fixture cluster (O). Repeat for middle rod (H), connecting to bottom rod (I).
5. Continue feeding fixture wires through collar ring (F), glass cover (N), canopy (E) and top rod (G).
6. Holding fixture upright, slide collar ring (F), glass cover (N) and canopy (E) down rods and rest on top of fixture cluster (O). Then connect top rod (G) to rod (H).

NOTE: Slide components down slowly to avoid damage.

7. Hang fixture swivel ball (D) to the center of mounting plate (B).
8. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".

ASSEMBLY INSTRUCTIONS

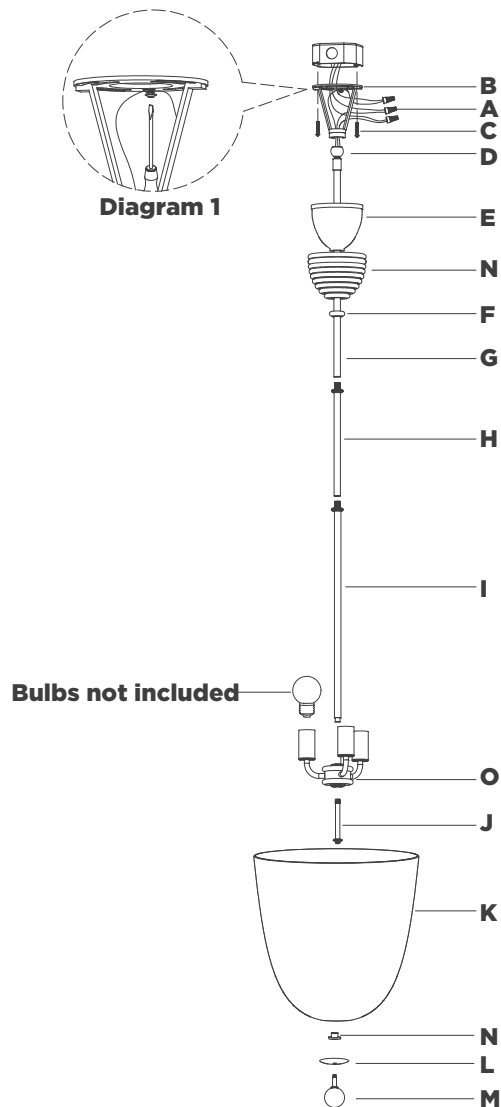

Brisa 13" Uplight Pendant

Item # ARN5230

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (A).

NOTE: It is imperative that the fixture is grounded.

10. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).
11. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut (A).

CAUTION: Do not reverse the hot and neutral connections.

12. Make sure all wire connections are tight, then carefully tuck into the junction box.
13. Install canopy (E) and glass cover (N) to mounting plate (B) and secure with collar ring (F).
14. Install rod (J) to bottom of fixture cluster (O).
15. Remove threaded cap (N) from rod (J), then install glass shade (K) to rod (J) and secure with threaded cap (N).
- NOTE:** Do not overtighten otherwise shade could become damaged.
16. Install cap (L) to shade (K) and secure with finial (M).
17. Install light bulbs into the sockets.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.