


ASSEMBLY INSTRUCTIONS

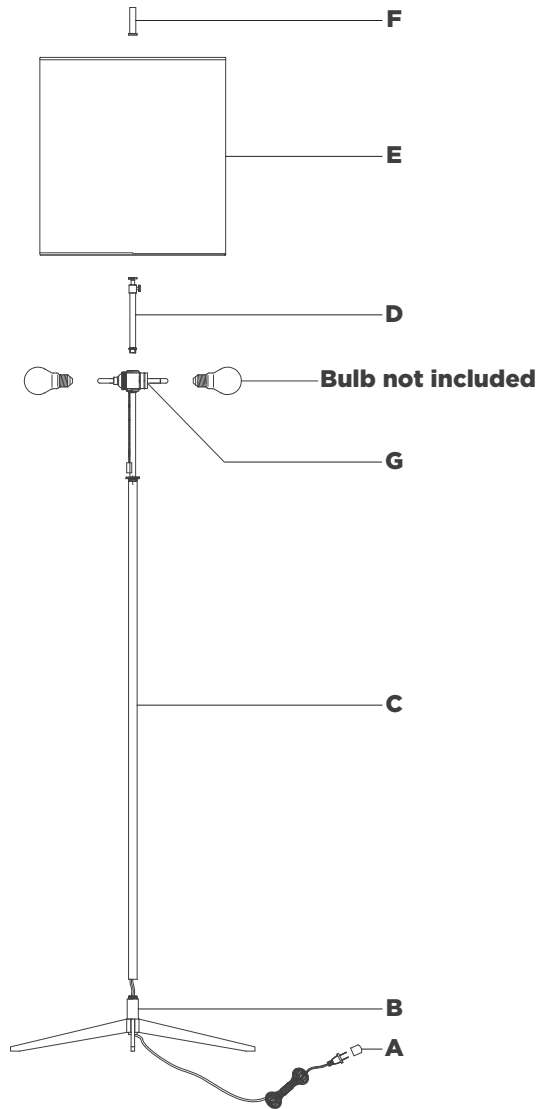

Caron Floor Lamp

Item # TOB1153

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Thread body tube **(C)** to base **(B)**.
3. Thread shade riser **(D)** to the top of lamp body. adjust shade riser **(D)** to desired height, then tighten adjustment knob.
4. Remove finial **(F)** from shade riser **(D)**.
5. Remove shade **(E)** from packaging and install to shade riser **(D)** by securing with finial **(F)**.
NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.
6. Install light bulb into the socket.
7. Remove protective cover **(A)** from plug.
8. Plug into electrical outlet and test the fixture.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.