

# INSTALLATION INSTRUCTIONS

## Contempo Wall Faucet & Tub Filler Extension

Part #5550-EXT



### Materials provided:

- 2 Valve Extensions
- 2 Extension Sleeves


### Required (not included):

P/N #5550-RGH Rough Valve




### Recommended tools:

- 17mm Open End Wrench
- O-Ring Lubricant

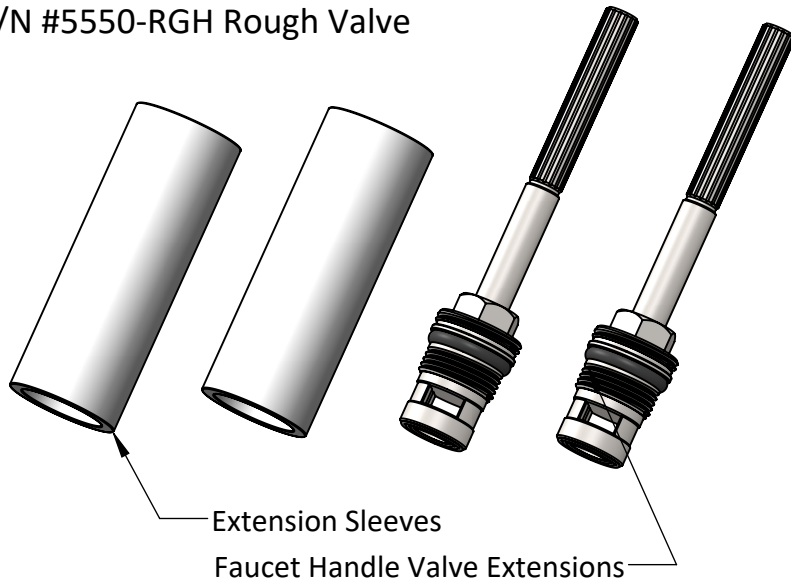

### Component Detail

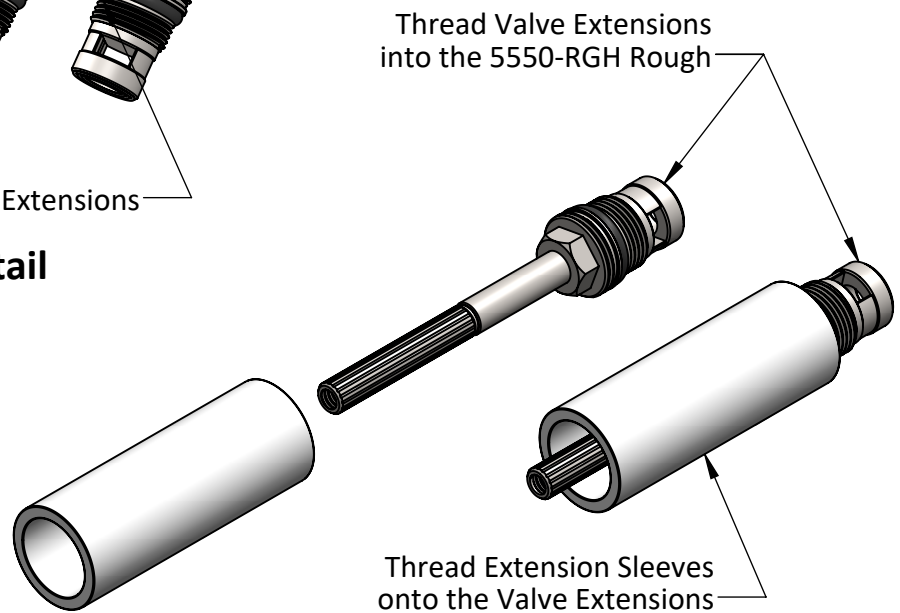

### Installation

**Step 1:** Apply suitable lubricant to the Faucet Handle Valve Extension O-rings.

**Step 2:** Then thread the Faucet Handle Valve Extensions (Hot and Cold) onto the 5550-EXT Rough, and tighten securely using a 17mm wrench.

**Step 3:** Thread the Extension Sleeves onto the Valve Extensions, and hand tighten.