CRYSTORAMA LIGHTING

Crystorama.com

ASSEMBLY INSTRUCTION MODEL# ADD-423-AG-AU

IMPORTANT: Power to the fixture must remain **OFF** throughout the entire installation process and must not be restored until all glass heads have been fully installed to prevent damage to the LED components.

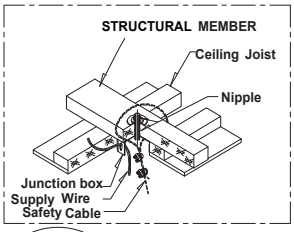

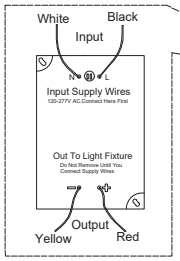

Wiring diagram

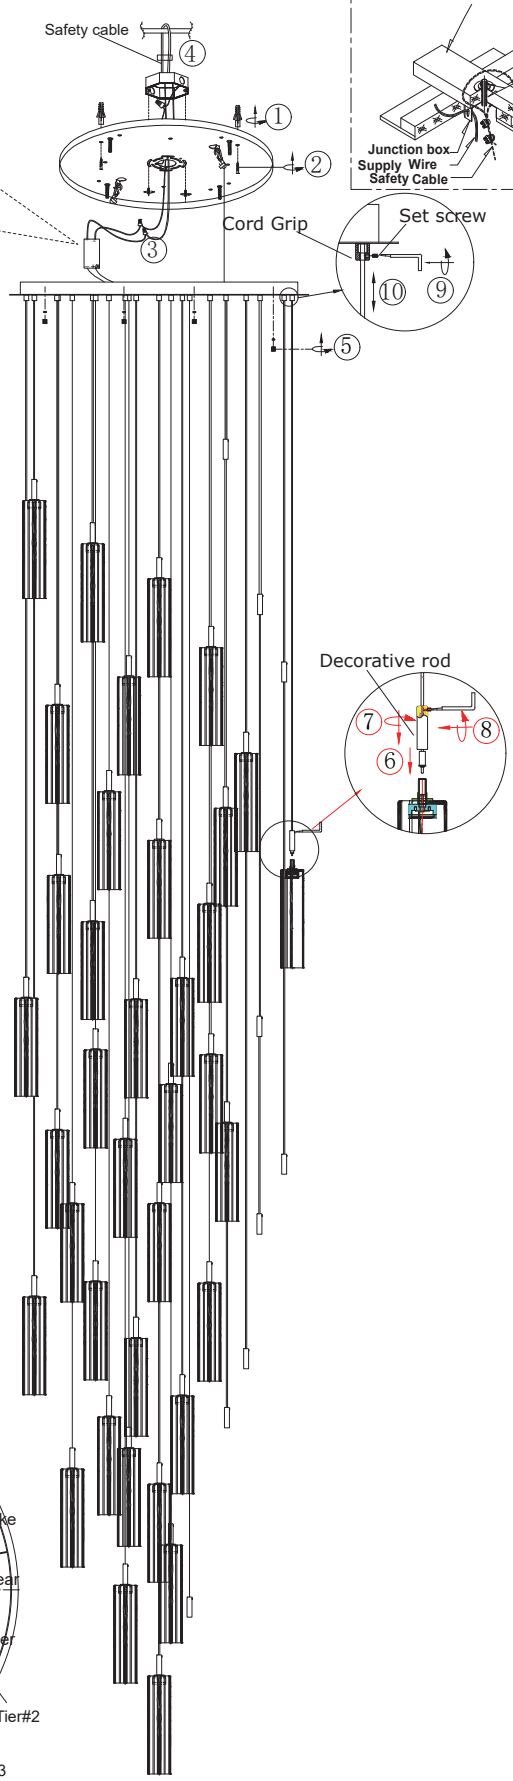

WARNING:

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

Intertek

You will need 46-3 Watts Intergrated LED module (included)

This fixture is Damp rated

How to install

1. Each fixture wire is pre-set at the fixed length for shipping. If the wire needs to be adjusted at the desired length , please loosen the set screw on the side of the cord grip underneath the canopy. Once the adjustment is completed, please tighten the set screw and cut the excess wire and re-connect the wires onto the driver as shown on the wiring diagram.

2. Place the mounting plate over the outlet box and mark four points on the ceiling at the same distance as between the holes on the mounting plate.

3. Drill the holes at the marked points and insert the anchors into it.

4. Attach the mounting plate onto the outlet box and secure with the anchor screws.

5. Raise the canopy up over the mounting plate and hang it onto the tab on the mounting bracket as shown using three cable wires on the side of canopy. Feed the fixture wire and center safety cable through the mounting plate. Run the safety cable through the outlet box and wrap it around the ceiling joist and secure the cable with the locking device.

6. Make electrical connections from the supply wires to the drivers as shown. Once all wire connections are completed, raise the canopy to cover the outlet box and secure it with the cap nuts. Leave power to the fixture OFF until all glass heads have been fully installed.

7. Install the glass onto the wire as illustrated on the glass distribution diagram. Here is how to install the glass: Loosen the set screw on the decorative rod at the end of the wire.Slide the decorative rod upward to expose the male plug. Insert it into the female plug on the top of the glass. Twist the decorative tube to secure it onto the glass. Then tighten the set screw.

Glass Sets

1.16 pcs	Clear Glass(D2.75 x H12”)
2.15 pcs	Smoke Glass(D2.75 x H12”)
3.15 pcs	Amber Glass(D2.75 x H12”)

Glass Distribution

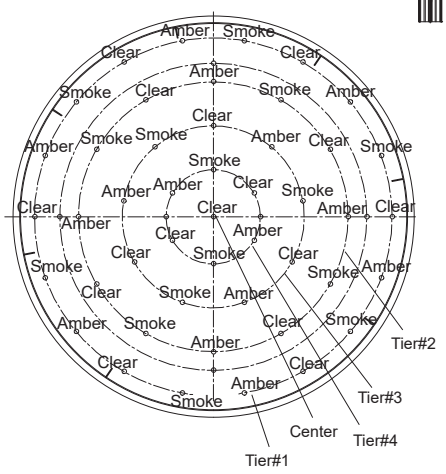

⚠ WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA LIGHTING

Crystorama.com

ASSEMBLY INSTRUCTION MODEL# ADD-423-AG-AU

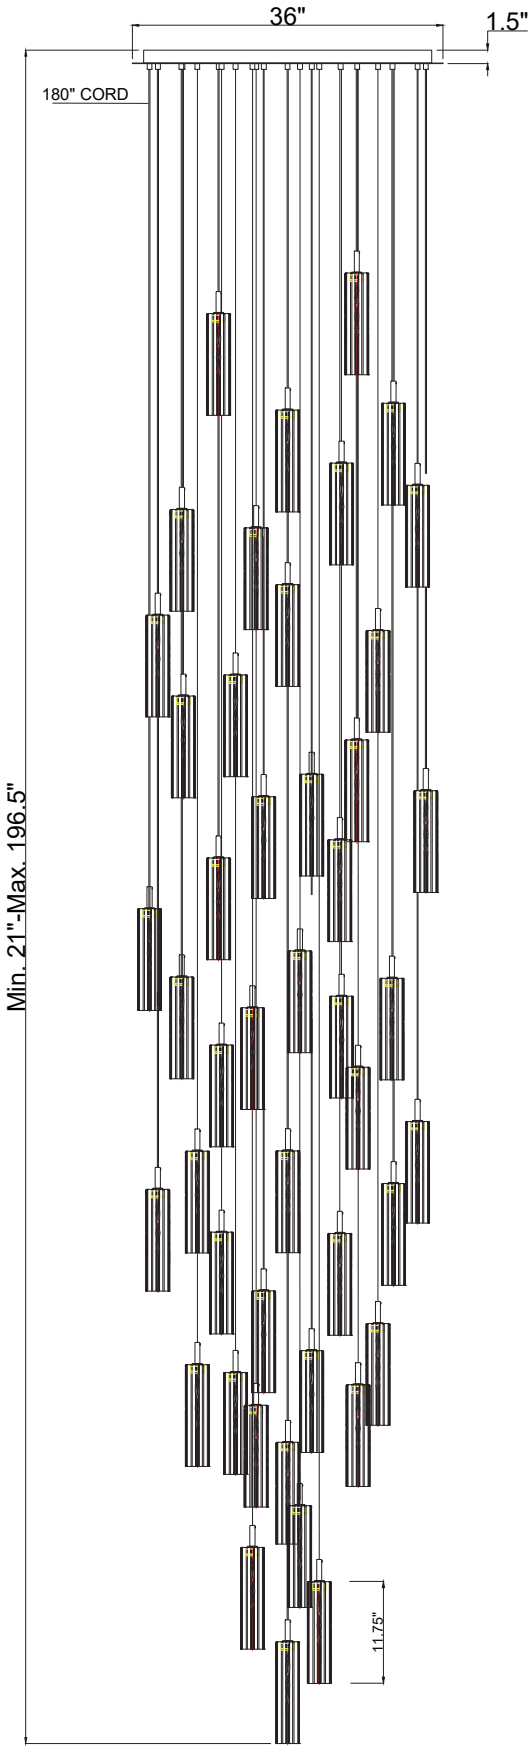

⚠ WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA LIGHTING

Crystorama.com

ASSEMBLY INSTRUCTION MODEL# ADD-423-AG-AU

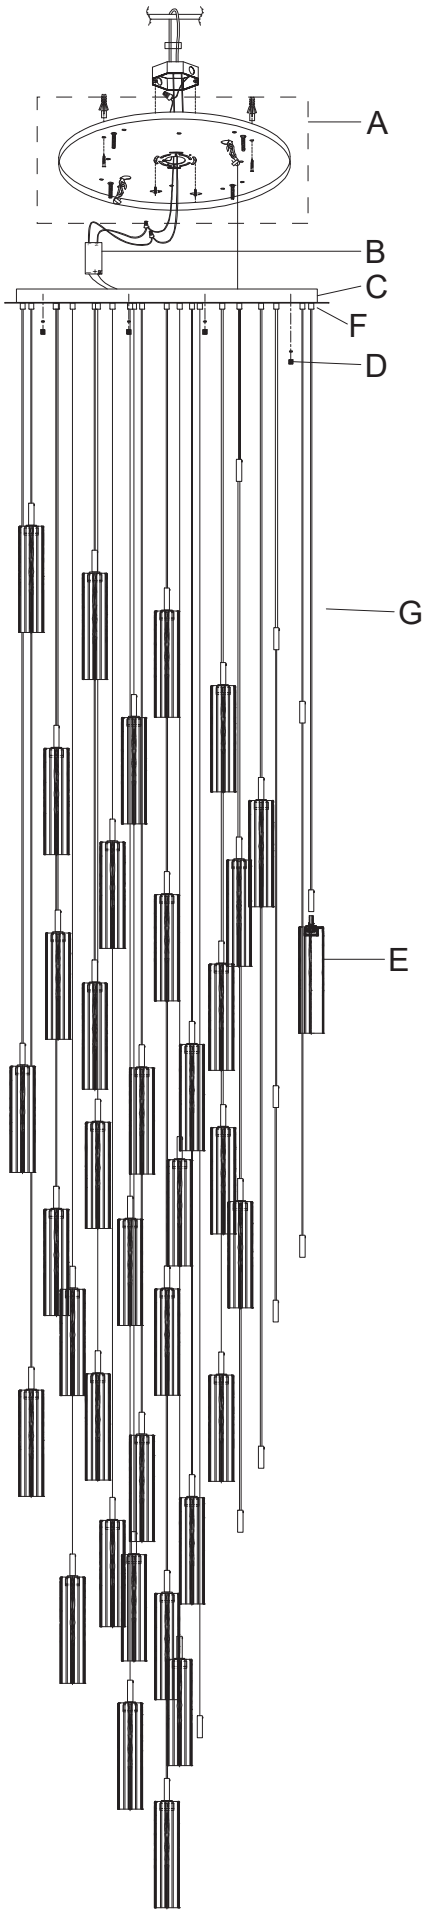

Part Number

Part Numbers

A. Mounting hardware includes
(4)-Mounting screws
(1)-Mounting plate
(4)-Hex.nuts
(12)-Wood screws
(12)-Plastic anchors

B. (3)-LED driver
(XBN423DRIVER)

C. (1)-Canopy,D36 x H1.5”
(XBN423AGCAN36IN)

D. (4)-Cap nuts
(XBN415AGCAP)

E. (16)-Clear glass(D2.75 x H12”)
(XBN405AGCLGLA12IN)
(15)-Smoke glass(D2.75 x H12”)
(XBN405AGSMGLA12IN)
(15)-Amber glass(D2.75 x H12”)
(XBN405AGAMGLA12IN)

F. (46)-Cord grip
(XBN405AGGRIP)

G. (46)-Cord
(XBN423AGCORD)