


ASSEMBLY INSTRUCTIONS

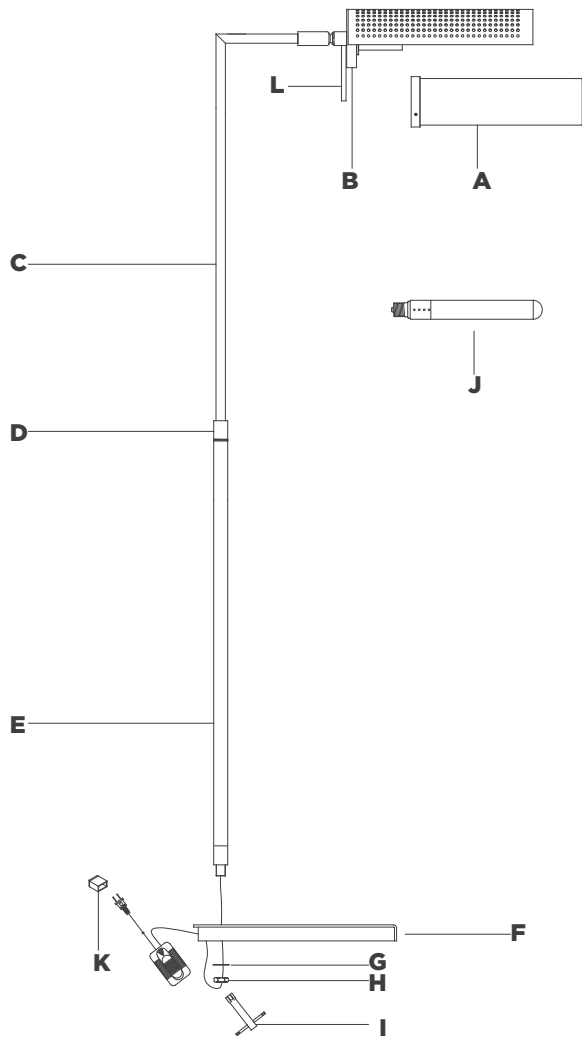

Precision Pharmacy Floor Lamp

Item # KW1062

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Install rod (E) to base (F) and secure with lock washer (G) and hex nut (H) using provided wrench (I).
3. Loosen check ring (D), then adjust rod (C) to desired height. Tighten check ring (D).

NOTE: Help feed electrical cord in or out of lamp for smoother adjustment.

4. Swing handle (L) to adjust shade to desired angle.
5. Thread shade (A) to socket (B).
6. Install light bulb (J) into the socket.
7. Remove protective cover (K) from plug.
8. Plug into electrical outlet and test the fixture.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.