


ASSEMBLY INSTRUCTIONS

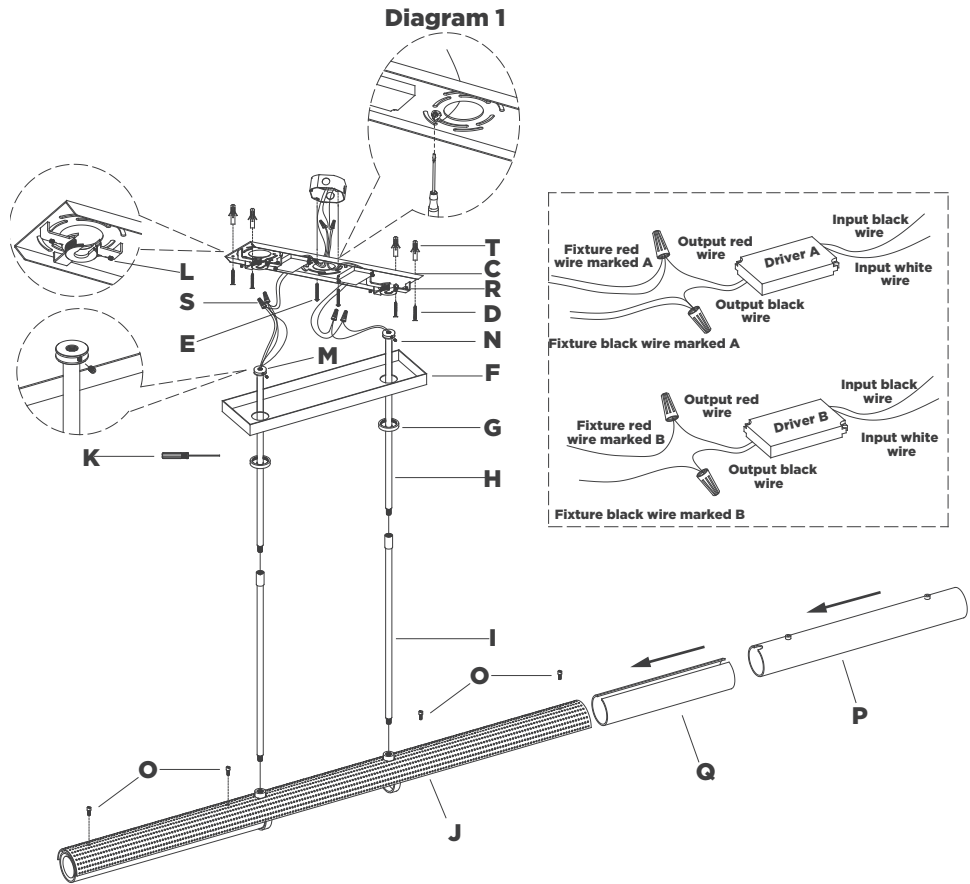

Precision Large Linear Chandelier

Item # KW5225

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.


TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Wire Cutters	Hammer	Pencil
Drill		

- Carefully remove all parts from the box. Place on a clean, soft surface.
- Remove canopy **(F)** from mounting plate **(C)** by removing collar rings **(G)**.
- Using mounting plate **(C)** as a guide, line up with the junction box and mark anchor positions.
- Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(Y)** into the holes using a hammer.
- Install mounting plate **(C)** to the junction box and secure with mounting screws **(E)**, then secure wood screws **(D)** to anchors **(T)**.
- Feed electrical wires through bottom rods **(I)** and connect to shade **(J)**.
- Continue feeding wires through collar rings **(G)**, canopy **(F)**, and top rods **(H)**.
- Holding fixture upright, slide collar rings **(G)** and canopy **(F)** down bottom rods **(I)** and rest on fixture body **(J)**. Then connect top rods **(H)** to bottom rods **(I)**. Tighten set screw **(N)** using provided screwdriver **(K)**.

NOTE: Slide components down slowly to avoid damage.

ASSEMBLY INSTRUCTIONS

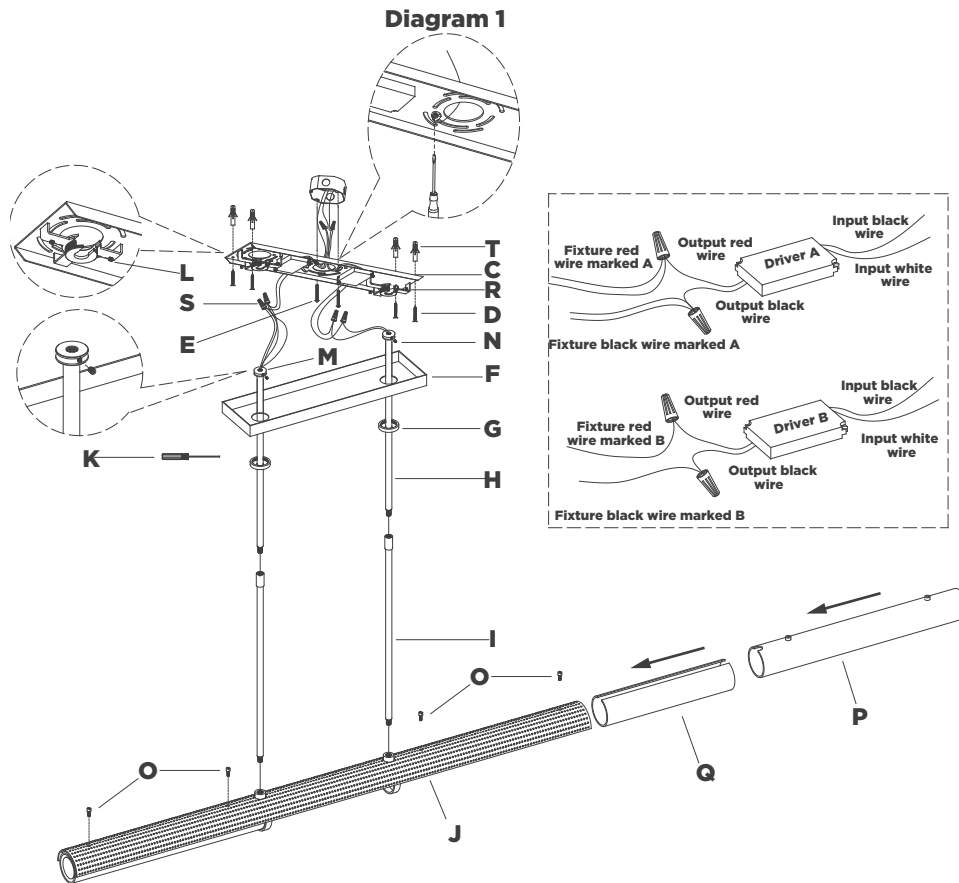

Precision Large Linear Chandelier


Item # KW5225

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

9. Loosen set screws **(L)** using provided screwdriver **(K)**, then hang fan mount **(M)** to mounting brackets **(R)**. Tighten set screws **(L)** using provided screwdriver **(K)**.
10. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
11. Connect fixture neutral wires (black) to the driver output neutral wires (black) using wire nut **(S)**.
12. Connect fixture hot wires (red) to the driver output hot wires (red) using wire nut **(S)**.
NOTE: Power is supplied by two drivers. Make sure to connect fixture wires (A) to driver wires (A). Repeat steps for driver (B).
13. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 1). Tighten.
NOTE: It is imperative that the fixture is grounded.
14. Connect driver input neutral wire (white) to the supply neutral wire (usually white) using wire nut **(S)**.
15. Connect driver input hot wire (black) to the supply hot wire (usually black) using wire nut **(S)**.
CAUTION: Do not reverse the hot and neutral connections.
16. Make sure all wire connections are tight, then carefully tuck into the junction box.
17. Install canopy **(F)** to mounting plate **(C)** and secure with collar rings **(G)**.

ASSEMBLY INSTRUCTIONS

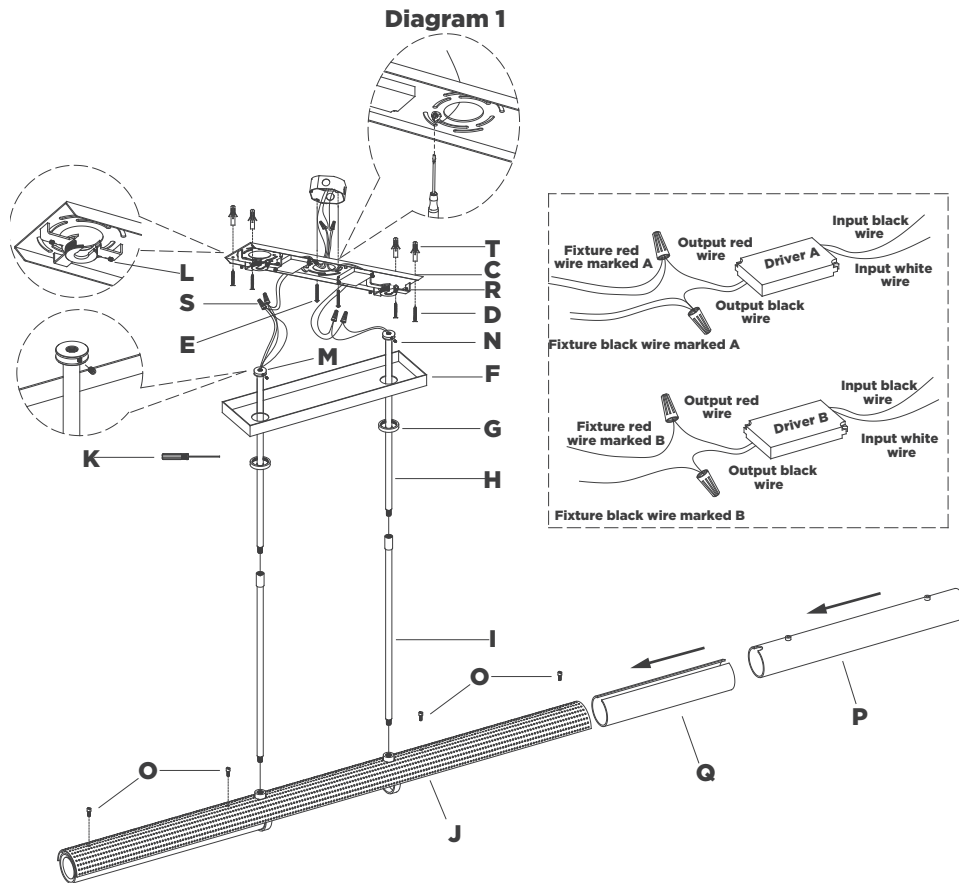

Precision Large Linear Chandelier

Item # KW5225

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

18. To install glass tube **(Q)**, align groove facing up and insert to middle of body by gently sliding in from the side.
19. Install glass tubes **(P)** on either side, with groove on end of glass facing inward. Secure with thumbscrews **(O)**.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.