

### BERWICK™/ BOULEVARD™ VESSEL LAVATORY FITTING

Installation Instructions 7430.15X 7431.15X

Certified to comply with ANSI A112.18.1M M968642 REV. 1.5 (3/16)


Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

#### **Recommended Tools**









#### **CARE INSTRUCTIONS:**

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

MOUNTING SURFACE


DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

#### **INSTALL LAVATORY FAUCET**

**CAUTION** Turn off hot and cold water supplies before beginning.

- Seat SEAL (1) into under side of ESCUTCHEON RING (2).
- Seat ESCUTCHEON RING (2) with collar facing up into groove in faucet base.
- Feed FAUCET SUPPLIES (3) and MOUNTING SHANK (4) through ESCUTCHEON RING (2) and hole in mounting surface.
- From below, install SUPPORT PLATE (7) GASKET (5) and MOUNTING NUT (6) onto SHANK (4). Secure Faucet with MOUNTING NUT (6). Before final tightening, adjust Faucet so that it is centered. Tighten MOUNTING NUT (7) to complete mounting.

Note: For thick deck installations, the SUPPORT PLATE (7) can be omitted.

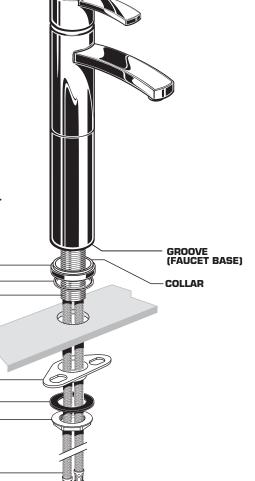


### 2 MAKE WATER SUPPLY CONNECTIONS

- Turn off hot and cold water supplies before beginning.
- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on fitting supplies are 3/8" compression. Connect left supply to Hot and right supply to the Cold wall supply. Use adjustable wrench to tighten connections. Do not over tighten.
- Faucet supplies are 28" long from faucet base.


Note: If additional supply length is required, installer must purchase additional parts separately.


Important: If SUPPLY HOSES (1, 2) are too long, loop as illustrated to avoid kinking. Figure A.

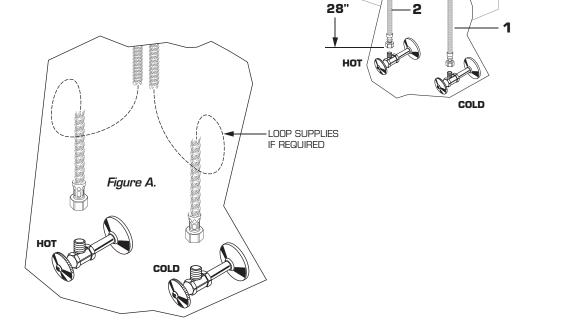

# 3 DRAIN INSTALLATION

- Apply a bead of PUTTY to underside of DRAIN BODY FLANGE (1).
- Feed DRAIN BODY (1) down through lavatory.
- Assembly GASKET (2) WASHER (3) and LOCKNUT (4) onto DRAIN BODY (1). Tighten LOCKNUT (4) firmly.
- Assembly TAILPIECE (5) to DRAIN BODY (1).

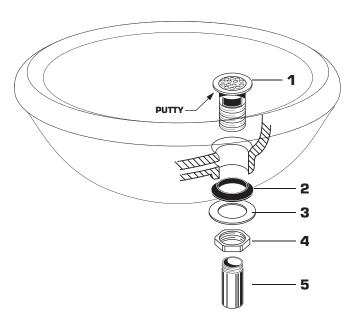

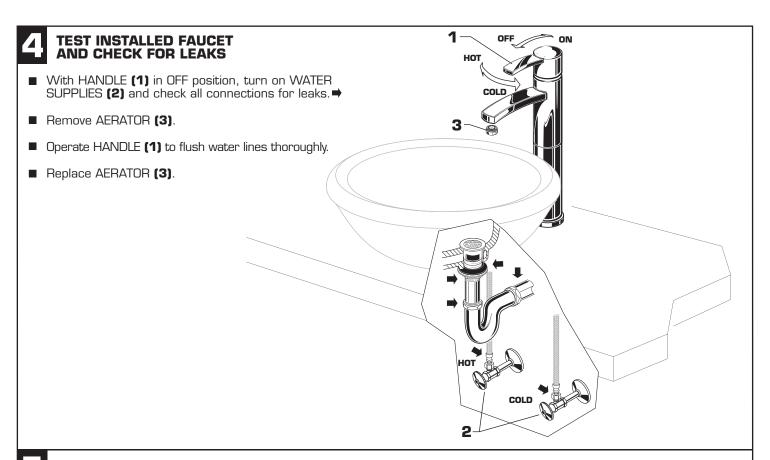



### **ADJUST HOT LIMIT SAFETY STOP**

By restricting HANDLE rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT SAFETY STOP (9) reduces risk of accidental scalding. To lower the maximum hot water temperature of your faucet, all you need to do is adjust the setting on the HOT LIMIT SAFETY STOP (9).

Note: The HOT LIMIT SAFETY STOP (9) is set at the neutral setting from the factory. Fig. A.

■ To adjust HOT LIMIT SAFETY STOP:


■ Remove HANDLE ASSEMBLY (3), CAP (4) and CARTRIDGE NUT (5).

■ Set the CARTRIDGE STEM (10) to the OFF position.

■ Lift up the HOT LIMIT SAFETY STOP (9).

■ Place the HOT LIMIT SAFETY STOP (9) in the desired GRAY SHADED AREA (11) to limit the hot water. Fig. B.

Reinstall CARTRIDGE NUT (5), CAP (4) and HANDLE ASSEMBLY (3).

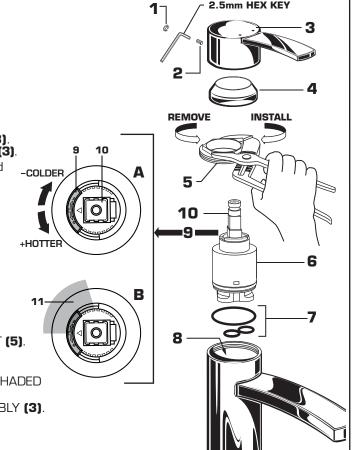

# **CARE INSTRUCTIONS:**

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A **CLOTH WITH A COARSE SURFACE.** M968642 REV. 1.5 (3/16)

# American Standard

### **BERWICK™/ BOULEVARD™ VESSEL FITTING**


**MODEL NUMBER** 

7430.15X / 7431.15X



M962828-YYY0A HANDLE KIT





M951472-0070A **CARTRIDGE** 

Replace the "YYY" with appropriate finish code

CHROME	002
SATIN NICKEL	295



M961634-0070A

MOUNTING KIT

HOT LINE FOR HELP

**TAILPIECE** 

For toll-free information and answers to your questions, call: 1 (800) 442-1902

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST

IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) Weekdays 8:00 a.m. to 7:00 p.m. EST IN MEXICO 01-800-839-1200



015025-YYY0A DRAIN COMPLETE

PART OF LIXIL

M968642 REV. 1.5 (3/16)

Product names listed herein are trademarks of AS America, Inc. ©2016