

# Storage with Style Pilaster System

## Installation Instructions for the SWS-PIL Series

### **IMPORTANT:**

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.


### **CUSTOMER SERVICE:**

Toll free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.

### **TOOLS NECESSARY:**

Screw gun or Phillips screwdriver and tape measure. NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

### **PARTS IDENTIFICATION:**

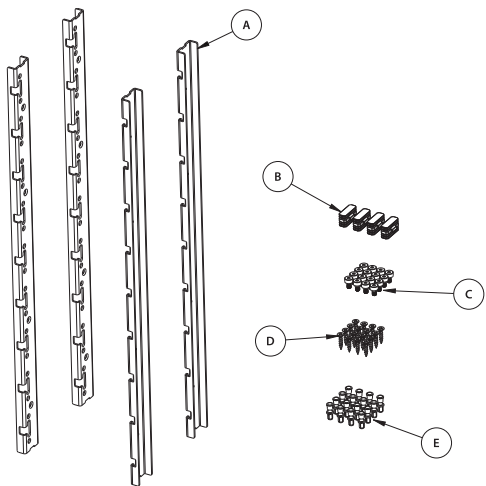

A	Pilaster Pole	4 pcs
B	Pilaster Extension Connect Clip	4 pcs
C	Shoulder Screw, M4 x 6 mm long, 3 mm Shoulder	16 pcs
D	Phillips flat Head Wood Screw, #8 x 1"	16 pcs
E	Nylon Push Rivet	16 pcs

### STEP 1




Place front pilaster poles (A) approximately 1 3/4" behind face frame using #8 x 1" wood screws (4x each)

### STEP 2




Measure 15" between front and back poles and attach back pilaster poles (A) using #8 x 1" wood screws (4x each)

### STEP 3

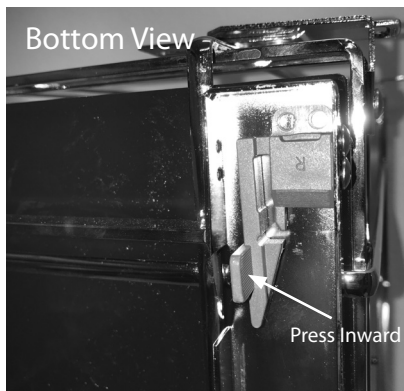


Detach basket from slide assembly by pressing the clip release

**STEP 4**

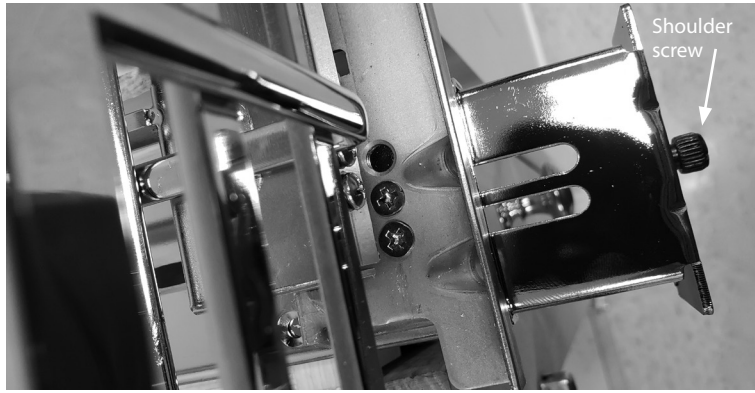

Attach shoulder screws M4 x 6 mm (C) on 4 extendable arms

**STEP 5**

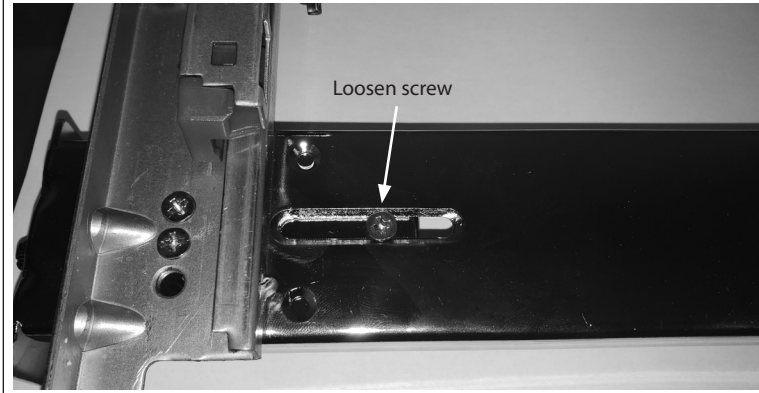


Loosen 4 screws holding extendable arms

**STEP 6**



Extend arms to correct width based on cabinet width and connect shoulder screws with pilaster poles

**STEP 7**

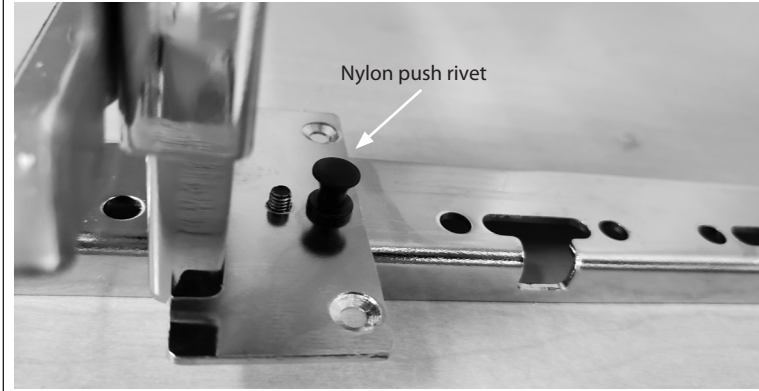

Ensure slide assembly is seated properly and insert nylon push rivets as shown

Ensure proper clearance of hinges on doors and tighten screws holding extendable arms

Reconnect basket to slide assembly