
INSTALLATION INSTRUCTIONS THERMO HAND EXTENSION #2-260

For Valve Model No: I-540




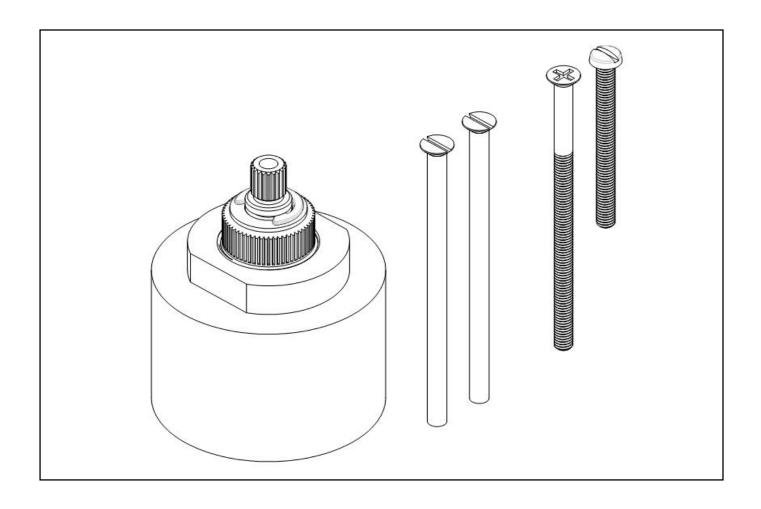

2001 CARNEGIE AVE, SANTA ANA CA 92705 (949) 417-5207 WWW.NEWPORTBRASS.COM

Installing Extension kit (See Fig. I)

- I. Remove and discard mud cover and screws. (Not shown)
- 2. Slide Sleeve over Thermo Valve with grooved Notch to topside.
- 3. Slide Extension Sleeve-Asm onto Thermo Valve.
- 4. Secure Extension Sleeve-Asm with M4 Screw.
- 5. Slide Cover Plate with gasket over Sleeve/Extension Sleeve-Asm and attach with Decorative Screws provided.

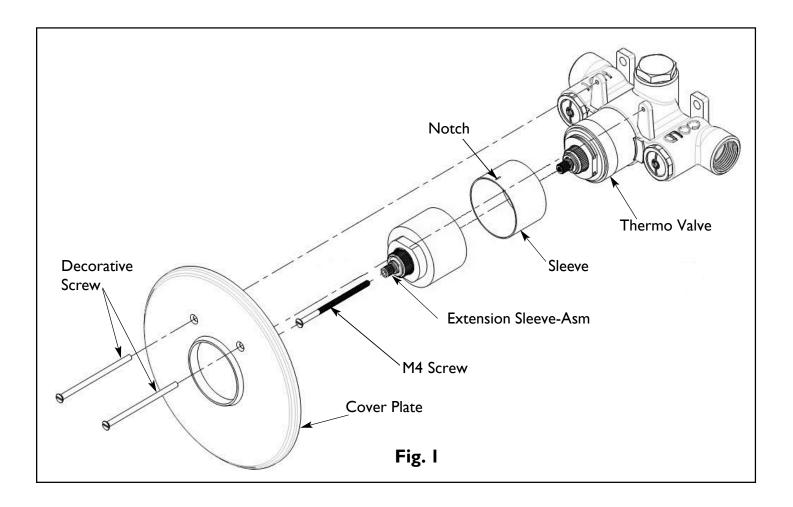

NWP-2-260 07/23/18

Installing Trim

- 1. Orient and position Stop Ring as shown below (See Fig. 2).
- 2. Open shut-off valve and verify water temperature at outlet device by using a thermometer. NOTE: The safe and factory set temperature is 100°F. If the temperature needs to be adjusted follow step 3, otherwise skip to step 4.
- 3. Rotate Cartridge Stem to adjust temperature: (clockwise = colder or counterclockwise = hotter)
- 4. Remove the M4 Screw from the Extension Sleeve-Asm.
- 5. Place Bonnet onto Cartridge Stem with Red Button (100°F) positioned straight up and inline with Notch on the Sleeve (See Fig. 3).
- 6. Secure Bonnet in place using previously removed M4 Screw.
- 7. Place decorative Handle onto Cartridge Stem and secure with set screw.

