

CODE NUMBER

3913905

DESCRIPTION

0.5 gpf, Polished Chrome Finish, Single Flush, 10.75 L Dimension, Metal Index Push Button, Royal® Exposed Manual Specialty Urinal Foot Pedal Flushometer.

DETAILS

Flush Volume: 0.5 gpf (1.9 Lpf)Finish: Polished Chrome (CP)

• Valve: Diaphragm

Valve Body Material: Semi-red Brass

• Fixture Type: Urinal

Fixture Connection: Top spud
Rough-In Dimension: 10" (254mm)
Spud Coupling: ¾4" (19mm)

• Supply Pipe: 1" (25mm)

• L Dimension: 10 3/4" (273mm) (10-3/4-LDIM)

• Push Button: Metal Index (L)

FEATURES

Quiet, Concealed, Diaphragm Type, Rough Brass Urinal Flushometer for either

- PERMEX® Synthetic Rubber Diaphragm with Dual Filtered Fixed Bypass
- Metal Non-Hold-Open Foot Pedal with Triple Seal Handle Packing
- Vacuum Breaker
- 3/4" Female I.P.S. Union Outlet
- 3/4" Female Inlet Adapter, Elbow Flush Connection and Spud Coupling for 3/4" Concealed Back Spud
- Non-Hold-Open Foot Pedal, Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation
- Diaphragm, Handle Packing and Vacuum Breaker to be molded from PERMEX® Rubber Compound for Chloramine Resistance
- 3/4" I.P.S. Wheel Handle Bak-Chek® Angle Stop



COMPLIANCES & CERTIFICATIONS



BREEAI



GREE

(BAA Compliant, BREEAM Water Credit, cUPC Certified, Green Globes Water Credit)

RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

VALVE OPERATING PRESSURE (FLOWING)

15-80 PSI (103-552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

DOWNLOADS

- Royal/Regal/Crown Naval Foot Pedal Flushometer Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Royal Flushometers Repair and Maintenance Guide
- Additional Downloads

NOTES


All information contained within this document subject to change without notice.

Looking for other variations of the ROYAL 320 product? View the general spec sheet with all options.

Find a compatible urinal for this flushometer.
Find a compatible water closet for this flushometer.



ROUGH-IN

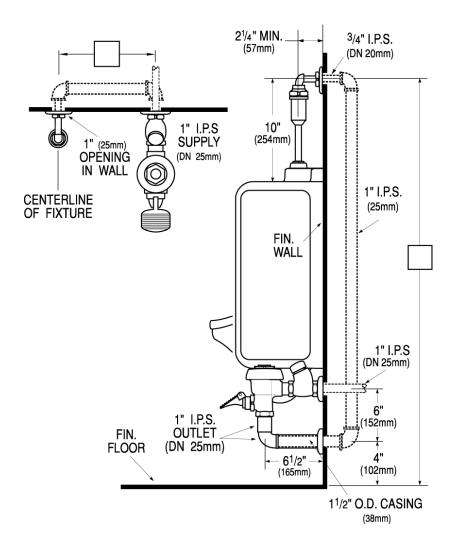

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com