


FLOOR MOUNT TUB FILLER INSTALLATION INSTRUCTIONS

MODEL : 1400-4262, 1400-4263 | 500-4262, 500-4263

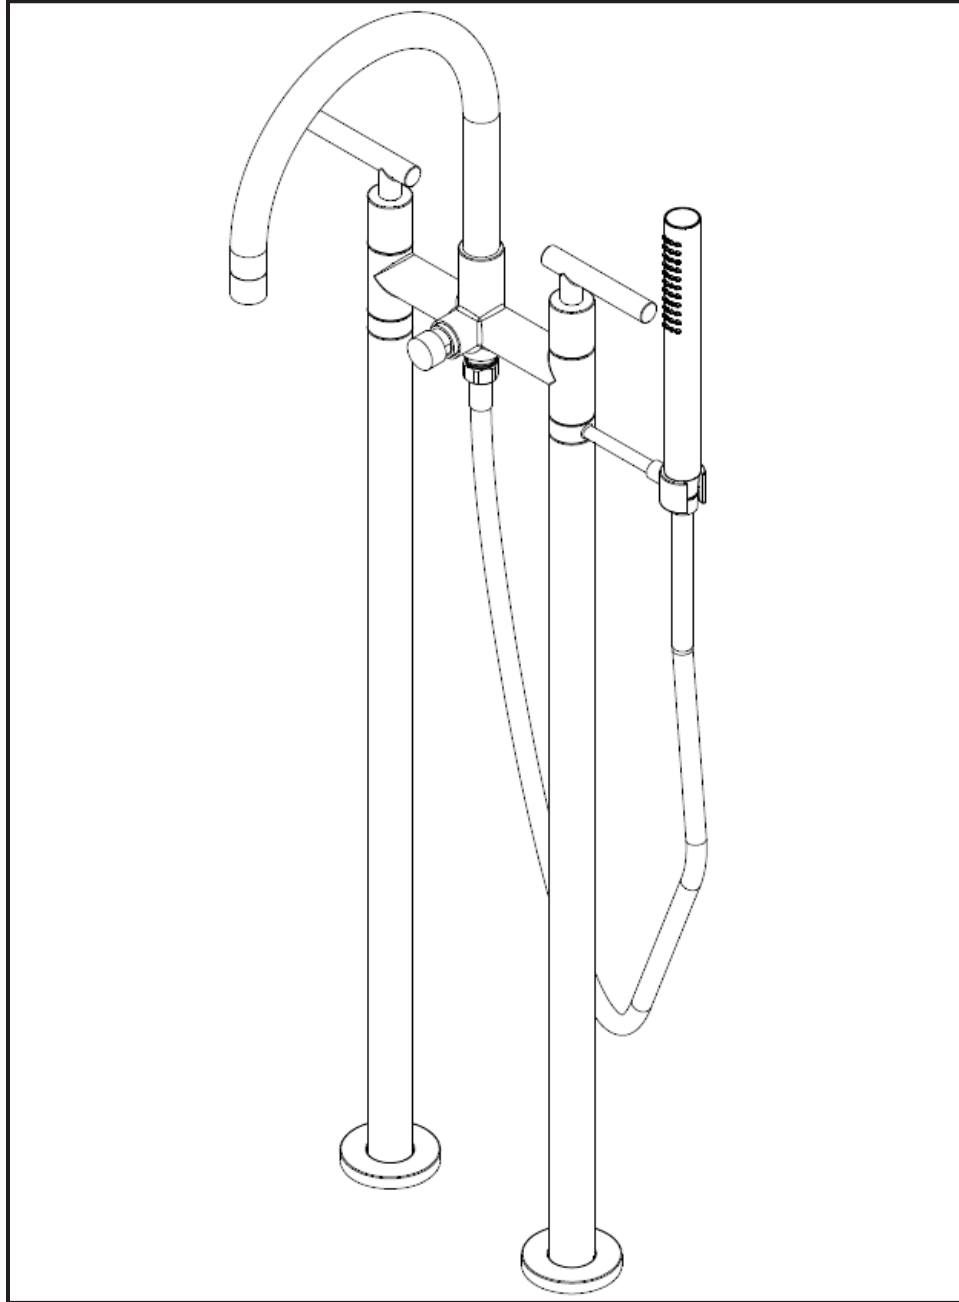

NEWPORT BRASS

2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207





We recommended installation of this product by a Professional Plumbing Contractor

Note: The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.

Note: Required rough I-469 must be installed prior to installing the tub filler.

Tub Filler Installation

1. Slide a FLANGE (1) onto each of the tub filler risers. See **Figure 1**.
2. Remove the QUICK CONNECT ADAPTERS (2) from the rough by removing all six #8-32 SCREWS (3) with a 9/64" hex. See **Figure 2**
3. Attach the QUICK CONNECT ADAPTERS (2) to the two 3/4" NPT tub filler inlets. See **Figure 3**.
4. Insert the tub filler with attached QUICK CONNECT ADAPTERS (2) into the rough and tighten the six #8-32 SCREWS (3) to secure the quick connect adapters. See **Figure 4**.
5. Pressurize the tub filler with both handles in the off position to check for leaks.

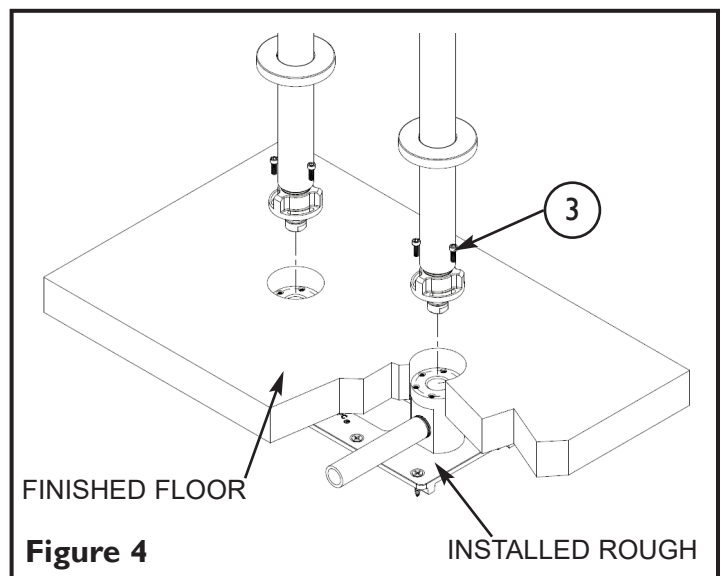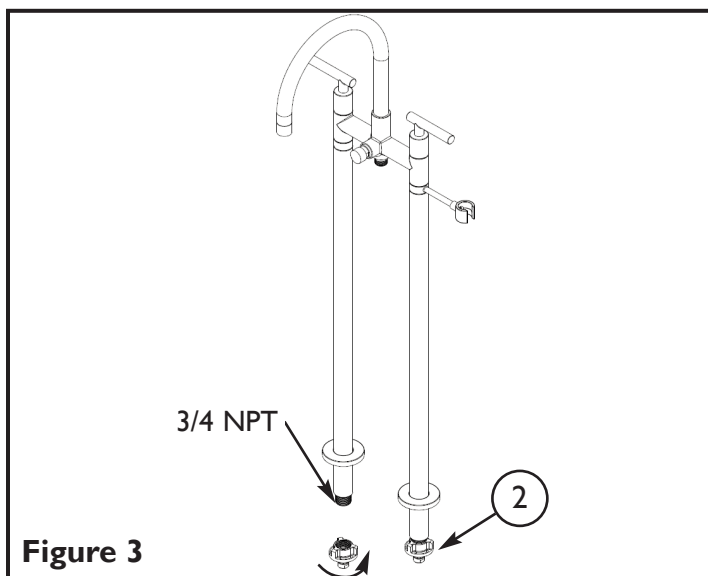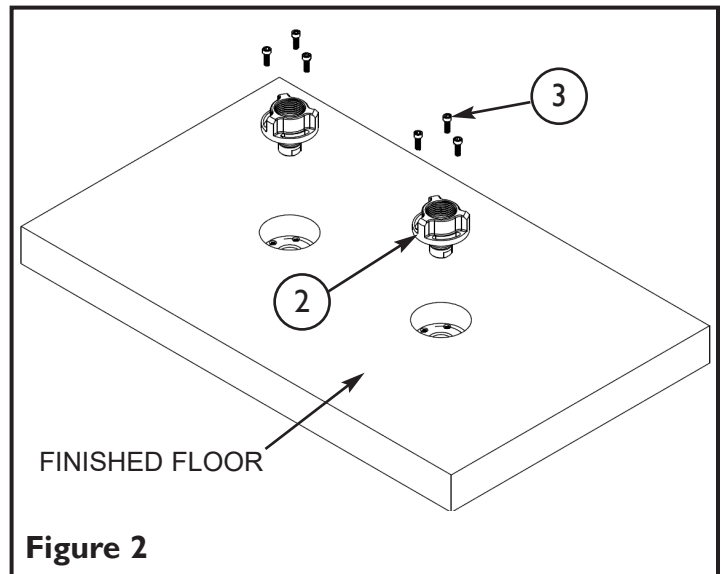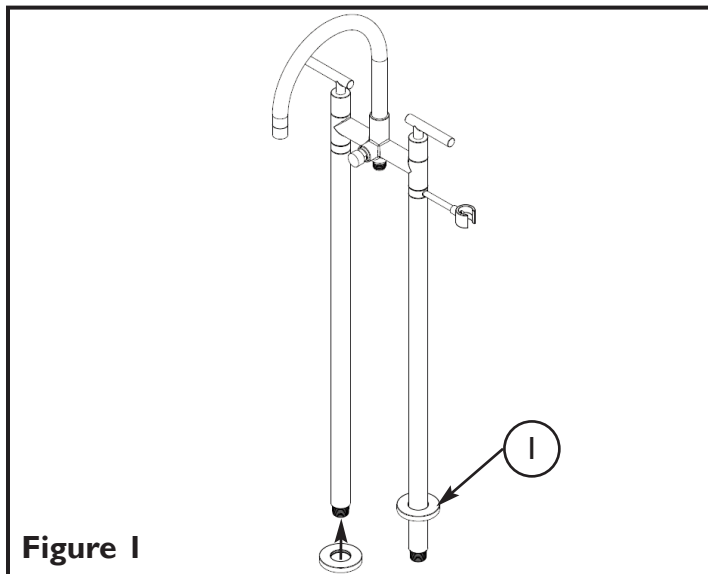

Tub Filler Installation (continued)

6. Orientate the SPOUT (4) as desired and lock in place by tightening the SET SCREW (5) on the back side of the spout. See **Figure 5**.
7. Attach the hand shower spray HOSE (6), remove the FLOW STRAIGHTENER (7) assembly, and flush the tub filler. Divert the flow to the HOSE (6) to flush as well. See **Figure 6**.
8. Reinstall FLOW STRAIGHTENER (7) assembly and attach HANDSHOWER (8) to HOSE (6). See **Figure 6**.

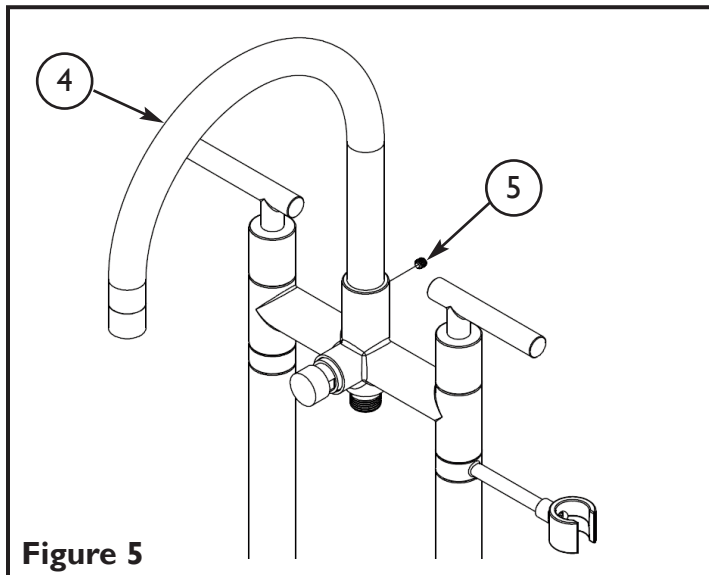


Figure 5





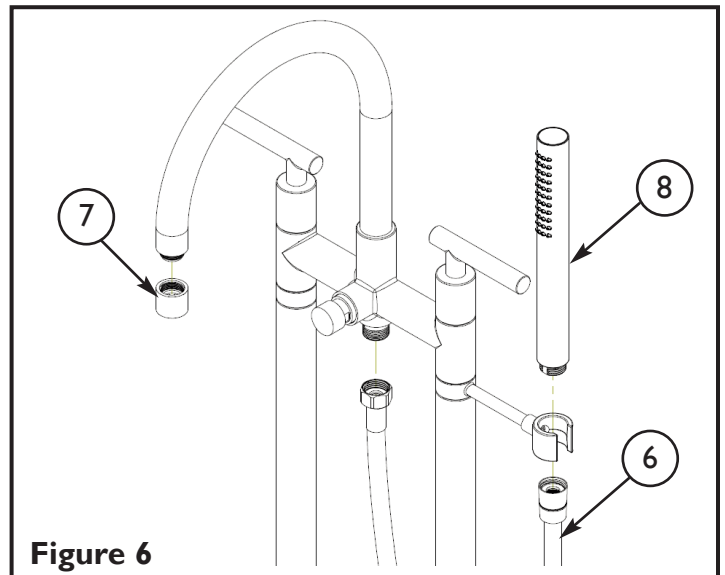


Figure 6

Hand shower holder adjustment about the axis of the riser.

Note: Following steps are to adjust the hand shower holder about the axis of the riser.



1. A 7/16 hex key is required.
2. Unscrew the HANDLE (9) assembly on the side with the HOLDER (10). See **Figure 7**.
3. Remove the CARTRIDGE (11). See **Figure 7**.
4. Using the 7/16 hex key loosen the visible NUT (12) just enough to move the HOLDER (10). Do not fully back out the nut. See **Figure 8**.
5. Adjust the HOLDER (10) to the desired location and tighten the NUT (12) to lock it in place. See **Figure 9**.
6. Install the CARTRIDGE (11) and torque to 15-20 ft-lbs. See **Figure 10**.
7. Install the HANDLE (9) assembly. See **Figure 10**.

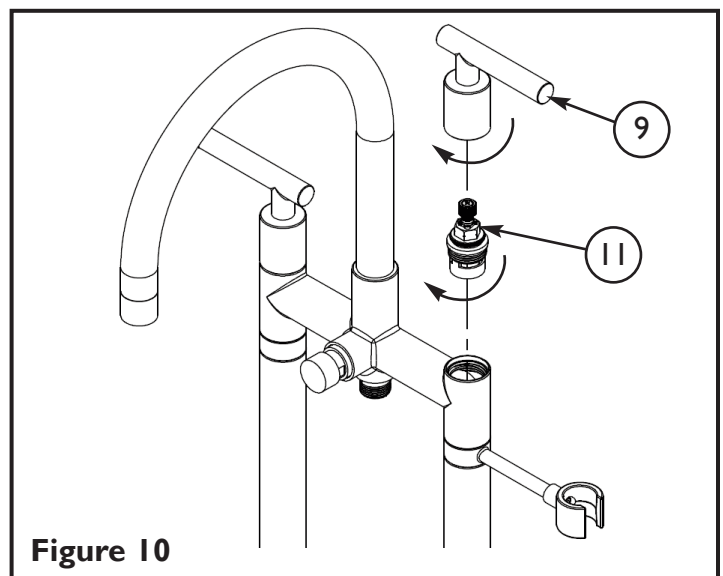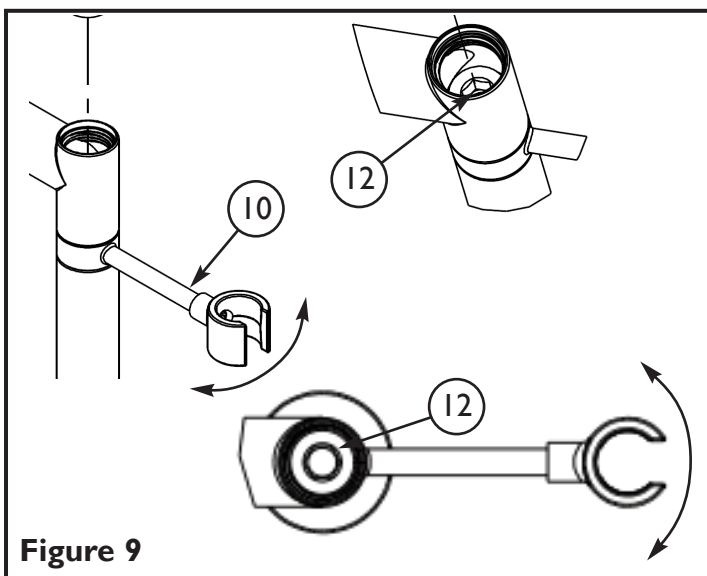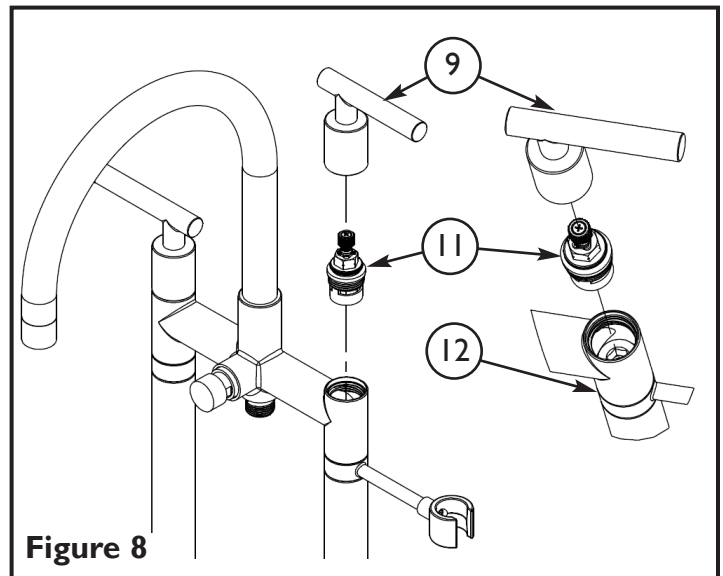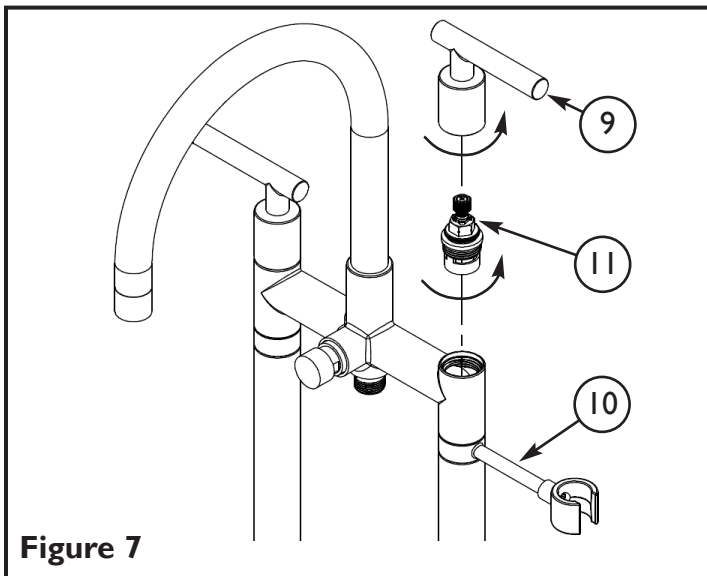

Hand shower holder adjustment about the axis of the holder arm.

Note: Following steps are to adjust the hand shower holder about the axis of the holder arm.

1. 5/32 hex key needed; T handle recommended.
2. Slowly loosen the SCREW (13) visible inside the HOLDER (10) until it is possible to move the HOLDER (10). See **Figure 11**. Notches should be felt as the HOLDER (10) is rotated. See **Figure 12**. If HOLDER (10) moves but notches aren't felt, the screw was loosen too much.
3. Once HOLDER (10) is at desired location, tighten the 5/32 hex SCREW (13). See **Figure 12**.

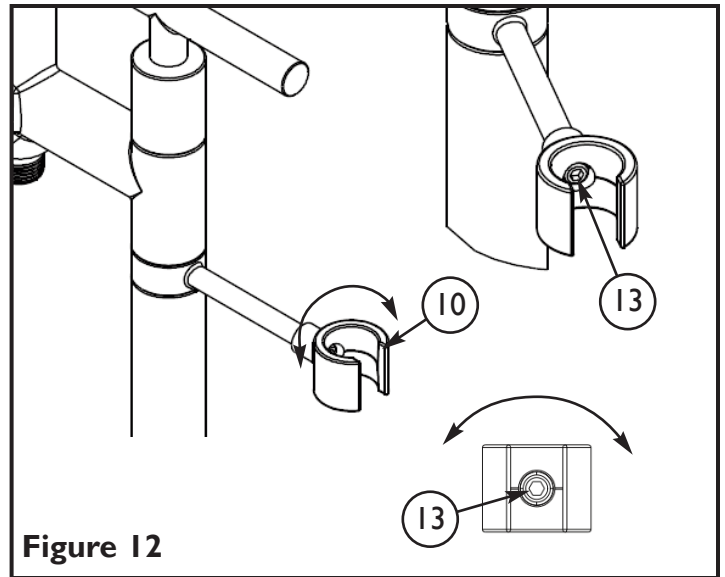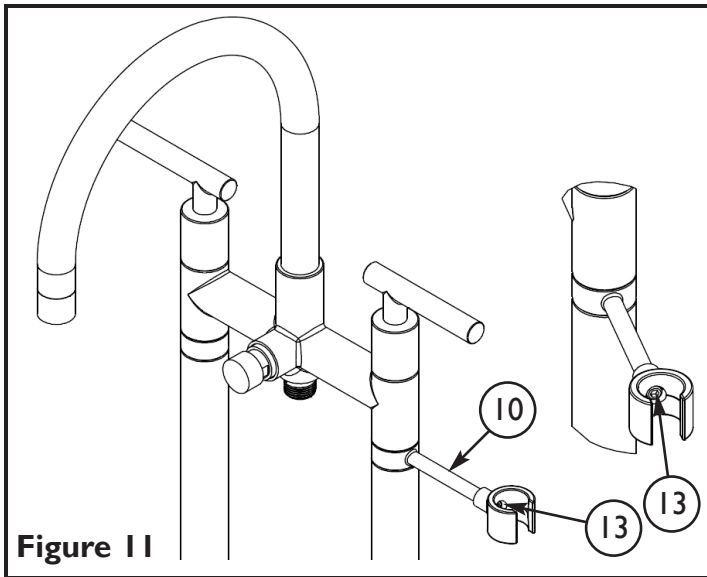

Disclaimer Regarding Newport Brass Free-Standing Tub Filler

To conform to local codes and ordinances, all Newport Brass Free-Standing Tub Filler products should be used in concert with an ASSE 1070 approved tempering valve to reduce the hot water supply to a safe temperature not exceeding 110°F (43°C).

Important: Water temperatures in excess 110°F (43°C) are dangerous and may cause scalding, severe injury or death!

Tempering valve should be installed and adjusted by a licensed contractor per the valve manufacturer installation instruction, and in accordance with local codes and ordinances. In general, key characteristics to ensure a tempering valve to work best with Newport Brass Free-Standing Tub Filler products shall be as follows:

- Tempering valve should be used prior to the Free-Standing Tub Filler product to reduce the hot water supply to a safe temperature.
- To ensure sufficient water flow through the tub spout, tempering valve should be capable to handle a flow rate of 6 GPM or more.
- Tempering valve should include inlet filter washer and check valves in both the hot and cold water inlets to protect against cross flow.

Pressure - Temperature - Flow Rate

Minimum Operating Pressure:	20 psi [140KPa]
Maximum Operating Pressure:	125 psi [860 KPa]
Maximum Test Pressure:	500 psi [3450 KPa]
Maximum Hot Water Temperature:	180 °F / 80 °C

***Note:** Valve should be installed in a location where it is accessible for cleaning or service. Due to the effects of various water conditions, periodic verification of outlet water temperature is required.

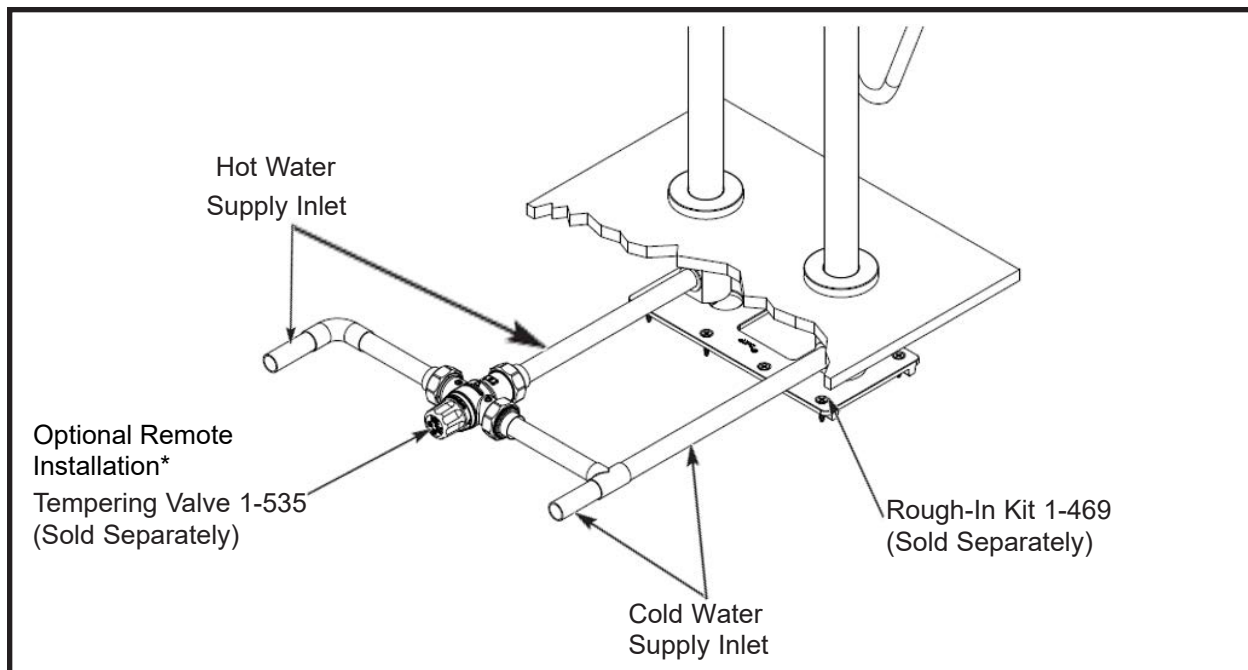


Figure 13